


# MOVITRAC® 31C Frequency Inverters

Operating Instructions

Edition 05/96

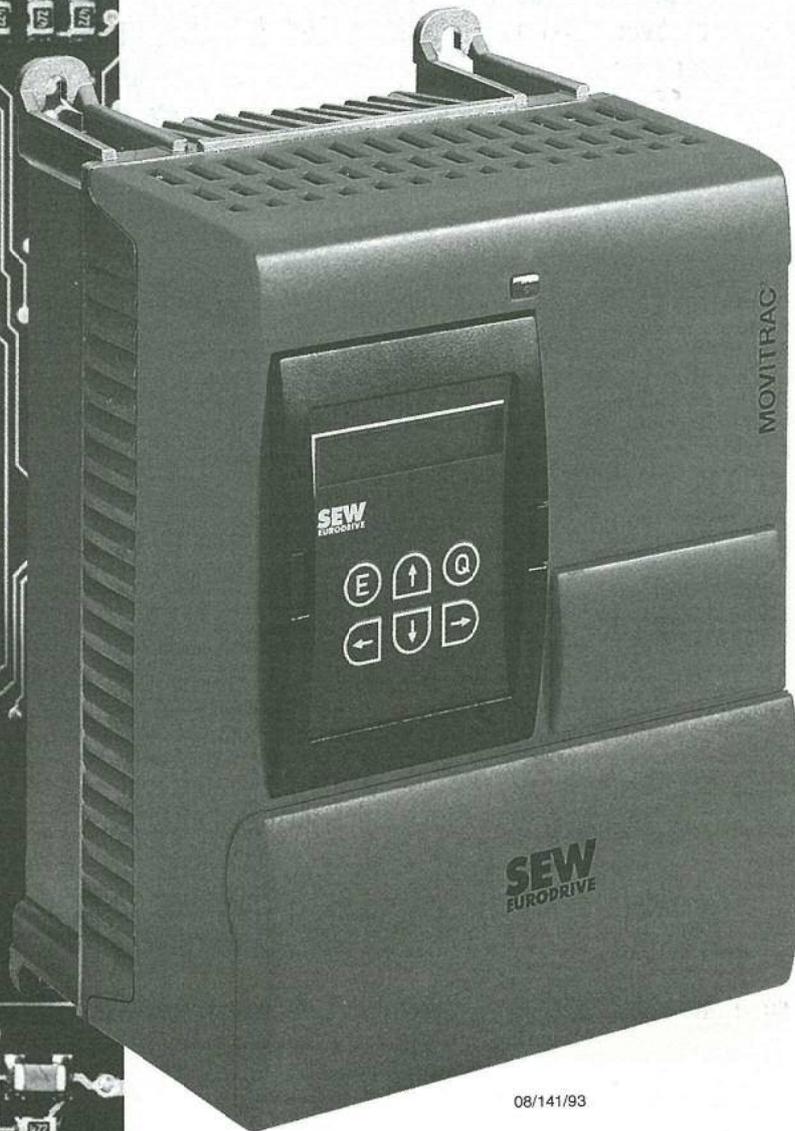

CE

08/141/93

0922 9019 / 05 96



# SEW EURODRIVE

	Page
<b>Inverter Design</b> .....	<b>2</b>
<b>1 General Notes</b> .....	<b>6</b>
<b>2 Safety Notes</b> .....	<b>8</b>
<b>3 Electrical Installation</b> .....	<b>9</b>
3.1 Installation instructions .....	9
3.2 Installation for electromagnetic compatibility (EMC) .....	11
3.3 Wiring diagram for the basic unit .....	12
3.4 Functional description of the basic unit terminals .....	13
3.5 Connecting the brake rectifier .....	14
3.6 Connecting the USS 11A (RS-232 serial interface) .....	14
3.7 Connecting the UST 11A (RS-485 serial interface) .....	14
3.8 Wiring diagram and terminal description for the FEA 31C option .....	15
3.9 Wiring diagram and terminal description for the FEN 31C option (FRN..) .....	15
<b>4 Commissioning</b> .....	<b>16</b>
4.1 Commissioning instructions for standard applications in brief .....	16
4.2 Setting sequence of parameters on commissioning .....	17
4.2.1 General instructions .....	17
4.2.2 Presettings for all the following examples .....	18
4.2.3 Commissioning examples .....	19
4.3 Menu structure .....	21
4.4 Complete parameter list .....	22
4.5 Commissioning the FRN 31C/FEN 31C speed controller .....	26
<b>5 Operation and Service</b> .....	<b>27</b>
5.1 Operating displays .....	27
5.1.1 LED display .....	27
5.1.2 Displays on FBG 31C keypad .....	27
5.1.3 Coded displays .....	28
5.2 Operating conditions / Switch-off response .....	28
5.3 Fault information .....	29
5.4 List of fault signals and fault causes .....	30
5.5 Fault signals programmable to binary outputs .....	31
5.6 SEW Electronics Service .....	31
<b>6 Technical Data</b> .....	<b>32</b>
6.1 Basic units .....	32
6.2 FEA 31C option .....	35
6.3 FEN 31C option .....	35
<b>Service and spare parts</b> .....	<b>36</b>

**For further technical information as well as selection notes please refer to the MOVITRAC® 31C Frequency Inverter Catalogue, publication no. 09229116.**

For further information about the synchronous operation control option and the fieldbus options (PROFIBUS AND INTERBUS-S) please refer to the respective user manuals.