

Honeywell

**UDC 2300
Universal Digital Controller
Limit Control Model
Product Manual**

51-52-25-74A

6/99

TotalPlant

Contents

1	INTRODUCTION	1
1.1	Overview	1
1.2	CE Conformity (Europe)	2
2	INSTALLATION.....	3
2.1	Overview	3
2.2	Model Number Interpretation.....	5
2.3	Preliminary Checks	6
2.4	Limit Control and Alarm Relay Contact Information.....	8
2.5	Mounting	9
2.6	Wiring.....	11
2.7	Wiring Diagrams	12
2.8	Limit Control Application Diagram	17
3	INITIAL START-UP	19
3.1	Overview	19
3.2	Powering Up the Controller	19
3.3	Operator Interface and Key Functions	20
3.4	Key Error Message.....	20
4	CONFIGURATION	21
4.1	Overview	21
4.2	Configuration Prompt Hierarchy.....	22
4.3	Configuration Procedure	23
4.4	Lock Set Up Group.....	24
4.5	Limit Set Up Group.....	25
4.6	Input 1 Set Up Group	26
4.7	Options Set Up Group	28
4.8	Communications Set Up Group.....	29
4.9	Alarms Set Up Group	31
4.10	Configuration Record Sheet.....	33

5	OPERATING THE LIMIT CONTROLLER	35
5.1	Overview	35
5.2	Operator Interface.....	36
5.3	Entering a Security Code.....	36
5.4	Lockout Feature.....	37
5.5	Monitoring Your Limit Controller	38
5.6	Operating Your Limit Controller	40
5.7	Alarm Setpoints	42
6	INPUT CALIBRATION	43
6.1	Overview	43
6.2	Minimum and Maximum Range Values	44
6.3	Preliminary Information	45
6.4	Input 1 Set Up Wiring	47
6.5	Input 1 Calibration Procedure	49
6.6	Restore Factory Calibration	51
7	TROUBLESHOOTING/SERVICE	53
7.1	Overview	53
7.2	Troubleshooting Aids.....	54
7.3	Power-up Tests	56
7.4	Status Tests.....	56
7.5	Background Tests	57
7.6	Controller Failure Symptoms	58
7.7	Troubleshooting Procedures.....	59
8	PARTS LIST.....	62
8.1	Exploded View	62