

CNC SYSTEMS

**OSP500L-G**  
**OSP5000L-G**

---

---

**SPECIAL FUNCTIONS MANUAL**  
(8th Edition)

## TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 1 PROGRAMMABLE TAILSTOCK POSITIONING FUNCTION (Tow-Along System).....	1
1-1. OVERVIEW .....	1
1-2. SETTING INITIAL POSITION .....	2
1-3. MANUAL POSITIONING OF TAILSTOCK BODY .....	3
1-4. TAILSTOCK POSITIONING BY PROGRAMMED COMMANDS .....	4
1-5. PARAMETER SETTING .....	6
1-6. SYSTEM PARAMETERS .....	14
1-7. ALARM MESSAGES .....	15
 SECTION 2 SPINDLE ORIENTATION .....	 19
2-1. OVERVIEW OF SPINDLE ORIENTATION FUNCTION .....	19
2-2. PROGRAMMING FORMAT .....	19
2-3. DATA SETTING .....	21
2-4. M19 COMMAND PROGRAMMED WHILE SPINDLE IS AT A STILL .....	22
2-5. PROGRAM EXAMPLES .....	24
2-6. REMARKS .....	25
 SECTION 3 CYCLE TIME CALCULATION FUNCTION .....	 26
3-1. OVERVIEW OF CYCLE TIME CALCULATION FUNCTION .....	26
3-2. CYCLE TIME CALCULATION PROCESS .....	26
3-3. CRT DISPLAY OF MACHINE TIME DATA .....	27
3-4. OPERATION PROCEDURE .....	28
 SECTION 4 OVERLOAD DETECTION .....	 29
4-1. OVERVIEW OF OVERLOAD DETECTION FUNCTION .....	29
4-2. SETTING MONITOR RANGE .....	29
4-3. PROGRAM EXAMPLES .....	29
4-3-1. For One-Saddle Model .....	29
4-3-2. For Two-Saddle Model .....	30
4-4. SETTING LIMIT CURRENT VALUE .....	30
4-5. SETTING DETECTION TIME .....	31
4-6. SETTING ALARM LEVEL .....	31
4-7. ALARM MESSAGES .....	32

	<u>PAGE</u>
SECTION 5 GAUGING DATA PRINT OUT FUNCTION .....	34
5-1. OVERVIEW OF GAUGING DATA PRINT OUT FUNCTION .....	34
5-2. CONDITIONS FOR DATA PRINT OUT .....	35
5-3. CONTENTS OF PRINT OUT DATA .....	36
5-4. PRINT OUT FORMAT .....	37
5-5. INTERFACE FOR RP-8 $\emptyset$ LINK .....	38
5-5-1. Parameter Setting at OSP5 $\emptyset\emptyset$ L-G/OSP5 $\emptyset\emptyset$ L-G .....	38
5-5-2. Switch Setting at RP-8 $\emptyset$ .....	4 $\emptyset$
5-5-3. Connection of RP-8 $\emptyset$ to OSP5 $\emptyset\emptyset$ L-G .....	41
SECTION 6 ALARM DATA PRINT OUT FUNCTION .....	44
6-1. OVERVIEW OF ALARM DATA PRINT OUT FUNCTION .....	44
6-2. CONDITIONS FOR DATA PRINT OUT .....	45
6-3. CONTENTS OF PRINT OUT DATA .....	46
6-4. PRINT OUT FORMAT .....	46
SECTION 7 SLIDE HOLD FUNCTION DURING THREAD CUTTING CYCLE (G34, G35, G112, G113) .....	47
7-1. OVERVIEW .....	47
7-2. PROGRAM EXAMPLES .....	48
7-3. PRECAUTIONS .....	51
SECTION 8 COORDINATE CONVERSION .....	53
8-1. OVERVIEW OF COORDINATE CONVERSION FUNCTION .....	53
8-2. CONVERSION METHOD .....	54
8-3. PROGRAM EXAMPLES .....	54
8-4. PRECAUTIONS .....	55
8-5. ALARM MESSAGES .....	56
SECTION 9 PITCH ERROR COMPENSATION FOR X, Z AND C AXES .....	57
9-1. OVERVIEW OF PITCH ERROR COMPENSATION FUNCTION .....	57
9-2. DATA SETTING .....	57
9-2-1. Data to be Set .....	57
9-2-2. Data Setting Procedure .....	59
9-2-3. Data Setting Range .....	63
9-2-4. Compensation Data Backup Function .....	63
9-2-5. Alarm Messages .....	65
9-3. COMPENSATION METHOD .....	66

	<u>PAGE</u>
SECTION 10 NC OPERATION MONITOR .....	67
10-1. OVERVIEW OF NC OPERATION MONITOR .....	67
10-2. CONTENTS OF DISPLAY AND COUNT-UP CONDITIONS OF NC WORK COUNTER .....	67
10-3. ALARM CONDITIONS FOR NC WORK COUNTER .....	68
10-4. CONTENTS OF NC HOUR METER DISPLAY AND COUNT-UP CONDITIONS .....	69
10-5. ALARM CONDITIONS OF NC HOUR METER .....	70
 SECTION 11 DNC-A .....	 72
11-1. FUNCTIONS .....	72
11-2. OPERATING PROCEDURES .....	73
11-2-1. Downloading an NC Program (File) .....	75
11-2-2. Unloading an NC Program (File) .....	76
11-3. SETTING UP NC OPTIONAL PARAMETERS .....	77
11-3-1. NC Optional Parameter (Bit) No. 2 .....	77
11-3-2. NC Optional Parameter (Word) No. 46 .....	77
11-3-3. NC Optional Parameter (Bit) No. 1 .....	77
11-3-4. NC Optional Parameter (Bit) Nos. 12 - 16 .....	78
11-3-5. RS-232C Interface Parameters for CN0: (TT:) through CN4: .....	78
11-4. ERROR MESSAGES .....	78
11-5. SPECIFICATIONS .....	79
11-5-1. Data Formats .....	79
11-5-2. Example RS-232C Interface Connections and Timing Charts .....	82
 SECTION 12 PROGRAM LENGTH EXPANSION SPECIFICATION .....	 92
12-1. OVERVIEW OF PROGRAM LENGTH EXPANSION SPECIFICATION .....	92
12-2. PRECAUTIONS .....	92
 SECTION 13 AUTOMATIC ANY-ANGLE CHAMFERING .....	 93
13-1. OVERVIEW OF AUTOMATIC ANY-ANGLE CHAMFERING FUNCTION .....	93
13-2. C-CHAMFERING (G75) .....	93
13-3. R-CHAMFERING (G76) .....	94
13-4. PRECAUTIONS .....	95
13-5. ALARM MESSAGES .....	96
 SECTION 14 EDIT INTERLOCK FUNCTION .....	 99
14-1. OVERVIEW OF EDIT INTERLOCK FUNCTION .....	99

	<u>PAGE</u>
SECTION 15 CYCLE START DISABLING FUNCTION USING PRESET COUNTER .....	100
15-1. OVERVIEW OF CYCLE START DISABLING FUNCTION USING PRESET COUNTER ....	100
SECTION 16 OPERATION END LAMP/ALARM LAMP .....	101
16-1. OPERATION END LAMP .....	101
16-2. ALARM LAMP .....	101
SECTION 17 CYCLE TIME REDUCTION FUNCTION .....	102
17-1. IGNORING SPINDLE ROTATION ANSWER, M63 .....	102
17-2. IGNORING ANSWER SIGNALS FOR M CODES OTHER THAN SPINDLE ROTATION CONTROL, M64 .....	103
17-3. IGNORING ANSWER SIGNALS FOR T COMMANDS, M65 .....	104
17-4. FREE TURRET INDEXING POSITION, M66 .....	104
SECTION 18 TOOL LIFE MANAGEMENT .....	105
18-1. OVERVIEW OF TOOL LIFE MANAGEMENT FUNCTION .....	105
18-2. SELECTION OF TOOL LIFE CONDITIONS .....	106
18-3. SETTING TOOL LIFE DATA AND DISPLAY OF TOOL LIFE DATA .....	107
18-3-1. Data Setting Procedure .....	107
18-3-2. Initializing Tool Life Control Table .....	113
18-4. PROGRAMMING .....	115
18-5. PROCESSING AFTER ALL SPARE TOOLS HAVE BEEN USED UP .....	116
18-6. ALARM MESSAGES .....	117
SECTION 19 PHASE MATCHING FUNCTION FOR THREAD CUTTING OPERATIONS .....	118
19-1. OVERVIEW OF FUNCTION .....	118
19-2. M CODES .....	118
19-3. OPERATIONS .....	119
19-4. PRECAUTIONS .....	126
SECTION 20 CALENDAR TIMER .....	128
20-1. OVERVIEW OF CALENDAR TIMER .....	128
20-2. WARMING UP PROGRAM .....	128
20-3. ALARM MESSAGES .....	129
20-4. M CODES FOR CANCELING INTERLOCK FUNCTIONS .....	129

SECTION 21	EXTERNAL PROGRAM SELECTION A (PUSHBUTTON TYPE) .....	130
21-1.	OVERVIEW OF EXTERNAL PROGRAM SELECTION A .....	130
21-2.	MAIN AND SCHEDULE PROGRAM SELECTION .....	130
21-3.	INHIBITING THE SELECTION OF THE SAME PROGRAM .....	130
21-4.	PROGRAM SELECTION .....	130
21-5.	PRECAUTIONS .....	131
21-6.	ALARM MESSAGES .....	131
SECTION 22	EXTERNAL PROGRAM SELECTION B (ROTARY SWITCH TYPE) .....	132
22-1.	OVERVIEW OF EXTERNAL PROGRAM SELECTION B .....	132
22-2.	MAIN AND SCHEDULE PROGRAM SELECTION .....	132
22-3.	INHIBITING THE SELECTION OF THE SAME PROGRAM .....	132
22-4.	PROGRAM SELECTION .....	132
22-5.	PRECAUTIONS .....	133
22-6.	ALARM MESSAGES .....	133
22-7.	LAMP INDICATION .....	134
22-8.	CYCLE START INTERLOCK USING PART PROGRAM .....	134
SECTION 23	EXTERNAL PROGRAM SELECTION C (BCD SYSTEM) .....	136
23-1.	OVERVIEW OF EXTERNAL PROGRAM SELECTION C .....	136
23-2.	TYPES OF SELECTABLE PROGRAMS .....	136
23-3.	MAIN AND SCHEDULE PROGRAM SELECTION .....	136
23-4.	INHIBITING THE SELECTION OF THE SAME PROGRAM .....	136
23-5.	PRECAUTIONS .....	137
23-6.	ALARM MESSAGES .....	138
SECTION 24	CHUCK OPEN/CLOSE BY M CODES .....	139
24-1.	M CODES USED FOR CHUCK OPEN/CLOSE .....	139
24-2.	ALARM MESSAGES .....	139
SECTION 25	CANCELLATION OF CHUCK OPEN/CLOSE INTERLOCK BY M CODES .....	141
25-1.	OVERVIEW OF CHUCK OPEN/CLOSE INTERLOCK CANCEL FUNCTION .....	141
25-2.	M CODES USED FOR CANCELING CHUCK OPEN/CLOSE INTERLOCK .....	141
SECTION 26	CHUCK HIGH/LOW PRESSURE SELECTION BY M CODES .....	142
26-1.	OVERVIEW OF CHUCK HIGH/LOW PRESSURE SELECTION FUNCTION .....	142
26-2.	M CODES USED FOR CHUCK HIGH/LOW PRESSURE SELECTION .....	142

	<u>PAGE</u>
SECTION 27 INDEX CHUCK .....	143
27-1. M CODES USED FOR INDEXING THE INDEX CHUCK .....	143
27-2. ALARM MESSAGES .....	143
SECTION 28 LONG STROKE CHUCKING FUNCTION .....	144
28-1. OVERVIEW OF LONG STROKE CHUCKING FUNCTION .....	144
28-2. M CODES USED FOR LONG STROKE CHUCKING FUNCTION .....	144
28-3. DESIGNATION OF CHUCK OPEN POSITION .....	144
28-4. CHUCK OPEN AND CLOSE OPERATION BY M83 AND M84 .....	145
28-5. ALARM MESSAGES .....	145
SECTION 29 CHUCKING ERROR DETECTION .....	146
29-1. OVERVIEW OF CHUCKING ERROR DETECTION FUNCTION .....	146
29-2. M CODE USED FOR DETECTING CHUCKING ERROR .....	146
29-3. PARAMETER SETTING .....	146
29-4. ALARM MESSAGE .....	146
SECTION 30 TAILSTOCK SPINDLE ADVANCE/RETRACTION BY M CODES (WITH CONFORMATION LIMIT SWITCHES) .....	147
30-1. M CODES USED FOR CHUCK OPEN/CLOSE .....	147
30-2. ALARM MESSAGES .....	147
SECTION 31 TAILSTOCK SPINDLE HIGH/LOW THRUST SELECTION BY M CODES .....	149
31-1. OVERVIEW OF TAILSTOCK SPINDLE HIGH/LOW THRUST SELECTION .....	149
31-2. M CODES USED FOR SELECTING HIGH/LOW TAILSTOCK SPINDLE THRUST .....	149
SECTION 32 CANCELLATION OF CENTER WORK INTERLOCK BY M CODES .....	150
32-1. OVERVIEW OF CENTER WORK MODE CANCELLATION FUNCTION .....	150
32-2. M CODES USED FOR CANCELING CENTER WORK INTERLOCK .....	150
32-3. PROGRAM EXAMPLE .....	150
SECTION 33 TAILSTOCK SPINDLE ADVANCE/RETRACTION DURING SPINDLE ROTATION BY M CODES .....	151
33-1. OVERVIEW OF TAILSTOCK SPINDLE ADVANCE/RETRACTION DURING SPINDLE ROTATION .....	151
33-2. M CODES USED FOR ADVANCING AND RETRACTING TAILSTOCK SPINDLE .....	151
33-3. PROGRAM EXAMPLE .....	151

	<u>PAGE</u>
SECTION 34 WORK RESET CLAMP/UNCLAMP AND ADVANCE RETRACT BY M CODES .....	152
34-1. M CODES USED FOR CLAMPING/UNCLAMPING AND ADVANCING/RETRACTING WORK RESET .....	152
SECTION 35 AUTOMATIC FRONT DOOR OPEN/CLOSE BY M CODES .....	153
35-1. OVERVIEW OF AUTOMATIC FRONT DOOR OPEN/CLOSE FUNCTION .....	153
35-2. M CODES USED FOR OPENING/CLOSING THE FRONT DOOR .....	153
SECTION 36 FRONT DOOR INTERLOCK FUNCTION .....	154
36-1. OVERVIEW OF FRONT DOOR INTERLOCK FUNCTION .....	154
36-2. DESCRIPTION OF OPERATION .....	154
36-3. ALARM MESSAGES .....	154
SECTION 37 UNLOADER ADVANCE/RETRACT BY M CODES .....	155
37-1. M CODES USED FOR ADVANCING/RETRACTING UNLOADER .....	155
SECTION 38 LOADER INTERLOCK FUNCTION .....	156
38-1. M CODES USED FOR LOADER OPERATIONS .....	156
38-2. DESCRIPTION OF LOADER CONTROL SWITCH .....	156
38-3. ALARM MESSAGES .....	156
SECTION 39 SWING ARM LOADER ADVANCING/RETRACTING BY M CODES .....	157
39-1. M CODES USED FOR ADVANCING/RETRACTING SWING ARM LOADER .....	157
SECTION 40 WORK CATCHER ADVANCING/RETRACTING BY M CODES .....	158
40-1. M CODES USED FOR ADVANCING/RETRACTING WORK CATCHER .....	158
SECTION 41 BAR FEEDER INTERLOCK FUNCTION .....	159
41-1. M CODES USED FOR OPERATING BAR FEEDER .....	159
41-2. TOP-CUT .....	159
41-3. EXAMPLE OF PROGRAM .....	159
41-4. ALARM MESSAGES .....	160
41-5. AUTOMATIC CONTINUOUS OPERATION .....	160

	<u>PAGE</u>
SECTION 42 SPARE AIR BLOWER FUNCTION .....	161
42-1. M CODES USED FOR TURNING ON/OFF SPARE AIR BLOW .....	161
42-2. M CODES USED FOR TURNING ON/OFF SPARE AIR BLOW .....	161
SECTION 43 SPINDLE JOGGING FUNCTION WHEN AIR BLOWER IS COMMANDED .....	162
43-1. OVERVIEW OF SPINDLE JOGGING FUNCTION WHEN AIR BLOWER IS COMMANDED ..	162
43-2. OPERATION .....	162
SECTION 44 ROBOT INTERLOCK FUNCTION .....	163
44-1. OVERVIEW OF ROBOT INTERLOCK FUNCTION .....	163
44-2. M CODES USED FOR OPERATING ROBOT .....	163
44-3. ALARM MESSAGES .....	163
SECTION 45 COOLANT HIGH/LOW PRESSURE SELECTION FUNCTION BY M CODES .....	164
45-1. OVERVIEW OF COOLANT HIGH/LOW PRESSURE SELECTION FUNCTION .....	164
45-2. M CODES USED FOR SELECTING HIGH/LOW COOLANT PRESSURE .....	164
SECTION 46 TAILSTOCK SWING OPERATION (LB1 $\emptyset$ only) .....	165
46-1. OVERVIEW .....	165
46-2. OPERATIONS .....	165
46-2-1. Operation by Pushbuttons .....	165
46-2-2. Operation by M Codes .....	165
46-2-3. Remarks .....	165
46-2-4. Interlock Conditions .....	165
46-3. ALARM .....	166
SECTION 47 TAPE PUNCH INTERFACE FUNCTION .....	167
47-1. FUNCTION OVERVIEW .....	167
47-2. SPECIFICATIONS .....	167
47-3. OPERATION PROCEDURES .....	167
47-4. PARAMETER SETTING .....	175
47-4-1. Setting of NC Optional Parameter (Bit) .....	175
47-4-2. Setting of NC Optional Parameter (Word) .....	182
47-5. RS232C PINS AND CORRESPONDING SIGNALS .....	185
47-6. SIGNAL DESCRIPTION .....	187
47-7. EXTERNAL DEVICE CONNECTION .....	19 $\emptyset$

	<u>PAGE</u>
47-8. DC CODE CONTROL .....	195
47-8-1. Transmission Codes .....	195
47-8-2. External Device Connection .....	195
47-9. SLAVE STATION FUNCTION .....	199
47-9-1. Connection Example with External Device in Slave Station Function .....	199
47-9-2. Connection Example with External Device in Slave Station Function .....	200
47-9-3. When OSPs Are Linked Each Other Using the Slave Station Function .....	201
47-10. EIA SPECIAL CODES .....	203
47-10-1. Setting of EIA Special Characters .....	204
47-10-2. Input/Output of the Special EIA Codes .....	204
47-11. ERROR MESSAGES .....	206
47-12. TAPE PUNCH CONNECTION EXAMPLES .....	213
SECTION 48 OVERLOAD MONITORING FUNCTION .....	233
48-1. FUNCTION OVERVIEW .....	233
48-2. OVERVIEW OF OPERATIONS .....	233
48-3. PROGRAMS .....	234
48-3-1. Format of System Variable VLMON .....	234
48-3-2. Monitoring ON/OFF Command .....	235
48-3-3. Monitoring on Multiple Parts .....	235
48-3-4. Programming on Two-saddle Models .....	236
48-3-5. Rapid Feed Ignoring Function (M215, M216) .....	237
48-3-6. Load Trace Display Clear Command (LCLEAR) .....	237
48-4. SETTING OF LIMIT LEVELS .....	238
48-4-1. Automatic Setting Method .....	238
48-4-2. Direct Setting of Limit Levels .....	239
48-5. LOAD MONITORING .....	241
48-6. LOAD MONITORING GRAPHIC DISPLAY (LOAD TRACE DISPLAY) .....	242
48-7. LOAD MONITORING FUNCTION USED IN COMBINATION WITH THE TOOL LIFE MANAGEMENT FUNCTION .....	244
48-8. SETTING OF PERCENT VALUE AT THE MAXIMUM INPUT OF SPINDLE AND M-TOOL SPINDLE DRIVE MOTORS .....	245
48-9. PARAMETERS .....	246
48-10. ALARM MESSAGES .....	249
SECTION 49 TAPE DATA INPUT/OUTPUT FUNCTION .....	250
49-1. OVERVIEW .....	250
49-2. FUNCTION APPLICATION .....	251

	<u>PAGE</u>
49-3. INPUT/OUTPUT TAPE FORMAT OF SETTING DATA .....	251
49-3-1. File Names .....	251
49-3-2. Tape Format Table .....	252
49-3-3. Actual Tape Format .....	256
49-4. OPERATION PROCEDURES .....	258
49-4-1. Data Input (READ) .....	259
49-4-2. Data Output (PUNCH) .....	261
49-4-3. Data Verify .....	264
49-4-4. Precautions on Tape Read-in, Punch Out and Verifying Operations .....	266
49-5. ERROR MESSAGES .....	268
 SECTION 50 NC MACHINING PROGRAM INPUT/OUTPUT FUNCTIONS BY FLOPPY DISKS (OSP FORMAT) .....	 271
50-1. OVERVIEW .....	271
50-2. CONFIGURATION .....	271
50-3. METHOD OF OPERATION .....	272
50-4. EXPLANATION OF OPERATIONS .....	274
50-4-1. Types of Floppy Disks .....	278
50-4-2. INIT: Initialize .....	279
50-4-3. DEL: Delete .....	282
50-4-4. RENAME: Name Change .....	282
50-4-5. DIR: Directory .....	283
50-4-6. FREE: Remaining Floppy Disk Area .....	283
50-4-7. LIST: List of Files .....	284
50-4-8. READ: Reading from Tape Reader .....	285
50-4-9. Output of Files to the Tape Punch .....	286
50-4-10. Verify .....	287
50-4-11. Read from Bubble Memory .....	288
50-4-12. Data Transmission to Bubble Memory .....	289
50-4-13. Floppy Disk File Edit .....	290
50-4-14. IGF Floppy Disk Files (optional) .....	291
50-4-15. IGF Floppy Disk File Conversion (optional) .....	292
50-4-16. Floppy Disk File Conversion (optional) .....	293
50-4-17. Floppy Disk File Protection .....	294
50-4-18. Floppy Disk File Data Transfer (PIP) (optional) .....	294
50-5. INTERFACING SPECIFICATIONS .....	295
50-5-1. Floppy Disk Drive Connector Board (FDC Board) .....	295
50-5-2. Floppy Disk Drive Connector Cable .....	297
50-5-3. Portable Floppy Disk Drive Unit .....	299
 SECTION 51 NC MACHINING PROGRAM INPUT/OUTPUT FUNCTIONS BY FLOPPY DISKS (IBM FORMAT) .....	 300
51-1. OVERVIEW .....	300

	<u>PAGE</u>
51-2. OPERATIONS .....	301
51-2-1. Directory .....	301
51-2-2. Copy .....	305
51-2-3. Free (Remaining Floppy Disk Capacity) .....	312
51-2-4. Initializing .....	313
51-2-5. Deletion .....	316
51-2-6. Rename .....	319
51-2-7. Protect .....	321
51-3. PRECAUTIONS ON I/O FUNCTIONS USING FLOPPY DISKS .....	326
51-3-1. Parameter Setting .....	356
51-3-2. Usage of File Name .....	328
51-4. CODE TABLES .....	331
51-5. FLOPPY DISK FORMAT (IBM FORMAT) .....	335
51-5-1. Index Cylinder .....	337
51-5-2. Faulty Cylinder Information .....	340
51-5-3. Volume Label Information .....	342
51-5-4. File Directory .....	344
51-5-5. Floppy Disk Information Used in OSP Series .....	347
51-5-6. Examples .....	348
51-5-7. Data Writing Method .....	349
SECTION 52 M-SPINDLE FLAT TURNING FUNCTION .....	362
52-1. OVERVIEW .....	362
52-2. FLAT TURNING PRINCIPLE .....	362
52-3. COMMANDS .....	365
52-3-1. Flat Turning ON/OFF M Code .....	365
52-3-2. Program Example .....	366
52-4. PARAMETERS .....	366
52-4-1. Flat Turning Mode, M Spindle Zero Offset .....	366
52-4-2. System Variables .....	366
52-4-3. SB Command Acceleration/Deceleration Unit Amount .....	367
52-5. DISPLAY .....	367
52-6. ALARM .....	367
52-6-1. Alarm B .....	367
52-6-2. Alarm A .....	368
52-7. CAUTIONS .....	368

	<u>PAGE</u>
SECTION 53 TOUCH SETTER M .....	369
53-1. CONFIGURATION OF TOUCH SETTER M .....	369
53-2. PROGRAM COMMANDS .....	370
53-2-1. Defining Thread Cutting Arc by Designating Arc Center .....	370
53-2-2. Defining Thread Cutting Arc by Designating Arc Radius .....	375
53-3. PROGRAM EXAMPLE .....	376
53-4. CAUTION .....	377
SECTION 54 WORK COUNTER .....	378
54-1. OVERVIEW .....	378
54-2. COUNTER APPEARANCE AND ITS LOCATION ON OPERATION PANEL .....	378
54-3. FUNCTIONS .....	379
54-4. PROGRAM EXAMPLE .....	380
54-5. CAUTIONS .....	383
54-6. HOW TO PRESET .....	383
SECTION 55 PICK-OFF ATTACHMENT .....	384
55-1. AUTOMATIC OPEN/CLOSE OF PICK-OFF ATTACHMENT .....	384
55-2. M-SPINDLE ROTATION INTERLOCK .....	384
55-3. M-SPINDLE ROTATION INTERLOCK IGNORE FUNCTION .....	384
55-4. ALARM MESSAGES .....	385
SECTION 56 CUT-OFF DEVICE .....	386
56-1. M CODES USED FOR CONTROLLING CUT-OFF DEVICE .....	386
SECTION 57 TOOL RETRACTION CYCLE .....	387
57-1. OVERVIEW .....	387
57-2. INTERRUPTION REQUEST SIGNAL .....	388
57-2-1. Internal Signal Generation .....	388
57-2-2. External Signals .....	388
57-3. PROGRAM .....	389
57-3-1. Main Program .....	389
57-3-2. Subprograms .....	390
57-3-3. Program Example .....	390
57-4. OPERATION DESCRIPTION .....	392
57-5. OTHERS .....	393
57-6. ALARM MESSAGES .....	395

	<u>PAGE</u>
SECTION 58    HOUR METER .....	396
58-1. OVERVIEW .....	396
58-2. APPEARANCE OF THE HOUR METER AND ITS INSTALLATION LOCATION .....	396
58-3. FUNCTION DESCRIPTION .....	397
SECTION 59    3RD TURRET .....	398
59-1. OUTLINE OF 3RD TURRET AND PICK OFF SPINDLE .....	398
59-2. PROGRAMMING .....	399
59-3. MANUAL OPERATIONS .....	408
59-4. PARAMETER SETTING .....	412
59-5. ZERO SETTING .....	417
59-6. TOOL DATA .....	418
59-7. ALARM MESSAGES .....	419
SECTION 60    HOME POSITION FUNCTION .....	423
60-1. OVERVIEW OF HOME POSITION FUNCTION .....	423
60-2. PARAMETERS .....	423
60-2-1. Home Position Setting Screen Display Method .....	423
60-2-2. Home Position Setting Screen .....	424
60-2-3. Home Position Data .....	425
60-3. COMMANDS .....	425
60-4. REMARKS .....	426
60-5. ALARM .....	426

Note: To avoid any confusion over the use of the letter "O (oh)" and figure "0 (zero)" in this manual, the numerical value "0 (zero)" is expressed as "Ø" if there is any possibility of misunderstanding.