

OPERATION MANUAL FOR CONVERSATIONAL PROGRAMMING

Applicable Model
CNC LATHE

Applicable NC Unit
MSG-500
MSG-501
MSG-803
MSG-805

Before starting operation, maintenance, or programming, carefully read the manuals supplied by Mori Seiki, the NC unit manufacturer, and equipment manufacturers so that you fully understand the information they contain.
Keep the manuals carefully so that they will not be lost.

CONTENTS

SIGNAL WORD DEFINITION

PREFACE

A: DESCRIPTION OF SCREENS

B: PROGRAM EDITING

C: TOOL FILE

**D: CONVERSATIONAL AUTOMATIC
PROGRAMMING PARAMETERS**

**E: CAUTIONS ON CONVERSATIONAL
PROGRAMMING**

CHAPTER A

DESCRIPTION OF SCREENS

This chapter describes the screens displayed in the course of programming, data setting items, and details of these data setting items.

CONTENTS

A : DESCRIPTION OF SCREENS

1	NC UNIT	A-1
2	PROGRAM LIST SCREEN	A-2
2-1	Creating a New Conversational Program	A-3
3	INITIAL SET SCREEN	A-4
3-1	Contour (Work Shape) Menu Screen	A-9
3-2	Contour (Work Shape) Data Input Screen	A-10
3-2-1	Start Point	A-10
3-2-2	Line Parallel to X-axis - Face Line (↓, ↑)	A-11
3-2-3	Line Parallel to Z-axis - Longitudinal Line (←, →)	A-12
3-2-4	Line at Angle (↙, ↘, ↖, ↗)	A-13
3-2-5	Arc (○, ○)	A-15
3-2-6	Corner R	A-17
3-2-7	Corner C	A-17
4	MACHINING MENU	A-18
4-1	Machining Menu Screen	A-18
4-2	Selecting the Machining Menu	A-20
4-3	The Relationship between Machining Menus and Sub Items	A-20
5	CONTOUR SHAPE MENU SCREEN	A-26
5-1	Contour Shape Input Screen	A-28
5-1-1	Start Point	A-28
5-1-2	Line Parallel to X-axis - Face Line (↓, ↑)	A-32
5-1-3	Line Parallel to Z-axis - Longitudinal Line (←, →)	A-34
5-1-4	Line at Angle (↙, ↘, ↖, ↗)	A-36
5-1-5	Arc (○, ○)	A-41
5-1-6	Corner R	A-45
5-1-7	Corner C	A-46
5-1-8	Necking	A-47

5-2	Details of Setting Items	A-49
5-2-1	Cutting Direction	A-49
5-2-2	Relation data	A-51
5-2-3	End point	A-52
5-2-4	Defining Dummy Shape	A-53
5-2-5	Auxiliary Circles	A-54
5-2-6	Auxiliary Points and Angle	A-56
5-2-7	Nose R and Offset for Finishing Allowance	A-56
5-3	Display of Symbols and Error Messages	A-57
5-3-1	Possible Causes of Error Messages	A-57
5-3-2	Required Action if an Error Message is Displayed	A-59
6	PROCESS DATA SCREEN	A-60
6-1	General Types of Machining (O.D., I.D., FACE)	A-62
6-1-1	Automatic Area Determination	A-71
6-2	Facing (Machining on End Face of Blank Workpiece)	A-72
6-2-1	Setting for FACE Z	A-75
6-3	Groove	A-76
6-3-1	Square Grooves (O.D., I.D.)	A-76
6-3-2	Square Grooves (Face)	A-79
6-3-3	Trapezoidal Groove (O.D., I.D.)	A-82
6-3-4	Trapezoidal Groove (Face)	A-85
6-3-5	V-Pulley Groove	A-89
6-4	Grooving - Groove With Free-Form Wall Shape	A-92
6-4-1	Inputting Wall Shape Data	A-92
6-4-2	Process Data	A-93
6-4-3	Tool Path	A-96
6-5	Thread	A-97
6-5-1	Straight Thread (O.D., I.D.)	A-97
6-5-2	Tapered Thread (O.D., I.D.)	A-101
6-5-3	Incomplete Thread Portion	A-107

6-6	Centering	A-108
6-7	Drilling	A-109
6-8	Tapping	A-112
6-9	C-Drill	A-114
6-9-1	Face E.P.	A-114
6-9-2	Face RDM.	A-117
6-9-3	Side E.P.	A-118
6-9-4	Side RDM.	A-120
6-10	C-Tap.	A-121
6-10-1	Face E.P.	A-121
6-10-2	Face RDM.	A-124
6-10-3	Side E.P.	A-126
6-10-4	Side RDM.	A-129
6-11	C-Reamer	A-131
6-11-1	Face E.P.	A-131
6-11-2	Face RDM.	A-134
6-11-3	Side E.P.	A-135
6-11-4	Side RDM.	A-137
6-12	C-Groove.	A-139
6-12-1	Face E.P.	A-139
6-12-2	Face RDM.	A-143
6-12-3	Side E.P.	A-145
6-12-4	Side RDM.	A-148
6-13	Notching	A-150
6-13-1	Contour	A-150
6-13-2	Wrench.	A-153
6-13-3	Polygon	A-156
6-14	Cylindrical Interpolation	A-159
6-14-1	Input Coordinate Plane	A-159
6-14-2	Contour Shape Input Screen	A-160
6-14-3	Process Data Screen	A-161

6-15	Y-Drill	A-164
6-15-1	Equal-Interval Holes on a Circle (End Face)	A-164
6-15-2	Holes in Grid Pattern (End Face)	A-166
6-15-3	Random Holes (End Face)	A-168
6-15-4	Equal-Interval Holes on a Circle (Side Face)	A-169
6-15-5	Holes in Grid Pattern (Side Face)	A-171
6-15-6	Random Holes (Side Face)	A-173
6-16	Y-Tap	A-175
6-16-1	Equal-Interval Holes on a Circle (End Face)	A-175
6-16-2	Holes in Grid Pattern (End Face)	A-178
6-16-3	Random Holes (End Face)	A-180
6-16-4	Equal-Interval Holes on a Circle (Side Face)	A-182
6-16-5	Holes in Grid Pattern (Side Face)	A-184
6-16-6	Random Holes (Side Face)	A-186
6-17	Y-Reamer	A-188
6-17-1	Equal-Interval Holes on a Circle (End Face)	A-188
6-17-2	Holes in Grid Pattern (End Face)	A-190
6-17-3	Random Holes (End Face)	A-192
6-17-4	Equal-Interval Holes on a Circle (Side Face)	A-193
6-17-5	Holes in Grid Pattern (Side Face)	A-196
6-17-6	Random Holes (Side Face)	A-198
6-18	Y-Groove	A-200
6-18-1	Grooves on End Face	A-200
6-18-2	Grooves on Side Face	A-203
6-19	Y-Rectangle	A-206
6-19-1	Rectangle on End Face	A-206
6-19-2	Rectangle on Side Face	A-210
6-20	Y-Contour	A-214
6-20-1	Contouring on End Face	A-214
6-20-2	Contouring on Side Face	A-217

6-21	B-Drill	A-220
6-21-1	Equal-Interval Holes on a Circle	A-220
6-21-2	Holes in Grid Pattern	A-223
6-21-3	Random Holes	A-225
6-22	B-Tap	A-227
6-22-1	Equal-Interval Holes on a Circle	A-227
6-22-2	Holes in Grid Pattern	A-231
6-22-3	Random Holes	A-233
6-23	B-Reamer	A-236
6-23-1	Equal-Interval Holes on a Circle	A-236
6-23-2	Holes in Grid Pattern	A-239
6-23-3	Random Holes	A-241
6-24	B-Groove	A-243
6-25	B-Rectangle	A-246
6-26	B-Contour	A-250
6-27	Transfer	A-253
6-28	Parts Catcher	A-261
6-29	Necking	A-262
6-30	Cut-Off	A-264
6-31	Corner Machining	A-267
6-32	NC Language	A-271
6-33	Macro Call	A-272
6-34	Turret/Spindle Setting (2-path System)	A-274
7	ITEMS COMMON TO ALL MACHINING PROCESSES	A-278
7-1	Tool Position Data	A-278
7-2	M Code Data	A-280
8	BALANCE CUT (2-PATH SYSTEM)	A-281
8-1	Interval Amount	A-281
8-2	Machining Methods	A-283

9	MACHINING ORDER SETTING SCREEN	A-284
9-1	Altering the Machining Order	A-285
9-2	Changing a T Code	A-287
9-3	Selecting the Process Execution	A-288
9-4	Tooling Screen	A-289
9-5	Setting the Program Execution Synchronization M Codes (2-path System) . . .	A-290
10	NC PROGRAM CONVERSION SCREEN	A-292
11	GRAPHIC CHECK SCREEN	A-295
11-1	Setting the Graphic Drawing Range	A-298
11-2	Settings for Graphic Check	A-299
11-2-1	Selecting the NC Program Used for Graphic Check	A-300
11-2-2	Time Chart Screen	A-301
11-2-3	Setting the M Code Time Data	A-304
11-2-4	Setting the Graphic Data	A-305
11-2-5	Setting the Graphic Parameters	A-306
11-3	3D Tool Path Drawing	A-310
11-3-1	Displaying the 3D Tool Path Drawing Screen	A-310
11-3-2	Enlarging/Reducing 3D Tool Path Drawing Area	A-312
11-3-3	Angle (View Point) Selection	A-314
11-3-4	Changing the Display Mode	A-316
11-3-5	Graphic Parameters (3D Tool Path Drawing)	A-317
11-4	Error Messages in Animation Drawing	A-318
11-5	Restrictions on Using the Graphic Check Function	A-319
11-5-1	Drawing for Tool Offsetting	A-319
11-5-2	Unsupported G and M Functions	A-320
12	DISPLAYING CONVERSATIONAL PROGRAM FILES	A-321
12-1	Tool File List Screen	A-321
12-2	Tool Registration Screen	A-322
12-3	Dialog Parameter Menu Screen	A-322
12-4	Dialog Data I/O Screen	A-323
12-4-1	Outputting the Conversational Programming Data	A-324
12-4-2	Inputting the Conversational Programming Data	A-324

CHAPTER B

PROGRAM EDITING

This chapter describes the following procedure:

1. Editing conversational program
2. Changing O No. of conversational program
3. Deleting conversational program
4. Copying conversational program
5. Inputting comments for conversational programs
6. Inputting conversational programs to memory using memory card, and outputting conversational programs from memory

CONTENTS

B : PROGRAM EDITING

1	EDITING CONVERSATIONAL PROGRAMS	B-1
1-1	Editing the Contents of Machining Processes	B-1
1-2	Deleting Processes	B-2
1-3	Copying Processes	B-3
2	INPUTTING AND DELETING THE DATA	B-5
2-1	Initial Setting Screen, Process Data Input Screen, Tool Position Data Screen, and M Code Data Screen	B-5
2-1-1	Inputting the Data	B-5
2-1-2	Deleting the Data	B-5
2-2	Contour Shape (Menu) Screen (Initial Setting Screen) and Contour Shape (Input) Screen	B-8
3	CHANGING O-No.	B-11
4	DELETING CONVERSATIONAL PROGRAMS	B-12
5	COPYING PROGRAMS	B-15
6	INPUTTING A COMMENT	B-16
7	INPUTTING AND OUTPUTTING A CONVERSATIONAL PROGRAM USING MEMORY CARD	B-17
7-1	Outputting a Program	B-17
7-2	Inputting a Program	B-18

CHAPTER C

TOOL FILE

This chapter describes the methods of registering and modifying tool data and information about the items registered. Refer to this section when registering information about the tools used.

CONTENTS

C : TOOL FILE

1	TOOL FILE	C-1
1-1	Tool File List Screens	C-1
1-2	Tool Registration Screen	C-3
1-2-1	Modifying Tool File Data	C-3
1-2-2	Registering New Tool File Data	C-5
1-2-3	Deleting Tool File Data	C-7
1-3	Items of Tool File Data	C-8
1-3-1	O.D., I.D., FACE	C-8
1-3-2	THRD. O.D., THRD. I.D.	C-9
1-3-3	GRV. O.D., GRV. I.D., GRV. FACE	C-10
1-3-4	DRILL	C-11
1-3-5	TAP	C-11
1-3-6	CENTER	C-12
1-3-7	V-PLLY	C-12
1-3-8	NECKING	C-13
1-3-9	C-DRILL	C-14
1-3-10	C-TAP	C-14
1-3-11	C-CENTER	C-15
1-3-12	C-CHAMFER	C-16
1-3-13	C-ENDMILL	C-16
1-3-14	C-REAMER	C-17
1-4	Additional Setting Items for 2-path System MT Series	C-18

CHAPTER D

CONVERSATIONAL

AUTOMATIC PROGRAMMING

PARAMETERS

This chapter describes the procedure for displaying the parameters related to the conversational programming and the contents of these parameters.

CONTENTS

D : CONVERSATIONAL AUTOMATIC PROGRAMMING PARAMETERS

1	DIALOG PARAMETER MENU SCREEN	D-1
1-1	Cutting Conditions	D-2
1-1-1	GENERAL (O.D., I.D., face)	D-2
1-1-2	GROOVE	D-3
1-1-3	THREAD	D-4
1-1-4	DRILL	D-4
1-1-5	CENTER	D-5
1-1-6	TAP	D-5
1-1-7	CHAMFER	D-6
1-1-8	ENDMILL	D-6
1-1-9	REAMER	D-7
1-2	C-TAP Data	D-8
1-3	Parameters	D-9
1-3-1	Material Name Registration Screen	D-10
1-4	Help Data	D-10
2	DETAILS OF PARAMETERS	D-11
2-1	System Parameters	D-11
2-2	Machining Detail Parameters	D-15
2-3	NC Specification Parameters	D-20
2-4	Initial Value Data	D-25

CHAPTER E

CAUTIONS ON

CONVERSATIONAL

PROGRAMMING

This chapter describes the items that require special attention for creating programs using the conversational automatic programming function.

CONTENTS

E : CAUTIONS ON CONVERSATIONAL PROGRAMMING

1	T CODE SETTING FOR MT SERIES	E-1
1-1	When Tool Life Management Function Is Used.	E-1
1-2	When Tool Life Management Function Is Not Used	E-1
2	CONVERSATIONAL PROGRAMMING FOR SPINDLE 2 OPERATION.....	E-2
3	WORKPIECE TRANSFER AXIS WORK COORDINATE SYSTEM IN WORKPIECE TRANSFER PROCESS.	E-3
4	PROBLEMS IN ROUGH I.D. TURNING AFTER DRILLING	E-4
5	DELETING CONVERSATIONAL PROGRAM IN FILE MAINTENANCE.....	E-6
