



Electrical Maintenance Manual

OKK-MIL (M320)

OSAKA KIKO CO., LTD.

3-21-9, Toyosaki, Kita-ku
Osaka, Japan

AS-MS-MIL, GML

CONTENTS

1. Operation Panel Switch Location	
① OKK-MIL	P 1
2. Alarm Diagnosis Screen Display Method	P 2
3. Machine Alarm List	P 3~11
4. PLC Interface Diagnosis Method	P 12~15
5. PLC Ladder Diagram Checking Method	P 16~18
6. PLC Switch Function Selection Method	P 19~22
7. User Parameter Standard Setting List	
① MHA300II OKK-MIL	P 23,24
③ MHA400II OKK-MIL	P 25,26
⑤ MHA500 OKK-MIL	P 27,28
⑦ MHA600 OKK-MIL	P 29,30
8. Machine Parameter Display Method	P 31,32
9. Machine Parameter Standard Setting List	
① MHA300II OKK-MIL	P 33~37
③ MHA400ii okk-mil	P 38~42
⑤ MHA500 OKK-MIL	P 43~47
⑦ MHA600 OKK-MIL	P 48~52
10. Auxiliary Function List (M signal list)	P 53,54
11. Feed Axis Servo Field Adjustment Method	P 55
12. Servo Parameter Content List	P 56~73
13. Servo Monitor Screen Display Method and Display Contents	P 74,75
14. Servo Alarm List	P 76~86
15. Pulse Coder/Linear Scale Changing Method	P 87,88
16. Grid Spacing	P 89~91
17. Memory Formatting	P 92
18. CPU RAM CLEAR MethodAdditional Axis Related Parameter	P 93
19 Additional Axis Related Parameter	P 94
20. PLC Bit Selection List (SPEC list)	P 95~99
21. PLC Timer List	P 100~103
22. I/O Signal List	P 104~111

(Use this Maintenance Manual together with the electrical drawings and NC operation manual issued by Mitsubishi Electric Corporation)