



# **Miyano CNC Turning Center**

**Model : BNC-34/42C3**

# **Machine User's Manual**



# INSTALLATION

## CONTENTS, INSTALLATION

CHAPTER 1. ENVIRONMENT OF MACHINE INSTALLATION AREA .....	1
CHAPTER 2. PRECAUTIONS FOR UNPACKING THE MACHINE .....	1
CHAPTER 3. EXTERNAL VIEW .....	2
3.1 Machine external view .....	2
3.2 With ASR F-34M .....	4
3.3 With MS tube outside bar feeding .....	5
3.4 With PF-V3S .....	6
CHAPTER 4. TRANSPORTING THE MACHINE .....	7
4.1 Location of machine center of gravity .....	7
4.2 Slinging the machine .....	8
4.3 Movement by forklift .....	9
CHAPTER 5. INSTALLATION .....	10
5.1 Preparing the levelling plates and work tools .....	10
5.2 Installing the machine .....	10
5.3 Location of levelling bolts .....	11
CHAPTER 6. REMOVING THE FIXING PLATES FROM THE MACHINE .....	12
CHAPTER 7. LEVELLING THE MACHINE .....	13

CHAPTER 8. CONNECTING THE COMPRESSED AIR SUPPLY .....	14
CHAPTER 9. CONNECTING POWER SUPPLY TO THE MACHINE .....	15
9.1 Electrical power requirements .....	15
9.2 Selecting a transformer .....	16
9.3 Selecting a power line and ground wire .....	16
9.4 Connecting power supply to the machine .....	17
CHAPTER 10. LUBRICATION .....	20
10.1 Supplying hydraulic oil .....	21
10.2 Supplying coolant oil .....	22
10.3 Supplying lubricating oil .....	23
CHAPTER 11. CLEANING THE MACHINE .....	24
CHAPTER 12. INSTALLING A BAR FEEDER .....	25
12.1 Bar feeder .....	26
12.2 ANF interface .....	26

# OUTLINE

## CONTENTS, OUTLINE

CHAPTER 1. GENERAL LAYOUT OF MACHINE CONSTRUCTION .....	2
CHAPTER 2. SPECIFICATIONS AND TECHNICAL DATA .....	7
2.1 Machine specifications .....	7
2.2 Specifications of the NC (FANUC 21T) .....	10

# TOOLING

1st. Edition

## CONTENTS, TOOLING

CHAPTER 1. TOOLING AREA .....	4
CHAPTER 2. TURRET TOOLING SYSTEM (METRIC) .....	5
2.1 Tool system (standard) .....	5
2.2 Tool system (for high pressure coolant) .....	6
CHAPTER 3. TURRET TOOLING SYSTEM (INCH) .....	7
3.1 Tool system (standard) .....	7
3.2 Tool system (for high pressure coolant) .....	8
CHAPTER 4. TAIL STOCK TOOL SYSTEM .....	9

# OPERATION

## CONTENTS, NC OPERATING

CHAPTER 1. SPLASH GUARD INTERLOCK .....	1
CHAPTER 2. OPERATING THE PANEL .....	4
2.1 Panel general view .....	4
2.2 The NC panel .....	7
2.3 The operating panel .....	9
CHAPTER 3. OPTIONAL PANEL .....	13
CHAPTER 4. MANUAL OPERATION SWITCH .....	14
4.1 Main chuck open/close switch .....	14
4.2 Bar feeding "return" "advance" selection switch .....	15
CHAPTER 5. OPERATIONAL PROCEDURES .....	16
5.1 Explanations of expression symbols .....	16
5.2 Turning the power switch ON/OFF .....	17
5.2.1 Turning the power switch ON .....	17
5.2.2 Turning the power switch OFF .....	18
5.3 Operating the emergency stop and the reset button .....	19
5.3.1 The emergency stop button .....	19
5.3.2 Stopping a cycle by the reset button .....	19
5.4 Explanation of indicated location .....	20
5.4.1 Displaying function key .....	20
5.4.2 Displaying mode .....	21
5.4.3 Displaying input data .....	21
5.4.4 Displaying program number and sequence number .....	22
5.4.5 Displaying alarm .....	22
5.4.6 Displaying soft key .....	22

5.5	Help function .....	23
5.5.1	Displaying "ALARM DETAIL" .....	24
5.5.2	Displaying "OPERATION METHOD" .....	26
5.5.3	Displaying "PARAMETER TABLE" .....	28
5.6	Displaying current position .....	29
5.7	Performing manual zero return .....	30
5.8	Positioning by manual operation .....	32
5.9	Starting cycle in MDI mode .....	34
5.10	Setting the work coordinate system (Geometry offset) .....	36
5.10.1	For a Turning and a boring tool .....	36
5.10.2	For a drill, and a reamer .....	43
5.10.3	Altering the work coordinate system .....	44
5.11	Displaying and setting tool nose radius compensation .....	46
5.11.1	Displaying & setting tool nose radius compensation .....	46
5.11.2	Commanding the direction of theoretical cutting edge .....	48
5.12	Displaying and Setting Wear Offset .....	49
5.12.1	Displaying wear offset .....	50
5.12.2	Setting wear offset .....	51
5.13	Using the EDIT mode .....	54
5.13.1	Designating an editing portion .....	54
5.13.2	Altering a word .....	55
5.13.3	Inserting a word .....	56
5.13.4	Deleting a word .....	57
5.13.5	Deleting a block .....	58
5.13.6	Deleting two blocks or more .....	59
5.13.7	Deleting a program .....	60
5.13.8	Deleting all program .....	60
5.14	Displaying Program Memory Used .....	61
5.15	Returning to the head of program .....	62
5.15.1	In EDIT MODE .....	62
5.15.2	In AUTO mode .....	63
5.16	Using the SEARCH function .....	64
5.16.1	Searching a program number .....	64
5.16.2	Searching a sequence number in AUTO mode .....	66
5.16.3	Searching a input data by address .....	68

5.17 Starting cycle in AUTO mode .....	70
5.17.1 Starting cycle in AUTO mode .....	70
5.17.2 Displaying command value .....	72
5.17.3 Starting cycle in AUTO mode with the single block .....	74
5.18 Displaying command value .....	75
5.19 Loading programs from an external I/O device to the memory .....	77
5.20 Outputting programs from the memory to an external I/O device .....	79
5.21 Setting Input/Output parameter (SETTING PARAMETER) .....	81
5.22 Alarm Display .....	84
5.23 Alarm History Display .....	85
5.24 Using MACHINE END RELEASE button .....	86

# PROGRAMMING

# CONTENTS, PROGRAMMING

CHAPTER 1. OUTLINE OF PROGRAMMING .....	1
1.1 Procedure for making program .....	1
1.2 Axes names .....	2
1.3 Part dimensioning .....	3
1.4 Part layout sheet .....	4
1.5 Process sheet .....	5
CHAPTER 2. PROGRAM COMMANDS .....	6
2.1 Move commands of the cutting tools .....	8
2.2 Absolute and incremental input .....	9
2.3 The program format .....	12
2.4 G-Function (Preparatory Function) .....	16
2.4.1 G50 (Maximum spindle speed setting) .....	16
2.4.2 G00 (Positioning) .....	17
2.4.3 G01 (Linear interpolation, 45° chamfering, Rounding) .....	19
2.4.4 G02, G03 (Circular interpolation, Radius programming for circular interpolation) .....	25
2.4.5 G04 (Dwell) .....	30
2.4.6 G10 (Program input of offset values) .....	32
2.4.7 G20, G21 (Inch / Metric input) .....	33
2.4.8 G27 (Reference point return check) .....	34
2.4.9 G28 (Automatic return to reference point) .....	35
2.4.10 G32 (Thread cutting) .....	36
2.4.11 Other G-codes .....	45
2.4.12 List of G-codes and their group .....	46
2.5 Feed functions .....	47
2.5.1 Rapid traverse rate .....	47
2.5.2 Cutting feed rate .....	47
2.5.3 Threading feed rate .....	48
2.5.4 Feed rate override .....	48

2.6	S-Function (Spindle speed function) .....	49
2.6.1	Constant surface speed control cancel (G97) .....	49
2.6.2	Constant surface speed control (G96) .....	50
2.7	T-code for the main turret (Tool function) .....	52
2.7.1	Tool selection (Turret indexing) .....	52
2.7.2	Setting work coordinate system (Setting geometry offset) .....	54
2.7.3	Wear offset .....	56
2.8	M-code (Miscellaneous function) .....	57
2.8.1	List of M-codes .....	57
2.8.2	Descriptions of M-codes .....	59
2.8.3	Moving the tailstock or traverse by M-codes .....	70
2.9	Other function .....	71
2.9.1	"/" Block Delete (Block Skip) .....	71

CHAPTER 3. EXAMPLES OF PROGRAMMING FOR VARIOUS OPERATIONS ..... 72

3.1	Facing .....	72
3.2	Turning .....	74
3.3	Drilling .....	75
3.4	Boring .....	76
3.5	Grooving .....	77
3.6	Taper and Chamfering .....	78
3.7	Radius Cutting .....	79
3.8	Cutting off .....	81
3.9	Bar feeding .....	83
3.10	Threading .....	84

CHAPTER 4. TOOL NOSE RADIUS COMPENSATION (G40 ~ G42) ..... 86

4.1	Different dimension by tool nose radius .....	86
4.1.1	Taper cutting .....	86
4.1.2	Circular cutting .....	87
4.2	The motion of tool nose radius compensation .....	88

4.3	Commanding tool nose radius compensation .....	89
4.3.1	G-code designation .....	89
4.3.2	Setting the direction of the theoretical cutting edge .....	90
4.3.3	Setting tool nose radius value .....	91
4.3.4	Setting contents by MDI operation .....	91
4.3.5	Commanding the compensation .....	91
4.4	Prohibited command on the compensation .....	93
4.5	Program examples with tool nose radius compensation .....	94
4.5.1	Example - 1 .....	94
4.5.2	Example - 2 .....	96
CHAPTER 5.	EXAMPLES OF PROGRAMMING .....	97
5.1	Part dimensioning .....	97
5.2	Part layout sheet .....	98
5.3	Work coordinate system setting and tool selecting position .....	99
5.4	Process sheet .....	100
CHAPTER 6.	CANNED CYCLE .....	104
6.1	G90 (Turning cycle) .....	104
6.1.1	Straight turning cycle .....	104
6.1.2	Taper turning cycle .....	105
6.1.3	Notes on programming .....	107
6.1.4	Example of programming .....	108
6.2	G92 (Thread cutting cycle) .....	109
6.2.1	Parallel thread cutting cycle .....	109
6.2.2	Taper thread cutting cycle .....	110
6.2.3	Notes on programming .....	110
6.2.4	Example of programming .....	112
6.3	G94 (Facing cycle) .....	115
6.3.1	Facing cycle .....	115
6.3.2	Taper facing cycle .....	116
6.3.3	Notes on programming .....	117
6.3.4	Example of programming .....	118
CHAPTER 7.	MULTIPLE REPETITIVE CUTTING CYCLES .....	119

7.1	G71 (Stock removal cutting in turning)	119
7.1.1	Method of program	120
7.1.2	Notes on the programming	121
7.1.3	Example of programming	123
7.2	G72 (Stock removal cutting cycle in facing)	125
7.2.1	Method of program	125
7.2.2	Notes on programming	127
7.2.3	Example of programming	128
7.3	G73 (Pattern repeated cutting cycle)	130
7.3.1	Method of program	130
7.3.2	Notes on programming	131
7.3.3	Example of programming	132
7.4	G70 (Finish cutting cycle)	134
7.4.1	Method of program	134
7.4.2	Notes on programming	134
7.5	G74 (Longitudinal pecking cycle)	135
7.5.1	Method of program	135
7.5.2	Notes on programming	136
7.5.3	Example of programming	137
7.6	G75 (Cross pecking cycle)	138
7.6.1	Method of program	138
7.6.2	Notes on programming	139
7.6.3	Example of programming	140
7.7	G76 (Thread cutting cycle)	141
7.7.1	Method of program	141
7.7.2	Notes on programming	142
7.7.3	Example of programming	144
7.8	Notes on multiple repetitive cycles (G70 to G76)	145
CHAPTER 8. STANDARD PROGRAM FORMAT		146
8.1	Programming of bar work	146
8.1.1	In case of M12 (Bar push out)	146
8.2	Programming without tool nose radius compensation	147
8.3	Programming with tool nose radius compensation	148
8.4	Tapping program	149

# MACHINE OPERATION

1st. Edition

# CONTENTS, MACHINE OPERATION

CHAPTER 1. ADJUSTING THE CHUCK PRESSURE .....	1
1.1 Collet gripping force adjusting range .....	6
1.2 Power chuck gripping force adjusting range .....	6
1.3 Adjusting chuck gripping force .....	6
1.4 Gripping force reduction curve of the power chuck .....	7
CHAPTER 2. CHUCK SYSTEM .....	8
2.1 Changing the chuck system .....	8
2.1.1 Collet chuck system .....	8
2.1.2 Power chuck system .....	8
2.2 BNC-34C, Installing a main collet (DIN-171E, B&S #22, and B&S #22C collet) .....	9
2.3 BNC-42C, Installing a main collet (DIN-173E, and B&S #22D collet) .....	11
2.4 Power chuck .....	13
2.4.1 Specifications .....	13
2.4.2 Changing outside and inside diameter chucking .....	13
2.4.3 Installaing the power chuck for main spindle .....	14
2.4.4 Jaw dimensions .....	17
2.4.5 Machining soft jaws .....	19
CHAPTER 3. BAR FEEDER .....	20
3.1 Bar feeding system .....	20
3.1.1 ASR F-34M .....	21
3.1.2 MS tube type outside bar feeding .....	22
3.1.3 PF-V3S .....	32
CHAPTER 4. COOLANT .....	35
4.1 M-code .....	35
4.2 Adjusting the flow rate .....	35

CHAPTER 5. HIGH-PRESSURE COOLANT .....	36
5.1 M-code .....	36
5.2 Adjusting the nozzle .....	36
5.2.1 Turning tool holder .....	36
5.2.2 Plain head .....	37
 CHAPTER 6. AIR BLOW .....	 38
6.1 M-code .....	38
6.2 Adjusting the position .....	38
 CHAPTER 7. PARTS CATCHER .....	 39
7.1 Specification .....	39
7.2 M-code .....	39
7.3 Operation .....	39
 CHAPTER 8. AUTOMATIC FIRE EXTINGUISHER WITH AUTO POWER OFF .....	 40
 CHAPTER 9. CUT-OFF CONFIRMATION .....	 40
9.1 M-code .....	40
9.2 Operation .....	40
9.3 Adjustment .....	41
 CHAPTER 10. PARTS CONVEYOR .....	 41
10.1 M-code .....	41
 CHAPTER 11. OIL MIST COLLECTOR .....	 41

CHAPTER 12. TAILSTOCK .....	42
12.1 Specifications .....	44
12.2 Operation .....	44
12.3 Adjusting deceleration and pressure reduction .....	44
CHAPTER 13. WHEN TAILSTOCK IS USED AS DRILLING SLIDE .....	46
13.1 Adjusting cutting feed start position .....	46
13.2 Adjusting advanced end position .....	46

# MAINTENANCE

## CONTENTS, MAINTENANCE

CHAPTER 1. MAINTENANCE AND PREVENTIVE MAINTENANCE .....	7
CHAPTER 2. PERIODIC SERVICING .....	7
2.1 Inspection at the beginning after initial installation .....	7
2.1.1 Inspecting machine level .....	7
2.1.2 Changing oil .....	7
2.2 Recommended oil and grease .....	8
2.3 Recommended coolant oil .....	10
2.4 Maintenance schedule .....	12
2.5 Procedures for preventive maintenance .....	17
2.5.1 Inspection of radial clearance of front bearing .....	17
2.5.2 Measurement of thrust clearance of front bearing .....	17
2.5.3 Radial clearance of rear bearing .....	18
2.5.4 Tension of synchronous belt .....	18
2.5.5 Measurement of the clearance of X-axis slide .....	19
2.5.6 Measurement of the clearance of Z-axis slide .....	19
2.5.7 Gib adjustment of each slide .....	20
2.5.8 Cleaning the window of the splash guard .....	22
2.5.9 Inspection and cleaning of flow proper unit .....	22
2.5.10 Cleaning of filter .....	23
2.5.11 To replace the battery proceed as follows .....	24
CHAPTER 3. CIRCUIT DIAGRAM .....	25
3.1 Hydraulic circuit diagram .....	25
3.1.1 Hydraulic circuit diagram .....	25
3.1.2 List of part .....	26
3.2 Pneumatic circuit diagram .....	28
3.3 Lubricating system .....	29

CHAPTER 4. ELECTRICAL CONTROL .....	30
4.1 Electrical equipments .....	30
4.1.1 Electrical equipments on the machine .....	30
4.1.2 Layout of electrical equipments in the NC box .....	31
4.1.3 Magnetic switch, magnetic contactor .....	33
4.2 Power supply voltage .....	34
4.3 Parameters for external Input/Output device .....	35
4.3.1 Display and change of SETTING-PARAMETER .....	35
4.3.2 Parameters for external Input/Output device .....	37
4.4 Parameter and PMC parameter .....	41
4.4.1 Parameter .....	41
4.4.2 List of PMC parameter .....	41
4.5 Timers .....	59
4.5.1 Setting values of timers .....	59
4.5.2 How to set timers .....	59
4.5.3 List of timers .....	61
4.6 PMC counter .....	65
4.6.1 Display procedures .....	65
4.7 Input/Output signal display .....	67
4.7.1 PMC diagnosis .....	67
4.7.2 Display procedure of Input/Output signals .....	68
4.7.3 How to read Input/Output signals .....	70
4.7.4 Input/Output signal .....	71
4.7.5 Output signal (Signal from NC to lamp and relays) .....	73
4.8 Detection of turret position .....	74

# TROUBLESHOOTING

# CONTENTS, TROUBLESHOOTING

CHAPTER 1. TROUBLESHOOTING .....	7
CHAPTER 2. OPENING THE ELECTRICAL CABINET DOORS .....	8
2.1 "WARNING" .....	8
2.2 Main breaker handle operation .....	11
CHAPTER 3. TROUBLESHOOTING WHEN ALARM LAMP IS ON .....	12
3.1 Fault finding with NC alarm .....	12
3.1.1 Servo alarms .....	12
(a) 400, Overload alarm .....	12
(b) 401, Ready signal (VRDY) OFF .....	13
(c) The LED indicator on the servo amplifier .....	14
(d) 404, VRDY ON .....	16
(e) 405, Zero return movement is not completed .....	16
(f) 410, 411 Excessive positional deviation alarm .....	16
(g) 413, LSI overflow .....	17
(h) 414, Detection related error .....	17
(i) 416, Disconnection alarm .....	18
(j) Incorrect parameter setting .....	18
3.1.2 Stored stroke limit alarm .....	19
3.1.3 Machine end limit switch activates .....	20
3.1.4 Overheat alarm .....	20
3.1.5 System alarms .....	21
3.2 Fault finding with machine alarm, NC alarm and etc., .....	22
3.2.1 Displaying machine alarm, inverter alarm and etc., .....	22
3.2.2 Alarm numbers $\longleftrightarrow$ Diagnosis numbers .....	23
3.2.3 Descriptions of machine alarms, inverter alarms and etc., .....	24
AL1 (D0000.0) .....	24
AL2 (D0000.1) .....	25
AL3 (D0000.2) .....	25
AL4 (D0000.3) .....	26
AL5 (D0000.4) .....	26
AL7 (D0000.6) .....	27
AL10 (D0001.1) .....	29
AL15 (D0001.6) .....	29
AL16 (D0001.7) .....	29
AL18 (D0002.1) .....	29

AL20 (D0002. 3) .....	29
AL21 (D0002. 4) .....	30
AL24 (D0002. 7) .....	30
AL31 (D0003. 6) .....	30
AL32 (D0003. 7) .....	30
AL33 (D0004. 0) .....	30
AL34 (D0004. 1) .....	30
AL35 (D0004. 2) .....	31
AL36 (D0004. 3) .....	31
AL38 (D0004. 5) .....	31
AL39 (D0004. 6) .....	31
AL40 (D0004. 7) .....	31
AL41 (D0005. 0) .....	31
AL42 (D0005. 1) .....	32
AL47 (D0005. 6) .....	32
AL49 (D0006. 0) .....	32
AL50 (D0006. 1) .....	32
AL51 (D0006. 2) .....	32
AL53 (D0006. 4) .....	33
AL56 (D0006. 7) .....	33
3. 2. 4 List of machine alarms, inverter alarms and etc., .....	34
3. 2. 5 Alarm lamps .....	37

CHAPTER 4. TROUBLESHOOTING WHEN ALARM LAMP IS OFF .....	38
4.1 Main power does not turn on (the CRT does not display) .....	41
4.2 Machine ready lamp does not turn on (the CRT displays) .....	42
4.3 Jog feed does not work .....	43
4.4 Zero return does not work .....	44
4.5 Main turret indexing abnormality .....	45
4.5.1 Main turret does not index .....	45
4.5.2 Main turret has position detector alarm .....	47
4.6 Automatic cycle does not start on AUTO or MDI mode .....	48
4.7 Cycle start lamp is ON, but machine does not move .....	50
4.7.1 Display of status in which command is not apparently executed .....	51
4.7.2 Information indicating automatic operation stop, automatic idle statuses .....	52
4.8 Main spindle chuck abnormality .....	53
4.8.1 Main spindle chuck does not open .....	53
4.8.2 Main spindle chuck does not close .....	56

4.9	Main spindle does not rotate .....	58
4.10	MS tube type outside barfeeding abnormality .....	60
4.10.1	MS tube type outside barfeeding does not advance .....	60
4.10.2	MS tube type outside barfeeding does not return .....	62
4.11	Magazine bar feeder does not advance .....	64
4.12	Coolant oil does not come out .....	65
4.13	Parts catcher does not move .....	66
4.13.1	Parts catcher does not advance .....	66
4.13.2	Parts catcher does not return .....	67
4.14	High-pressure coolant for main turret does not come out .....	68
4.15	Tail stock does not move .....	69
4.15.1	Tail stock does not advance .....	69
4.15.2	Tail stock does not return .....	71
4.16	Cut-off confirmation does not move .....	73
4.16.1	Cut-off confirmation does not advance .....	73
4.16.2	Cut-off confirmation does not return .....	74
4.17	Main spindle airblow does not work .....	75