

***Howa***

**KIWAMI** series

**MZN-U320H-VCJ α2**

**INSTRUCTION MANUAL**



**HOWA MACHINERY, LTD.**

# OPERATION MANUAL

---

**TABLE OF CONTENTS**

	Page
1. INTRODUCTION .....	1-1
2. SAFETY INSTRUCTIONS .....	2-1
3. SPECIFICATION OF MACHINE AND NC UNIT .....	3-1
3.1 Standard specification of machine .....	3-1
3.2 Standard functions of CNC unit .....	3-2
3.3 M code list .....	3-3
3.4 G code list .....	3-5
3.5 Overall view .....	3-7
3.6 Strokes .....	3-8
3.7 Jig design .....	3-9
3.7.1 Jig design reference .....	3-9
3.7.2 Table detail drawing .....	3-10
3.7.3 Ports for pneumatic pressure .....	3-11
4. ENVIRONMENT, TRANSFER, AND INSTALLATION .....	4-1
4.1 Working environment .....	4-1
4.2 Lifting of machine .....	4-1
4.3 Installation .....	4-3
5. INSPECTION BEFORE TEST RUN .....	5-1
6. OPERATION .....	6-1
6.1 Function of operating parts .....	6-1
6.2 Preparation for operation .....	6-9
6.3 Manual operation .....	6-9
6.4 MDI operation .....	6-9
6.5 ATC sequence .....	6-10
6.6 Automatic operation .....	6-12
6.7 Handle operation .....	6-12
6.8 Routine operation procedure .....	6-12

	Page
6.9 How to set tools in MG, and ATC operating .....	6-14
6.9.1 Attaching and detaching of tools .....	6-14
6.9.2 Preparation for tool registration .....	6-15
6.9.3 Tool registration .....	6-15
6.9.4 Tool offset .....	6-16
6.9.5 Setting direction of specify boring shift .....	6-17
6.9.6 Restoration measures for POWER OFF and EMERGENCY STOP during ATC .....	6-18
6.9.7 PLC Interface Diagnosis .....	6-19
6.10 PLC switch .....	6-23
6.10.1 Display of PLC-SW screen .....	6-23
6.10.2 PLC-SW ON / OFF .....	6-23
7. INTERLOCK .....	7-1
7.1 Axis movement .....	7-1
7.2 Spindle orientation .....	7-1
7.3 ATC operation (M06) .....	7-1
7.4 Magazine index by T-command .....	7-1
7.5 Automatic operation .....	7-1
8. PROGRAMMING AND PROGRAM TRYOUT .....	8-1
8.1 Introduction .....	8-1
8.2 Setup before machining .....	8-1
8.3 Program .....	8-2
8.3.1 New program registration .....	8-2
8.3.2 MDI data registration in memory .....	8-2
8.3.3 Editing of program .....	8-3
8.3.4 Memory operation .....	8-3
8.4 Example of machining programs .....	8-4
8.5 Basic program for Jig-changer .....	8-8
8.6 Basic program for others .....	8-9
9. COOLANT UNIT (OPTIONAL) AND REMOVAL OF CHIPS .....	9-1

# MAINTENANCE MANUAL

---

**TABLE OF CONTENTS**

	Page
1. INTRODUCTION .....	1-1
1.1 Safety instructions .....	1-1
1.2 Periodic maintenance .....	1-2
2. CONFIGURATION .....	2-1
2.1 Configuration of MZN-320H-VCJ ( $\alpha 2$ ) .....	2-1
2.2 Layout of sensor, motor, and solenoid valve .....	2-2
2.3 Stroke setting of MZN-320H-VCJ ( $\alpha 2$ ) .....	2-3
2.4 Position switches .....	2-4
3. PERIODIC MAINTENANCE AND SERVICE .....	3-1
3.1 Daily maintenance and service .....	3-1
3.2 Monthly maintenance and service .....	3-1
3.3 Six - month maintenance and service .....	3-1
3.4 Greasing .....	3-2
3.5 Replacing battery and battery unit .....	3-4
3.5.1 Battery replacement .....	3-4
3.5.2 Replacing battery unit .....	3-6
3.5.3 Replacing batteries for auxiliary axes .....	3-7
3.5.4 Positions battery and battery unit .....	3-9
4. HOW TO DISPLAY SETUP PARAMETER SCREEN .....	4-1
5. MAINTENANCE AND ADJUSTMENT OF SPINDLE .....	5-1
5.1 Adjustment of spindle orientation .....	5-1
6. MAINTENANCE AND ADJUSTMENT OF FEED MECHANISM .....	6-1
6.1 Bolt tightening torque .....	6-1
6.2 Establish X-axis reference point .....	6-2
6.2.1 Zero setting .....	6-2
6.3 Soft limit .....	6-6

	Page
7. MAINTENANCE AND ADJUSTMENT OF ATC .....	7-1
7.1 ATC adjusting method .....	7-1
7.2 Method of checking and setting data at L0004, L0005 .....	7-1
7.3 Establish ATC Home Position .....	7-2
7.3.1 Adjustment ATC regular Position .....	7-2
7.3.2 Establish ATC axis home position .....	7-3
7.3.3 Check .....	7-6
7.4 Establish Magazine Home Position .....	7-7
7.4.1 Adjustment Magazine regular Position .....	7-7
7.4.2 Establish ATC axis home position .....	7-8
7.4.3 Check .....	7-10
7.5 Manual operation of solenoid valve for tool-pot .....	7-11
7.6 Adjustment of tool-pot advance / retract .....	7-12
8. MAINTENANCE AND ADJUSTMENT OF JIG-CHANGER .....	8-1
8.1 Zero setting of jig changer .....	8-1
9. TROUBLE-SHOOTING .....	9-1
9.1 In case Alarm indicator lamp lights .....	9-1
9.2 How to check the alarm .....	9-1
9.3 When the ALARM indicator lamp does not light but the CNC assumedly fails to execute the program during automatic operation .....	9-2
9.4 List of Alarms (DEVICE F) .....	9-3
9.5 Recovery from starting error : MR-J2-CT .....	9-13
9.6 Remedy the alarm of " tool-pot time over " .....	9-16
10. IN CASE ALL NC DATA HAS BEEN CLEARED .....	10-1
11. EXAMPLE OF PARAMETER SETTING OF I/O DEVICE .....	11-1