



FV-600/800/1000(A)(SE)

USER MANUAL



FAIR FRIEND ENT. GROUP- MACHINE TOOLS DIVISON
ADDRESS: No.133, Gong 1st Road, Taichung Industrial
Park, Taichung City, Taiwan, R.O.C.
TEL: (886) 4-3594075 (8 Lines)
FAX: (886) 4-3590318



CONTENT

Chapter 1	Mechanical Generality	
1.	Description of Machine-----	1-1
2.	Identification Marking-----	1-16
3.	Specifications-----	1-18
4.	Working Range-----	1-22
5.	Accessories-----	1-26
Chapter 2	Safety Instructions	
1.	General Safety Instructions-----	2-1
2.	Safety Instructions for Machine-----	2-3
3.	The Policy of Danger and Prevention-----	2-8
Chapter 3	Preparation before Installation	
1.	Foundation-----	3-1
2.	Power Requirement-----	3-3
Chapter 4	Transportation and Installation	
1.	Notice Items before Unpacking-----	4-1
2.	Notice Items for Unpacking-----	4-3
3.	Transportation after Unpacking-----	4-6
4.	Location of Machine Body-----	4-8
5.	Machine Installation-----	4-9
6.	Adjusting Method for Level-----	4-13
7.	Ground Connection-----	4-14
8.	Others-----	4-15