

RAM 500/RAM 630 MACHINING CENTERS

Operating Instruction Manual

**With the NumeriPath 8000 NumeriStation
Computer Numerical Control**

This document is based on information available at the time of its publication. While efforts have been made to render accuracy to its content, the information contained herein does not purport to cover all details or variations in hardware and software, nor to provide for every possible contingency in connection with installation, operation, programming, and maintenance. Features may be described herein which are not present in all hardware and software systems. Giddings and Lewis assumes no obligation of notice to holders of this document with respect to changes subsequently made.

Giddings and Lewis makes no representation or warranty, expressed, implied, or statutory with respect to, and assumes no responsibility for the accuracy, completeness, sufficiency or usefulness of the information contained in the manual.

Copyright© 1997 Giddings & Lewis, Inc.

Windows is a registered trademarks of Microsoft Corporation.
OS/2 and IBM are registered trademark of International Business Machines, Inc.
Intel is a registered trademark of Intel Corporation.

TABLE OF CONTENTS

SECTION	TITLE	PAGE
ONE	INTRODUCTION	1-1
	GENERAL	1-1
	SAFETY INTERLOCKS	1-1
	OPERATORS ACCESS DOOR	1-1
	DOOR IS OPEN	1-1
	DOOR IS CLOSED	1-2
	TOOL MATRIX ACCESS DOOR	1-2
	DOOR IS OPEN	1-2
	DOOR IS CLOSED	1-2
	TOOL LOAD ACCESS DOOR	1-2
	DOOR IS OPEN	1-2
	DOOR IS CLOSED	1-3
	MACHINE COMPONENTS	1-3
	COORDINATE SYSTEMS	1-4
MACHINE CONFIGURATION	1-5	
TWO	CONTROL OPERATOR DEVICES.....	2-1
	GENERAL INFORMATION.....	2-1
	CONTROL DESCRIPTION.....	2-1
	UPPER PORTION DEVICES	2-1
	TOUCH SCREEN DISPLAY & MOUSE POINTER.....	2-1
	SOFTKEYS S1 Thru S8 & LABELS	2-2
	DISPLAY RETURN Keys	2-3
	MAIN KEYBOARD Keys	2-3
	CURSOR & KEYBOARD BUFFER	2-3
	SYMBOL & ALPHA-NUMERIC CHARACTERS	2-3
	BACKSPACE Key	2-3
	ENTER Key	2-4
	SHIFT Key	2-4
	SPACE BAR.....	2-4
	CTRL (Control) Key	2-4
	ALT (Alternate) Key.....	2-5
	ESC (Escape) Key	2-5
	CAPS LOCK Key	2-5
	TAB Key.....	2-5
	DISPLAY AND CURSOR MOVEMENT Keys.....	2-5
	MENU Key.....	2-5
	Display Pages	2-5
	PAGE ADVANCE & BACKUP Keys.....	2-6
	A, B, C (page select) Keys	2-6
	CURSOR Keys	2-7
	Left & Right Cursor Keys	2-7
	Up & Down Cursor Keys	2-7
	MODE LOCK INDICATOR Lights.....	2-7
	NUMERIC KEYPAD.....	2-8
	CALC Key	2-8
	ENTER Key	2-9
	AUTO Key.....	2-9
	CELL AUTO Key.....	2-10
	ACTIVE PROGRAM Keys.....	2-10
	PATH RECOVERY Key	2-10
	LOAD OFFSET Key.....	2-10
	BLOCK DELETE Key.....	2-10
	OPT PRGM STOP Key.....	2-10

SECTION	TITLE	PAGE
	CYCLE OUT Key (Single Block)	2-10
	DRY RUN Key	2-10
	IN/MM Key	2-11
	MASTER CLEAR Key	2-11
	PAGE SELECT Keys	2-12
	LOAD/DELETE Key	2-12
	EDIT Key	2-13
	PUNCH Key	2-13
	OFFSETS Key	2-13
	REFERENCE MODE Key	2-13
	PROGRAM CHANGE SELECTOR	2-13
	INDICATOR LIGHTS (LEDs)	2-14
	HARD DISK Light	2-14
	MACHINE NOT REF Light	2-14
	OPERATOR MESSAGE Light	2-14
	FAULT Light	2-15
	CRT DISPLAY SCREENS	2-15
	MAJOR & MINOR DISPLAY PAGES	2-15
	DISPLAYING THE GENERAL DISPLAY PAGES	2-16
	DISPLAYING A MAJOR PAGE	2-16
	DISPLAYING A MINOR PAGE	2-16
	DISPLAY SCREENS	2-16
	MAIN MENU	2-18
	ACTUAL POSITION	2-19
	ACTIVE DATA	2-20
	BUFFER	2-21
	OPERATOR MESSAGES	2-23
	DATA STORAGE DEVICES	2-24
	MEMORY DEVICES	2-24
	DISK DRIVE DEVICES	2-24
	OTHER DEVICES	2-25
	OFFSET MEMORY DEVICES	2-25
THREE	MACHINE OPERATOR DEVICES	3-1
	GENERAL INFORMATION	3-1
	GENERAL DEVICES	3-1
	MACHINE START Pushbutton	3-1
	EMERGENCY STOP Pushbutton	3-2
	MACHINE STOP Pushbutton (Optional)	3-2
	CYCLE START Pushbutton	3-2
	CYCLE ABORT Pushbutton	3-4
	COOLANT ENABLE Pushbutton	3-4
	DRAWBAR OUT/IN Pushbuttons	3-4
	MANUALLY CHANGING TOOLS	3-5
	AXIS MOTION DEVICES	3-5
	FEED % OVERRIDE CONTROL	3-6
	CYCLE INTERRUPT Pushbutton	3-6
	AXIS SELECTOR Keys	3-7
	JOG+ / JOG- Keys	3-9
	MANUAL JOGGING OF THE AXES	3-10
	INCREMENTAL MODE Keys	3-10
	MANUAL PULSE GENERATOR	3-11
	MANUAL INCREMENTING OF THE AXES	3-12
	END OF TRAVEL AND SOFT END LIMITS	3-12
	POSITIVE STOP	3-12
	SOFT END LIMITS	3-13
	Axis Soft End Limit Violation	3-13

SECTION	TITLE	PAGE
	SPINDLE ROTATION DEVICES.....	3-14
	SPIN KEY.....	3-14
	SPINDLE SPEED % OVERRIDE CONTROL.....	3-15
	SPINDLE STOP Pushbutton.....	3-15
	SPINDLE ROTATION CONTROL.....	3-15
	SPINDLEJOG.....	3-15
	SPEED SELECTION.....	3-16
	SPINDLE ROTATION DIRECTION SELECTION.....	3-16
	SPINDLE ROTATION START AND STOP.....	3-16
	SPINDLE ORIENT (M19).....	3-17
	MANUAL SPINDLE OPERATION.....	3-17
	CHIP CONVEYOR DEVICES.....	3-18
	AUTO Pushbutton.....	3-18
	FORWARD Pushbutton.....	3-18
	REVERSE Pushbutton.....	3-18
	STOP Pushbutton.....	3-18
	OPERATION.....	3-18
	MANUAL MODE.....	3-19
	AUTO MODE.....	3-19
	JAM-UP MONITOR.....	3-19
	PALLET STATION DEVICES.....	3-19
	TOOL CHANGER DEVICES.....	3-20
FOUR	STARTUP & SHUTDOWN.....	4-1
	GENERAL.....	4-1
	START-UP.....	4-1
	PRE-POWERUP PROCEDURE.....	4-1
	POWER-UP PROCEDURE.....	4-2
	MACHINE START-UP PROCEDURE.....	4-3
	REFERENCING.....	4-4
	Machine Reference Procedure.....	4-4
	Tool Reference Procedure.....	4-5
	Pallet Reference Procedure.....	4-5
	BASIC MACHINE OPERATIONS.....	4-6
	MACHINE SETUP.....	4-6
	PROGRAM OPERATION.....	4-6
	SHUTDOWN.....	4-7
	NORMAL SHUTDOWN PROCEDURE.....	4-7
	EXTENDED SHUTDOWN PROCEDURE.....	4-7
FIVE	REFERENCING.....	5-1
	GENERAL INFORMATION.....	5-1
	MACHINE REFERENCING.....	5-2
	TYPE 1 - MACHINE REFERENCE ONLY.....	5-2
	TYPE 2 - MACHINE REFERENCE.....	5-2
	TYPE 3 - MACHINE/PART REFERENCE.....	5-3
	MACHINE REFERENCE PROCEDURE.....	5-3
	PART REFERENCING.....	5-5
	PART REFERENCING USING THE REFERENCE DISPLAY.....	5-5
	PART REFERENCING WITH A G92.....	5-6
	ABSOLUTE REFERENCING.....	5-6
	ABSOLUTE REFERENCING USING THE REFERENCE DISPLAY.....	5-7
	ABSOLUTE REFERENCING WITH A G92.....	5-8
	AUXILIARY REFERENCE CYCLE.....	5-8
	TOOL REFERENCE.....	5-8
	TOOL REFERENCE PROCEDURE.....	5-8

SECTION	TITLE	PAGE	
SIX	AUTOMATIC TOOL CHANGER.....	6-1	
	GENERAL.....	6-1	
	DEVICES LOCATED ON THE TOOL CHANGER.....	6-1	
	MANUAL PUSHBUTTON	6-1	
	CW JOG PUSHBUTTON.....	6-1	
	CCW JOG PUSHBUTTON	6-2	
	EMERGENCY STOP PUSHBUTTON	6-2	
	LOADING/UNLOADING THE TOOL MATRIX.....	6-2	
	LOADING A TOOL INTO THE MATRIX.....	6-2	
	UNLOADING A TOOL FROM THE MATRIX	6-3	
	CHANGING TOOLS AUTOMATICALLY	6-3	
	Txxxx Tool Number	6-3	
	M06 TOOL CHANGE COMMAND.....	6-4	
	M47 SLOW TOOL CHANGE COMMAND	6-5	
	PROGRAMMING EXAMPLES	6-5	
	EXAMPLE 1	6-5	
	EXAMPLE 2	6-5	
	AXES MOTION SEQUENCES AND TOOL CHANGE CYCLE	6-5	
	HAND-HELD WAND TYPE TOOL ID READER (OPTIONAL).....	6-5	
	ADD TOOL.....	6-6	
	REMOVE TOOL	6-6	
	ID WAND	6-6	
	OPERATION SEQUENCE.....	6-6	
	ADDING A TOOL TO THE MATRIX	6-6	
	REMOVING A TOOL FROM THE MATRIX.....	6-7	
	TOOLS WITHOUT ID CHIPS	6-8	
	CELL OPERATION.....	6-8	
	SEVEN	TOOL OFFSETS	7-1
		GENERAL INFORMATION.....	7-1
		OFFSETS KEY.....	7-1
		TOOL OFFSET DATA.....	7-1
		TOOL OFFSET LENGTHS	7-1
CUTTER RADIUS COMPENSATION.....		7-2	
APPLYING CUTTER RADIUS COMPENSATION		7-4	
Example 1 - Cutter Compensation Applied On G00		7-4	
Example 2 - Cutter Compensation Applied On G00		7-4	
Example 3 - Cutter Compensation Applied On G01		7-4	
Example 4 - Cutter Compensation Applied On G02 Or G03.....		7-5	
DETAILS OF CUTTER COMPENSATION.....		7-5	
Example 5 - No Cutter Compensation Used On Outside Corner ...		7-6	
Example 6 - Oversize Cutter On An Outside Corner.....		7-6	
Example 7 - Undersize Cutter On An Outside Corner.....		7-6	
Example 8 - Taper Cuts On The Outside Of The Part		7-7	
Example 9 - Rapid Move (G00) Between G01 Moves		7-7	
Example 10 - No Cutter Compensation Used On An Inside Corner		7-7	
Example 11 - Oversize Cutter On An Inside Corner.....		7-8	
Example 12 - Undersize Cutter On An Inside Corner.....		7-8	
Example 13 - Taper Cuts On An Inside Corner.....		7-8	
ILLEGAL COMMANDS - CUTTER COMPENSATION TOO BIG.....		7-9	
Example 14 - Radius Value Larger Than Next Move	7-9		
Example 15 - Radius Value Larger Than Next Move.....	7-9		
REMOVING CUTTER RADIUS COMPENSATION.....	7-9		
Example 16 - Radius Compensation Removed / G00.....	7-10		
Example 17 - Radius Compensation Cancel / G40 And G00	7-10		
Example 18 - Radius Compensation Cancel / G40 And G02/G03	7-10		

SECTION

TITLE

PAGE

TOOL OFFSETS DISPLAY.....	7-11
TOOL OFFSETS PAGES.....	7-11
OTHER DATA SOFTKEY	7-12
ROWS.....	7-12
COLUMNS.....	7-12
LENGTH & RADIUS PAGE.....	7-12
OVERRIDES & MONITOR PAGE	7-13
SOFTKEY GROUPS	7-14
OTHER KEYS SOFTKEY	7-14
TOOL OFFSETS SOFTKEYS.....	7-14
SEARCH SOFTKEY.....	7-14
Procedure To Search The Tool Data.....	7-14
MODIFY SOFTKEY	7-14
Procedure To Modify The Tool Data	7-14
STORE SOFTKEY.....	7-14
Procedure To Store Tool Data.....	7-14
AUTO SET SOFTKEY.....	7-15
Procedure To Autoset Tool Length.....	7-15
CLEAR OFFSET SOFTKEY	7-15
CLEAR TIME SOFTKEY.....	7-16
EDIT COMMENT SOFTKEY.....	7-16
CLEAR MEMORY SOFTKEY.....	7-16
Procedure To Clear Memory	7-17
BEGIN OUTPUT SOFTKEY	7-17
FILE OPER SOFTKEY	7-17
SOFTKEY OPERATION CONTROL FEATURES	7-17
Password Protection Feature.....	7-17
Softkey Confirmation Feature	7-18
FEED & SPEED OVERRIDES	7-18
TOOL LIFE MONITOR.....	7-18
COMMENTS.....	7-19
LOADING TOOL OFFSET DATA.....	7-19
AUTOMATICALLY LOADING TOOL OFFSETS.....	7-19
LOAD OFFSETS Key.....	7-19
PART PROGRAM TOOL DATA BLOCKS.....	7-20
LOADING FROM A PART PROGRAM.....	7-21
Procedure to Load Tool Data During	
Initial Part Program Execution.....	7-21
LOADING FROM A TOOL DATA PROGRAM.....	7-21
Procedure To Load Tool Data From A Tool Data Program.....	7-22
MANUALLY LOADING TOOL OFFSETS	7-22
SEARCHING FOR TOOL OFFSETS.....	7-23
D CODE SEARCHES.....	7-23
DIRECT SEARCH	7-23
STEP SEARCHES.....	7-23
Previous D code Step Search Procedure	7-23
Next D code Step Search Procedure.....	7-23
CHANGE SEARCH	7-24
CHANGING TOOL DATA	7-24
DISPLAYING THE TOOL OFFSETS PAGES & SOFTKEYS.....	7-24
D CODE DATA ENTRIES.....	7-25
OUTPUTTING TOOL OFFSET DATA	7-26
TOOL DATA OUTPUT VIA THE TOOL OFFSETS PAGE.....	7-26
DISPLAYING THE BEGIN OUTPUT SOFTKEY	7-27
OUTPUTTING TO A 3.5" FLOPPY DISK	7-27
Procedure To Record On A Disk	7-27
OUTPUTTING TO A PERIPHERAL DEVICE.....	7-27
Procedure To Output To A Peripheral Device	7-27

SECTION	TITLE	PAGE
	RESTORING TOOL OFFSETS	7-28
	ACTIVATING TOOL DATA.....	7-28
EIGHT	AXIS AND FIXTURE OFFSETS	8-1
	GENERAL INFORMATION.....	8-1
	AXIS OFFSETS	8-1
	FIXTURE OFFSETS.....	8-2
	DYNAMIC FIXTURE OFFSETS (Optional)	8-3
	(DYN,) - DYNAMIC OFFSET	8-3
	EXAMPLE8A - DRILL FOUR HOLES USING B AXIS WITH DYNAMIC FIXTURE OFFSETS	8-4
	THE OFFSETS KEY.....	8-6
	FIXTURE OFFSET DISPLAY.....	8-6
	ROWS.....	8-6
	COLUMNS	8-7
	FIXTURE OFFSETS PAGES.....	8-7
	FIXTURE OFFSETS SOFTKEYS	8-8
	OTHER KEYS SOFTKEY	8-8
	OTHER DATA SOFTKEY	8-8
	SEARCH SOFTKEY.....	8-8
	MODIFY SOFTKEY	8-8
	Procedure to Modify the Data of the Highlighted E code.....	8-8
	STORE SOFTKEY.....	8-9
	Procedure to Store Data Entries into Highlighted E code.....	8-9
	CLEAR LINE SOFTKEY	8-9
	BEGIN OUTPUT SOFTKEY	8-9
	FILE OPER SOFTKEY	8-9
	CLEAR MEMORY SOFTKEY.....	8-10
	Procedure to Clear Memory	8-10
	SOFTKEY OPERATION CONTROL FEATURES	8-10
	Password Protection Feature.....	8-10
	Softkey Confirmation Feature	8-11
	LOADING FIXTURE OFFSET DATA	8-11
	AUTOMATICALLY LOADING FIXTURE OFFSETS	8-12
	LOAD OFFSETS Key.....	8-12
	PART PROGRAM FIXTURE OFFSET DATA BLOCKS.....	8-12
	LOADING FROM A PART PROGRAM.....	8-13
	Procedure to Load Data During Initial Part Program Execution....	8-13
	LOADING FROM A FIXTURE OFFSET DATA PROGRAM	8-14
	Procedure To Load Data From A Fixture Offset Data Program....	8-14
	MANUALLY LOADING FIXTURE OFFSETS.....	8-15
	SEARCHING FOR FIXTURE OFFSETS	8-15
	E CODE SEARCHES.....	8-15
	DIRECT SEARCH	8-15
	STEP SEARCHES.....	8-15
	Previous E code Step Search Procedure	8-16
	Next E code Step Search Procedure.....	8-16
	CHANGE SEARCH	8-16
	CHANGING FIXTURE OFFSET DATA.....	8-16
	FIXTURE OFFSET DATA ENTRIES.....	8-17
	OUTPUTTING FIXTURE OFFSET DATA.....	8-18
	DISPLAYING THE BEGIN OUTPUT SOFTKEY	8-18
	OUTPUTTING TO A 3.5" FLOPPY DISK	8-19
	OUTPUTTING TO A PERIPHERAL DEVICE.....	8-19
	ACTIVATING FIXTURE OFFSET DATA.....	8-20

SECTION	TITLE	PAGE	
NINE	FILE OPERATIONS	9-1	
	GENERAL INFORMATION.....	9-1	
	DATA FILE NAMES AND STORAGE DEVICES.....	9-2	
	BASIC INFORMATION.....	9-2	
	DATA FILENAMES	9-3	
	DATA STORAGE DEVICES.....	9-3	
	COMMANDS LINE	9-3	
	SOFTKEYS	9-5	
	START DIRECTORY (S1)	9-5	
	CONTINUE DIRECTORY (S2)	9-5	
	EXPANDED DIR DATA (S3).....	9-5	
	FORMAT DISK (S4).....	9-5	
	SHOW DEVICES (S5)	9-6	
	ASSIGN PORT (S6).....	9-6	
	SET DEFAULT DEVICE (S7)	9-6	
	OTHER KEYS (S8).....	9-7	
	COPY FILE (S3).....	9-7	
	COPYING WITH WILDCARDS	9-7	
	DELETE FILE (S4).....	9-8	
	DELETING WITH WILDCARDS.....	9-8	
	RENAME FILE (S5).....	9-9	
	CHANGE ATTRIBUTES (S6).....	9-9	
	COPY FILE DISK-DISK (S7).....	9-9	
	(FOP,) TYPE 2 COMMAND.....	9-10	
	FOPSTATUS KEYWORD.....	9-11	
	TEN	PART PROGRAM STORAGE (PPS).....	10-1
		GENERAL.....	10-1
		KEYS USED IN PART PROGRAM STORAGE PROCEDURES.....	10-1
		LISTING OF PROGRAMS IN PART PROGRAM STORAGE	10-2
		PART PROGRAM DIRECTORY.....	10-2
		PROCEDURE TO DISPLAY THE PROGRAM DIRECTORY PAGE ...	10-2
		DIRECTORY INFORMATION.....	10-2
		PART PROGRAM DIRECTORY SOFTKEYS.....	10-3
		LOADING PART PROGRAMS.....	10-3
PROGRAM STORAGE LOAD/DELETE PAGE.....		10-4	
LOAD/DELETE SOFTKEYS.....		10-4	
LOADING PROCEDURES.....		10-5	
DELETE ALL PROGRAMS Softkey (S7)		10-5	
NO COMMENTS/COMMENTS Softkey (S5)		10-5	
LOADING FROM A DISK.....		10-7	
PROCEDURE TO LOAD FROM A DISK.....		10-7	
LOADING FROM A PUNCHED TAPE		10-7	
PROCEDURE TO LOAD FROM A PUNCHED TAPE		10-7	
LOADING FROM A PERIPHERAL DEVICE		10-8	
PROCEDURE TO LOAD FROM A PERIPHERAL DEVICE		10-8	
ERRORS IN LOADING.....		10-8	
COMMON LOADING ERROR MESSAGES.....		10-8	
RESTARTING THE LOAD AFTER A LOAD ERROR		10-9	
Procedure to Restart the Load.....		10-9	
CNC 800 PUNCHED TAPE COMPATIBILITY (OPTIONAL).....		10-10	
CREATING & EDITING PART PROGRAMS		10-10	
PROGRAM CHANGE (KEY-OPERATED) SELECTOR		10-10	
SELECTOR IN THE 'ALLOW' POSITION		10-11	
SELECTOR IN THE 'INHIBIT' POSITION		10-11	
PROGRAM STORAGE EDIT PAGE.....		10-11	
Procedure To Display The Program Storage Edit Page.....		10-11	

SECTION**TITLE****PAGE**

	PROGRAM STORAGE EDIT SOFTKEYS	10-11
	CREATE PROGRAM SOFTKEY	10-12
	Procedure to Name a New Part Program	10-12
	Placing Blocks Within the Part Program.....	10-13
	RENAME PROGRAM SOFTKEY.....	10-13
	Procedure to Change a Program's Name	10-13
	DELETE PROGRAM SOFTKEY.....	10-14
	Procedure to Eliminate a Program from PPS	10-14
	EDIT PROGRAM SOFTKEY.....	10-14
	PART PROGRAM EDITOR PAGE	10-14
	DISPLAYING THE PROGRAM EDITOR PAGE.....	10-14
	Procedure to Enter the EDIT PROGRAM Mode.....	10-15
	Procedure to Leave the EDIT PROGRAM Mode.....	10-15
	PROGRAM EDITOR PAGE DESCRIPTION.....	10-15
	USING THE PAGE.....	10-15
	Identifying Program Blocks	10-16
	Typing in the Sequence Number	10-16
	The Hi-lighted Program Block.....	10-16
	Using the EDIT Key with the PROGRAM EDITOR Page	10-16
	BLOCK SEARCH SOFTKEYS	10-16
	DIRECT SEARCHES.....	10-16
	Direct Search Forward	10-16
	Direct Search Backward.....	10-17
	STEP SEARCHES.....	10-17
	Previous BLOCK STEP SEARCH.....	10-17
	Next BLOCK STEP SEARCH	10-17
	STRING SEARCHES.....	10-17
	Forward STRING SEARCH.....	10-17
	Backward STRING SEARCH	10-18
	BLOCK EDITOR SOFTKEYS.....	10-18
	FIRST BLOCK SOFTKEY	10-18
	Procedure to Place a Block at the Beginning of the Program....	10-18
	Procedure to Permanently Name a Program.....	10-19
	NEW BLOCK SOFTKEY.....	10-19
	Procedure to Insert a Block After the Hi-lighted Block	10-19
	REPLACE BLOCK SOFTKEY	10-20
	Procedure to Modify a Program Block.....	10-20
	DELETE BLOCK SOFTKEY	10-20
	Procedure to Eliminate a Program Block	10-20
	OUTPUTTING PART PROGRAMS	10-21
	PROGRAM STORAGE PUNCH PAGE.....	10-21
	THE OUTPUT SOFTKEYS	10-21
	GENERAL OUTPUTTING PROCEDURES.....	10-22
	OUTPUTTING FROM PPS TO THE DISK UNIT	10-23
	PROCEDURE FOR OUTPUTTING TO THE DISK UNIT	10-23
	OUTPUTTING TO PERIPHERAL DEVICE.....	10-24
	PROCEDURE FOR OUTPUTTING TO A PERIPHERAL DEVICE	10-24
	ERRORS IN OUTPUTTING	10-24

ELEVEN

	PROGRAMMING CODES AND KEYWORDS.....	11-1
	GENERAL INFORMATION.....	11-1
	WORD ADDRESSES	11-1
	PREPARATORY FUNCTIONS (G CODES)	11-2
	MISCELLANEOUS FUNCTIONS (M CODES).....	11-3
	TYPE 2 DATA COMMANDS.....	11-4
	SYSTEM KEYWORDS	11-6
	MISCELLANEOUS KEYWORDS	11-6
	TOOL, FIXTURE & AXIS OFFSET KEYWORDS	11-6

SECTION**TITLE****PAGE**

RETRACT/RETURN KEYWORDS.....	11-7
RANDOM TOOLING KEYWORDS.....	11-7
PROBING KEYWORDS.....	11-7
HORSEPOWER MONITOR KEYWORD.....	11-7
CANNED CYCLES.....	11-8
DESCRIPTION OF CANNED CYCLES.....	11-9
G80 - CANNED CYCLE CANCEL.....	11-9
G81 - DRILL/BORE CYCLE.....	11-9
G82 - DRILL / BORE / DWELL CYCLE.....	11-10
G83 - DEEP HOLE DRILL CYCLE.....	11-11
G84 - TAP CYCLE.....	11-12
Spindle Speeds for Tapping.....	11-13
Tap Retract Speed-Up.....	11-13
G85 - REAM CYCLE.....	11-14
G86 - BORE / DWELL / STOPPED SPINDLE RETRACT CYCLE.....	11-15
G87 - CHIP BREAKER DRILL CYCLE.....	11-16
G88 - BORE / ORIENT SPINDLE/ MOVE OFF CENTER	
/ RETRACT CYCLE.....	11-17
G89 - BACK BORE CYCLE.....	11-18

TWELVE

PROGRAM STRUCTURES, VARIABLES, & LEVELS.....	12-1
GENERAL INFORMATION.....	12-1
PROGRAM STRUCTURES.....	12-1
THE MAIN PROGRAM.....	12-1
LOCAL SUBROUTINES.....	12-1
GLOBAL SUBROUTINES.....	12-3
USER DEFINED CYCLES (G800 - G899).....	12-5
REPEATS.....	12-6
PROGRAM VARIABLES.....	12-8
PARAMETERS.....	12-8
LOCAL PARAMETERS - P1 THRU P99.....	12-9
GLOBAL PARAMETERS - P101 THRU P256 (P999 - optional).....	12-9
ASCII PARAMETERS - A101 THRU A120.....	12-10
KEYWORDS.....	12-10
PROGRAM LEVELS.....	12-10
NESTING OF LEVELS.....	12-11
THE OUTERMOST & INNERMOST LEVELS.....	12-11
PROGRAM HELP PAGES.....	12-11
SUBROUTINE HELP PAGE.....	12-11
PAGE DESCRIPTION.....	12-12
Column Headings of the Program Levels.....	12-12
DISPLAY OF LEVELS ON THE SUBROUTINE HELP PAGE.....	12-13
DETAIL LEVEL PAGE.....	12-14
SHOWING A LEVEL IN DETAIL.....	12-14
LOCAL PARAMETERS.....	12-15
NEXT & PREVIOUS GROUP Softkeys.....	12-15
Procedure to update a local parameter.....	12-15
LOOP COUNT.....	12-15
Procedure to Update the Loop Count.....	12-15
SEARCHING & EXITING THE INNERMOST LEVEL.....	12-16
SEARCHING WITHIN THE INNERMOST LEVEL.....	12-16
Procedure to use the SEQUENCE SEARCH key.....	12-16
EXITING THE INNERMOST LEVEL.....	12-17
Procedure to leave the innermost level.....	12-17
KEYWORDS PAGE.....	12-18
GLOBAL PARAMETERS PAGE.....	12-18
ASCII PARAMETERS PAGE.....	12-19

SECTION	TITLE	PAGE
THIRTEEN	MDI & PART PROGRAM OPERATIONS	13-1
	GENERAL INFORMATION.....	13-1
	BUFFER PAGE.....	13-1
	DISPLAYING THE BUFFER PAGE	13-1
	PAGE DESCRIPTION.....	13-1
	STAGES OF BLOCK EXECUTION.....	13-3
	STAGES OF EXECUTION FOR AN MDI BLOCK.....	13-4
	ENTERING & EXECUTING AN MDI BLOCK.....	13-4
	PROCEDURE TO ENTER & EXECUTE AN MDI BLOCK.....	13-4
	PART PROGRAM EXECUTION.....	13-4
	PROGRAM DIRECTORY	13-5
	PROCEDURE TO DISPLAY THE PROGRAM DIRECTORY	13-5
	Listing Of Part Programs In The Program Directory.....	13-5
	ACTIVATING & EXECUTING A PART PROGRAM.....	13-6
	ACTIVATING A PART PROGRAM	13-6
	Procedure To Activate A Part Program.....	13-6
	ACTIVATING A DEVICE AND PART PROGRAM.....	13-6
	EXECUTING THE ACTIVE PART PROGRAM.....	13-7
	Procedure To Place The Control In The Auto Mode.....	13-7
	Procedure To Start Part Program Execution.....	13-7
	Procedure To Stop Part Program Execution	13-8
	SEARCHING THROUGH THE ACTIVE PROGRAM.....	13-8
	SEARCHING TO THE PROGRAM START AND/OR END	13-9
	SEQUENCE BLOCK SEARCH.....	13-9
	Multiple Occurrences	13-9
	REFERENCE STOP CODE SEARCH	13-10
	ASCII TEXT SEARCH.....	13-10
	SEARCH EXAMPLES.....	13-10
	EXECUTION OPTION KEYS.....	13-10
	LOAD OFFSETS Key.....	13-11
	BLOCK DELETE Key.....	13-11
	OPT PRGM STOP & CYCLE OUT Keys.....	13-11
	Cycling-Out Of The Executing Program.....	13-11
	Halting Execution With An Optional Program Stop.....	13-12
	PATH RATE LIMITS	13-13
	SOFTKEYS.....	13-14
	RUN-FROM-DEVICE.....	13-14
	CAM* ' DEVICES.....	13-14
	CURRENT SOURCE ASSIGNMENTS	13-15
	ACTIVE KEYS	13-16
	MAXOPN' MACHINE CONSTANT	13-16
	(PGM,...) and RUN-FROM-DEVICE.....	13-17
	HOST and RUN-FROM-DEVICE (CELLS ONLY)	13-17
	IMPORTANT NOTES	13-17
	EXAMPLE of RUN-FROM-DEVICE.....	13-18
	DEACTIVATING A PROGRAM	13-18
	DRY RUN MODE	13-18
DRY RUN FEEDRATE OVERRIDES.....	13-19	
ENTERING AND LEAVING THE DRY RUN MODE.....	13-19	
FOURTEEN	CYCLE INTERRUPT AND PATH RECOVERY	14-1
	GENERAL INFORMATION.....	14-1
	DEFINITIONS OF PATH RECOVERY ELEMENTS	14-1
	DISTANCE TO GO PAGE	14-2
	PROCEDURE TO DISPLAY THE DISTANCE TO GO PAGE.....	14-3

SECTION	TITLE	PAGE
	CYCLE INTERRUPT PROCEDURES	14-3
	ENTERING CYCLE INTERRUPT	14-3
	PROCEDURE TO ENTER CYCLE INTERRUPT	14-3
	IN CYCLE INTERRUPT	14-3
	MACHINE SLIDE MOVEMENT	14-3
	CHANGING TOOL MEMORY DATA	14-3
	EXITING CYCLE INTERRUPT	14-4
	PROCEDURE TO MANUALLY EXITING	14-4
	AUTOMATICALLY EXITING	14-4
	PATH RECOVERY ZONE	14-4
	Procedure To Automatically Exit Cycle Interrupt	14-5
FIFTEEN	RETRACT/RETURN.....	15-1
	GENERAL INFORMATION.....	15-1
	PROGRAM CODE FORMAT	15-1
	ENABLE CODES.....	15-1
	ENR.....	15-1
	ENS.....	15-3
	ENE.....	15-3
	DISABLE CODES.....	15-5
	DSR.....	15-5
	DSS.....	15-6
	DSE.....	15-6
	KEYWORDS.....	15-6
	PROGRAM EXAMPLES OF SETTING UP ENABLES.....	15-6
SIXTEEN	RANDOM TOOLING.....	16-1
	GENERAL INFORMATION.....	16-1
	RANDOM TOOL DATA.....	16-2
	tool type.....	16-2
	ld	16-2
	Pocket	16-2
	Tcode	16-2
	X, Y, Z, R.....	16-3
	S.....	16-3
	A.....	16-3
	M.....	16-3
	J.....	16-3
	K.....	16-3
	H.....	16-3
	Q	16-4
	RANDOM TOOLING DATA LIMITS	16-5
	TOOL STATUS.....	16-5
	TOOL TIME MONITOR	16-5
	Tool Order.....	16-6
	RANDOM TOOLING SOFTKEYS	16-6
	SOFTKEY OPERATION CONTROL FEATURES	16-7
	Password Protection Feature.....	16-8
	Softkey Confirmation Feature	16-8
	TOOL OFFSET DATA.....	16-8
	INPUTTING TOOL DATA	16-9
	MANUAL DATA CONTROL	16-9
	SEARCHING PROCEDURES	16-9
	Tool Type Search Procedure.....	16-9
	Tool Number Search Procedure.....	16-10
	Pocket Number Search Procedure.....	16-10
	CREATING TOOL DATA.....	16-10

SECTION	TITLE	PAGE
	AUTOSETTING TOOLS	16-11
	Procedure To Autoset Tool Length.....	16-11
	EDITING TOOL DATA.....	16-11
	REMOVING TOOL DATA.....	16-12
	Procedure To Clear Tool Type Data.....	16-12
	Procedure To Delete Single Tool Type Data	16-12
	Procedure To Delete Entire Tool Type File	16-13
	AUTOMATIC DATA CONTROL.....	16-13
	PROGRAM DATA FILES	16-13
	OTHER PROGRAMMING CODES.....	16-14
	RANDOM TOOLING DATA SETUP	16-16
	Tool Data File.....	16-16
	T code Program	16-16
	OUTPUTTING TOOL DATA	16-17
	OUTPUT VIA 'BEGIN OUTPUT' (S1) SOFTKEY.....	16-18
	DISPLAYING THE BEGIN OUTPUT SOFTKEY.....	16-18
	Procedure To Display the BEGIN OUTPUT Softkey.....	16-18
	OUTPUTTING TO THE DEVICE	16-18
	Procedure To Output To A Device	16-18
	OUTPUT VIA 'FILE OPERATIONS'.....	16-19
	DISPLAYING THE FILE OPERATIONS SCREEN	16-19
	Procedure To Display the FILE OPERATIONS Screen	16-19
	OUTPUTTING TO THE DEVICE	16-19
	Softkey Procedure To Copy Data To A Device	16-19
	Command Procedure To Copy Data To A Device.....	16-20
	RESTORING TOOL DATA.....	16-20
	TOOL IDENTIFICATION.....	16-20
	TOOLING DISPLAY.....	16-21
	HOW THE SYSTEM WORKS.....	16-22
	SCAN AND UPDATE METHOD.....	16-22
	Adding Tools.....	16-23
	Removing Tools.....	16-25
	SCAN AND VERIFY METHOD.....	16-25
	Adding Tools.....	16-26
	Removing Tools.....	16-26
	TOOL ID STATUS.....	16-26
	TOOL ID TYPE 2 COMMAND.....	16-26
	CELL OPERATION.....	16-27
	RETRACT/RETURN USED WITH RANDOM TOOLING	16-27
SEVENTEEN	ADAPTIVE CONTROL AND HORSEPOWER MONITOR	17-1
	GENERAL INFORMATION.....	17-1
	PROGRAMMING CODES	17-1
	G52 FRICTION LOSS CYCLE	17-2
	HORSEPOWER MONITOR	17-2
	CRT SCREENS	17-2
	SOFTKEYS.....	17-3
	EXAMPLE.....	17-5

SECTION

TITLE

PAGE

EIGHTEEN

NUMERIPROBE	18-1
GENERAL INFORMATION.....	18-1
PROBE COMPONENTS	18-1
PART PROBE COMPONENTS.....	18-1
TOOL PROBE COMPONENTS	18-3
THEORY OF OPERATION.....	18-4
PART PROBE	18-4
TOOL PROBE.....	18-6
PROBE INTERFACE AND PROTECTION.....	18-6
PROBE DISPLAY	18-7
PROBE PROGRAMMING CODES.....	18-9
PROBE MISCELLANEOUS CODES	18-9
PROBE KEYWORDS.....	18-9
TYPE 2 PROBE COMMANDS.....	18-9
PROBING CYCLES.....	18-10
PROBE MEASUREMENT VALUES.....	18-10
CANNED PROBING CYCLES	18-11
BASIC PROBE CYCLE (BPC).....	18-11
PART PROBE CYCLES	18-12
CYCLE FUNCTION PARAMETER.....	18-12
PROBING A SINGLE SURFACE.....	18-13
ADDITIONAL PARAMETER INPUT	18-13
PROBING A BORE or RECTANGULAR POCKET.....	18-16
ADDITIONAL PARAMETER INPUT	18-16
PROBE BORE and RECTANGLE EXAMPLES	18-16
TWO SURFACE DIMENSION or LENGTH MEASUREMENT	18-18
ADDITIONAL PARAMETER INPUT	18-18
TWO SURFACE LENGTH MEASUREMENT EXAMPLE	18-19
ID/OD MEASUREMENT	18-20
ADDITIONAL PARAMETER INPUT	18-21
ID/OD MEASUREMENT EXAMPLE.....	18-22
PROBE DATUM BUSHING	18-23
EXAMPLES.....	18-23
TOOL PROBE CYCLES.....	18-24
NON-ROTATING TOOL PROBE CYCLES	18-24
CYCLE FUNCTION PARAMETER.....	18-24
TOOL PROBE CYCLE PARAMETERS	18-24
TOOL PROBE EXAMPLES.....	18-25
Probe Drill And Update Z Length Offset.....	18-25
Probe 4" Mill And Update Radius Comp.....	18-26
Probe Tool And Update V Axis Offset.....	18-27
Probe Drill Z Length After Drilling.....	18-28
ROTATING TOOL PROBE CYCLES.....	18-28
TOOL POSITIONING	18-29
Position To Probe Radius Of 3 Inch Diameter Cutter.....	18-30
Position To Probe Length Of 3 Inch Diameter Cutter	18-30
CYCLE FUNCTION PARAMETER.....	18-30
TOOL PROBE CYCLE PARAMETERS	18-31
Optional Parameters.....	18-31
TOOL PROBE EXAMPLES.....	18-32
Probe 6 Tooth - 2" Mill And Update Z Offset.....	18-32
Probe 6 Tooth - 2" Mill And Update Radius Comp.....	18-33
Probe Tool And Update V Axis Offset.....	18-34
MISCELLANEOUS TOOL PROBE INFORMATION	18-35
MDI A TOOL PROBE CYCLE	18-35

SECTION

TITLE	PAGE
PART PROBE SETUP & DATUMMING	18-35
ADJUSTMENTS	18-35
STYLUS ON-CENTER ADJUSTMENT.....	18-36
STYLUS SPRING PRESSURE ADJUSTMENT.....	18-37
PROBE OFFSETS.....	18-37
Z TOOL & DATUM OFFSETS	18-37
Procedure To Find Z Tool Length	18-38
Procedure To Find Z Datum Offset.....	18-39
X / Y STYLUS & DATUM OFFSETS	18-39
Procedure To Find X & Y Stylus Offsets.....	18-40
Procedure To Find X & Y Datum Offsets.....	18-41
TOOL PROBE SETUP & DATUMMING.....	18-41
ADJUSTMENTS	18-41
DATUMMING THE TOOL PROBE	18-42
Z AXIS DATUM OFFSET.....	18-43
Procedure To Find Z Datum Offset.....	18-43
X & Y AXES DATUM OFFSETS.....	18-43
Procedure To Find X Datum Offset.....	18-43
DATUM OFFSETS DISPLAY	18-44
SOFTKEY GROUPS	18-45
OTHER KEYS SOFTKEY	18-45
DATUM OFFSETS SOFTKEYS	18-45
SEARCH SOFTKEY.....	18-45
Procedure To Search Offset Data.....	18-45
MODIFY SOFTKEY	18-46
Procedure To Modify Offset Data	18-46
STORE SOFTKEY	18-46
Procedure To Store Offset Data Entries.....	18-46
CLEAR OFFSET SOFTKEY	18-46
EDIT COMMENT SOFTKEY.....	18-47
Procedure To Edit Comment	18-47
OTHER DATA.....	18-47
CLEAR MEMORY SOFTKEY	18-47
Procedure To Clear Memory	18-47
PUNCH DEVICE SOFTKEY	18-48
FILE OPER SOFTKEY	18-48
SOFTKEY OPERATION CONTROL FEATURES	18-48
Password Protection Feature.....	18-48
Softkey Confirmation Feature	18-49
OUTPUTTING PROBE DATUM OFFSET DATA	18-49
DATA OUTPUT VIA THE DATUM OFFSETS PAGE.....	18-49
DISPLAYING THE PUNCH DEVICE SOFTKEY.....	18-50
OUTPUTTING TO A 3.5" FLOPPY DISK	18-50
Procedure To Record On A Disk	18-50
OUTPUTTING TO A PERIPHERAL DEVICE.....	18-50
Procedure To Output To A Peripheral Device	18-50
RESTORING DATUM OFFSETS.....	18-51
ACTIVATING DATUM OFFSET DATA.....	18-51
PROBE SIMULATION	18-52

SECTION	TITLE	PAGE
NINETEEN	ROTARY TABLE.....	19-1
	GENERAL INFORMATION.....	19-1
	MANUAL OPERATION.....	19-1
	AUTOMATIC OPERATION.....	19-2
	POSITIONING TYPE ROTARY TABLE.....	19-2
	CONTOURING TYPE ROTARY TABLE.....	19-2
	POSITIONING MODE (G00).....	19-2
	MACHINING MODE (G01, G02 or G03).....	19-3
	EXAMPLE 19A DRILL FOUR HOLES.....	19-4
	FIFTH AXIS TABLE ON TABLE (C-AXIS ROTARY TABLE).....	19-5
	INSTALLING OR REMOVING THE C-AXIS ROTARY TABLE.....	19-6
	USING THE C-AXIS AT THE PALLET STAND.....	19-6
	REFERENCING THE C-AXIS.....	19-6
	REFERENCE POINTS AND FIXTURE OFFSETS.....	19-6
	CONTOURING / POSITIONING TABLES CONFIGURATION.....	19-7
	POSITIONING TABLES.....	19-7
	CONTOURING TABLES.....	19-7
	AVAILABLE B-AXIS MACHINING AREA.....	19-8
	MOVING THE B-AXIS WITH THE C-AXIS INSTALLED.....	19-8
	PRE-POSITIONING THE ROTARY AXES AT PALLET EXCHANGE.....	19-9
	COLLISION ZONES.....	19-10
	B-AXIS ROTATION RESRICTIONS.....	19-12
	TWENTY	PALLET HANDLING.....
GENERAL INFORMATION.....		20-1
GLOSSARY OF TERMS.....		20-1
QUEUE DESCRIPTIONS.....		20-2
GENERAL STATION QUEUE NAMES.....		20-3
INDIVIDUAL STATION QUEUE NAMES.....		20-3
SYSTEM NAMES.....		20-3
CUSTOMER CONFIGURABLE NAMES.....		20-4
Machine Constants.....		20-5
CRT SCREEN DISPLAYS.....		20-5
KEYBOARD BUFFER.....		20-5
MESSAGES DISPLAYED.....		20-5
DATE & TIME DISPLAYED.....		20-7
QUEUE & PALLET DISPLAYS.....		20-7
SOFTKEYS.....		20-7
STATION DISPLAY (S6).....		20-8
CELL AUTO status.....		20-8
PROGRAM MODE status.....		20-8
STATION QUEUE DATA.....		20-9
TABLE LOCATION.....		20-9
STATION NAMES.....		20-9
SOFTKEYS.....		20-9
Procedure to Select a Station.....		20-9
DISPLAYED STATION DATA.....		20-9
QUEUE.....		20-9
QUEUE STATE.....		20-9
PALLET NAME.....		20-10
COMMAND NAME.....		20-10
COMMAND SOURCE.....		20-10
COMMAND STATE.....		20-10
COMMAND PRIORity.....		20-11
COMMAND OPERation.....		20-11

SECTION

TITLE

PAGE

VARIABLES DISPLAY (S5)	20-11
SOFTKEYS	20-11
Procedure to Select a Variable Display	20-11
SYSTEM VARIABLES	20-13
GLOBAL VARIABLES	20-14
Procedure to Define a Global Variable Using MDI	20-14
COMMAND VARIABLES	20-14
Procedure to Define a Local Variable Using MDI	20-14
HELP (S7)	20-14
Procedure to Use the HELP Screen	20-15
CONTROL DEVICES	20-16
PALLET CONTROL PANEL	20-16
PART READY Pushbutton	20-16
PALLET CYCLE INTERRUPT Pushbutton	20-16
PALLET CYCLE RESUME Pushbutton	20-16
EMERGENCY STOP Pushbutton	20-17
LATCH TOGGLE LEVER	20-17
LEVER	20-17
NOTEPLATE	20-17
PALLET REFERENCING	20-18
Procedure to Reference a Queue Without a Pallet	20-18
Procedure to Reference a Queue With a Pallet	20-18
WORK CHANGING METHODS	20-19
M CODE OPERATION	20-19
MDI AND THE MOVE COMMAND	20-21
Procedure 1 to Move a Pallet	20-21
Procedure 2 to Move a Pallet	20-22
PALLET HANDLING CONTROL COMMANDS	20-22
COMMAND ARGUMENTS	20-22
COMMANDS	20-24
ABOrt	20-24
ACTivate	20-25
ALLOW	20-26
BACKUp	20-27
CLEAN	20-28
CONTinue	20-29
COPY	20-30
CUT	20-31
DELAY	20-32
DELete	20-32
DOWN	20-33
ELSE	20-33
END	20-33
EXECute	20-34
FOP	20-35
GOTO	20-37
HOLD	20-38
HOSTALL	20-39
HOSTFINish	20-40
HOSTINHibit	20-41
IF	20-41
INHibit	20-42
INput	20-43
LIGHTs	20-44
LOAD	20-45
MANual	20-46
MESsage	20-47
MOVE	20-48

SECTION	TITLE	PAGE
	NOPALlet.....	20-49
	OPERation.....	20-50
	ORDER.....	20-51
	PALlet.....	20-52
	POSition.....	20-53
	PRIOrity.....	20-54
	READY.....	20-55
	REMOte.....	20-56
	REName.....	20-57
	RUN.....	20-58
	RUNL.....	20-59
	RUNS.....	20-60
	SCRAP.....	20-61
	SEArch.....	20-62
	SET.....	20-63
	TIME.....	20-65
	UNLOAD.....	20-65
	UP.....	20-66
	VAR.....	20-67
PART ROUTE FILES.....		20-68
PART ROUTE FILE LANGUAGE.....		20-68
RULES.....		20-68
Example Block.....		20-69
PART ROUTE FILE EXAMPLES.....		20-69
EXAMPLE1.....		20-69
EXAMPLE2.....		20-69
EXAMPLE3.....		20-70
EXAMPLE4.....		20-71
DECISION MAKING.....		20-72
RUNNING A PART ROUTE FILE.....		20-73
BASIC AUTOMATIC OPERATION.....		20-74
STOPPING/RESTARTING PART ROUTE FILES.....		20-75
PART ROUTE FILE ERROR STATE.....		20-75
Procedure to Recover an ERROR Condition.....		20-75
PALLET POOL (Optional).....		20-76
STATIONS.....		20-77
GENERAL STATION QUEUE NAMES.....		20-77
INDIVIDUAL STATION QUEUE NAMES.....		20-77
SYSTEM NAMES.....		20-77
Procedure to Display Station Queues.....		20-79
PALLET CONTROL PANEL.....		20-79
EMERGENCY STOP Pushbutton.....		20-79
PART READY Pushbutton.....		20-80
PART COMPLETE Indicator Light.....		20-80
STATION INHIBIT Pushbutton.....		20-80
PALLET CYCLE INTERRUPT Pushbutton.....		20-80
PALLET CYCLE RESUME Pushbutton.....		20-80
LOCATE PIN ENGAGE Lighted Pushbutton.....		20-80
LOCATE PIN DISENGAGE Pushbutton.....		20-80
INDEX PIN ENGAGE Lighted Pushbutton.....		20-81
INDEX PIN DISENGAGE Pushbutton.....		20-81
RUNNING PART ROUTE FILES.....		20-81
EXAMPLE5.....		20-81
EXAMPLE6.....		20-82
EXAMPLE7.....		20-83
PALLET POOL ERROR STATE.....		20-83

SECTION	TITLE	PAGE
	ADDING AND REMOVING PALLETS.....	20-83
	STANDARD WORK EXCHANGER MACHINE.....	20-83
	REMOVING A PALLET FROM THE MACHINE	20-83
	ADDING A PALLET TO THE MACHINE.....	20-84
	PALLET POOL MACHINE.....	20-85
	REMOVING A PALLET FROM THE SYSTEM.....	20-85
	ADDING A PALLET TO THE SYSTEM.....	20-85
TWENTY ONE	OPTIONAL FEATURES	21-1
	GENERAL.....	21-1
	HYDRAULIC FIXTURE INTERFACE SYSTEM	21-1
	HFI CONTROL PANEL.....	21-2
	AUTO-COUPLER STOP	21-2
	AUTO-COUPLER RET/ADV.....	21-2
	FIXTURE UNCLAMP/CLAMP.....	21-2
	AUTO-COUPLER CYCLE START	21-2
	FIXTURE CYCLE START	21-2
	MAN/OFF/AUTO.....	21-2
	LIGHT CURTAIN RESET.....	21-3
	LIGHT CURTAIN.....	21-3
	FIXTURE CYCLE INTERRUPT	21-3
	PALLET TRANSFER INTERRUPT.....	21-3
	HFI OPERATION.....	21-4
	OFF MODE.....	21-4
	AUTOMATIC MODE.....	21-4
	MANUAL MODE	21-5
	BROKEN TOOL DETECTOR.....	21-5
	CAPACITIES	21-6
	M25 - TOOL LENGTH VERIFY CYCLE.....	21-6
	M55 - TOOL LENGTH VERIFY FAULT MONITOR.....	21-6
	RANDOM TOOLING AND THE BROKEN TOOL DETECTOR.....	21-6
	KEYWORDS.....	21-7
	MACHINE CONSTANTS.....	21-7

SECTION	TITLE	PAGE
APPENDIX A	RESERVED FOR FUTURE USE	A-1
APPENDIX B	HORSEPOWER & TORQUE CHARTS	B-1
	GENERAL INFORMATION.....	B-1
	STANDARD 12,000 RPM SPINDLE	B-1
	OPTIONAL 7,000 RPM SPINDLE	B-2
APPENDIX C	RESERVED FOR FUTURE USE	C-1
APPENDIX D	TOOL EXCHANGER RECOVERY	D-1
	GENERAL INFORMATION.....	D-1
	ONE-BUTTON RECOVERY.....	D-1
	SETUP MODE RECOVERY.....	D-2
	ACTIVATING SETUP MODE.....	D-2
	MOVING AN AXIS.....	D-2
	MOVING THE TOOL EXCHANGE ARM IN & OUT	D-2
	ROTATING THE TOOL EXCHANGE ARM.....	D-3
	MOVING THE PRESENTER	D-4
	CANCELING SETUP MODE	D-5
	SETUP OPERATIONS COMPLETED	D-5
APPENDIX E	WORK EXCHANGER SETUP MODE.....	E-1
	GENERAL INFORMATION.....	E-1
	SETUP MODE.....	E-1
	ACTIVATING SETUP MODE.....	E-2
	WORK RETENTION/EXCHANGER SETUP PAGE	E-2
	DISPLAYED DATA.....	E-3
	SOFTKEYS.....	E-4
	VALID STATE.....	E-4
	STANDARD WORK EXCHANGER SETUP PAGE	E-4
	DISPLAYED DATA.....	E-4
	SOFTKEYS.....	E-5
	VALID STATE.....	E-6
	MPSM WORK EXCHANGER SETUP PAGES	E-6
	WORK EXCHANGER SETUP PAGE 1.....	E-6
	DISPLAYED DATA.....	E-6
	SOFTKEYS.....	E-7
	WORK EXCHANGER SETUP PAGE 2.....	E-8
	DISPLAYED DATA.....	E-8
	SOFTKEYS.....	E-8
	WORK EXCHANGER SETUP PAGE 3.....	E-9
	DISPLAYED DATA.....	E-10
	SOFTKEYS.....	E-10
	WORK STATION SETUP PAGE.....	E-10
	DISPLAYED DATA.....	E-12
	SOFTKEYS.....	E-12
	ROTARY EXCHANGER RECOVERY.....	E-12
	PROCEDURE A.....	E-13
	PROCEDURE B.....	E-14
	CANCELING SETUP MODE	E-15
	MACHINE SETUP PAGE FLOW CHART.....	E-15