

Sodick

WIRE-CUT EDM NC POWER SUPPLY UNIT

CODE INSTRUCTIONS

LN1W

Before operating the machine, read this manual carefully and make sure that you fully understand the information it contains.

Appoint someone to be responsible for this manual and keep it in a designated place so that it is accessible at all times.

Ver. 1.3

TABLE OF CONTENTS

TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER 1 OUTLINE	1-1
1. DEFINITION OF "WORD"	1-1
2. DEFINITION OF "ADDRESS"	1-2
3. ADDRESS AND DATA	1-3
3-1. N, O (Sequence Number)	1-3
3-2. G (Preparatory Functions (Linear Interpolation, Circular Interpolation, etc.))	1-3
3-3. X, Y, Z, U, V (Axis Travel)	1-3
3-4. I, J (Coordinates of Center of Circular Arc)	1-3
3-5. T (Machine Control Items)	1-4
3-6. D, H (Offset Number)	1-4
3-7. A (Angle in Taper Machining)	1-4
3-8. P (Subprogram Number)	1-4
3-9. L (Number of Repetitions of Subprogram)	1-4
3-10. C (Machining Condition File Number)	1-5
3-11. M (Auxiliary Function)	1-5
3-12. Q (File Call-up)	1-5
3-13. F (Feedrate)	1-5
3-14. ON, OFF, etc. (Change of Machining Condition Parameters)	1-6
4. COORDINATE SYSTEMS	1-7
5. COMMENTS	1-8
CHAPTER 2 BLOCKS	2-1
1. DEFINITION	2-1
2. PROCESSING ORDER OF NC CODES IN ONE BLOCK	2-2
CHAPTER 3 SEQUENCE NUMBERS	3-1
CHAPTER 4 BLOCK SKIP ("I")	4-1

TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER 5 G CODES	5-1
1. G00 (POSITIONING)	5-7
2. G01 (LINEAR INTERPOLATION)	5-7
3. G02, G03 (CIRCULAR INTERPOLATION)	5-8
4. G04 (DWELL)	5-10
5. G05, G06, G07, G09 (MIRROR IMAGE AND CANCEL)	5-11
5-1. G05, G06, G07, and G09	5-11
6. G08, G09 (X-Y EXCHANGE AND CANCEL)	5-14
7. G11, G12 (BLOCK SKIP ON/OFF)	5-16
8. G13, G14, G15 (WIRE BREAKAGE RECOVERY FUNCTION ON/OFF)	5-17
9. G17 (PLANE SELECTION)	5-17
10. G22, G23 (SOFTWARE LIMIT)	5-18
11. G26, G27 (FIGURE ROTATION ON/OFF)	5-19
12. G28, G29, G60 (MAIN REFERENCE POINT)	5-20
13. G30 (RETURN TO G92/G97 SET POINT)	5-20
14. G40, G41, G42 (WIRE DIAMETER OFFSET)	5-21
15. G48, G49 (EDGE CONTROL ON/OFF)	5-22
16. G50, G51, G52 (TAPER MACHINING)	5-23
17. G54 TO G959 (WORK COORDINATE SYSTEMS 0 TO 95)	5-24
18. G74, G75 (FOUR-AXIS OFFSET ON/OFF)	5-26
19. G80 (TRAVEL UNTIL CONTACT SENSOR OPERATES)	5-27
20. G81 (TRAVEL TO LIMIT OF MECHANICAL SYSTEM)	5-30
21. G82 (TRAVEL TO HALF OF DISTANCE BETWEEN PRESENT POSITION AND ORIGIN)	5-31
22. G83 (READ NC INFORMATION INTO SPECIFIED OFFSET TERM)	5-32
23. G90 (ABSOLUTE PROGRAMMING MODE) AND G91 (INCREMENTAL PROGRAMMING MODE)	5-34
24. G92, G97 (COORDINATE SYSTEM SHIFT)	5-36

TABLE OF CONTENTS

	<u>PAGE</u>
25. G104, G105 (CORNER DWELL ON/OFF)	5-37
26. G126, G127 (COORDINATE ROTATION ON/OFF)	5-39
27. G128, G129 TO G928, G929 (SUB-REFERENCE POINT)	5-40
28. G132, G133, G134, G135, G136, G137 (INTERFERENCE CHECK)	5-41
29. G140, G141, G142 (INDEPENDENT TOP/BOTTOM GEOMETRY PROGRAMMING MODE)	5-42
30. G152 (LOCAL COORDINATE SYSTEM)	5-43
CHAPTER 6 X, Y, Z, U, V COORDINATE AXES	6-1
CHAPTER 7 I, J COORDINATE AXES	7-1
CHAPTER 8 T CODES	8-1
1. T80 (WIRE RUN) AND T81 (WIRE RUN STOP)	8-3
2. T82 (AUTO DRAIN OFF) AND T83 (AUTO DRAIN ON)	8-3
3. T84 (PUMP ON) AND T85 (PUMP OFF)	8-3
4. T86 (FLUSHING ON) AND T87 (FLUSHING OFF)	8-4
5. T88 (OIL SUBMERGED MACHINING), T89 (WATER FLUSH MACHINING) AND T94 (WATER SUBMERGED MACHINING)	8-4
6. T90 (AWT I) AND T91 (AWT II)	8-5
7. T96 (FLUID FEED ON) AND T97 (FLUID FEED OFF)	8-6
CHAPTER 9 M CODES	9-1
1. LIST OF M CODES	9-1
2. M02 (END OF PROGRAM)	9-1
3. M00 (PROGRAM STOP)	9-2
4. M01 (OPTIONAL PROGRAM STOP)	9-2
5. M98 (SUBPROGRAM CALL)	9-2
6. M99 (END OF SUBPROGRAM)	9-2
7. M05 (ST CANCEL)	9-2
8. M06 (NO DISCHARGE)	9-2

TABLE OF CONTENTS

	<u>PAGE</u>
9. M03 (M03 SEARCH BLOCK)	9-3
10. M10 TO M47 (EXTERNAL SIGNAL OUTPUT)	9-3
11. M70 TO M77 (EXTERNAL SIGNAL INPUT)	9-3
12. M199 (TERMINATION OF Q FILE EXECUTION)	9-3
CHAPTER 10 C CODES	10-1
CHAPTER 11 FLAG CODES	11-1
1. FLAG 0	11-1
2. FLAG 1 (PERMISSIBLE ERROR BETWEEN START/END POINT RADII)	11-2
3. FLAG 2 (OPTIONAL STOP)	11-4
4. FLAG 3 (MACHINING SHAPE SCALE)	11-4
5. FLAG 4 (DRY RUN PATTERN)	11-5
CHAPTER 12 SUBPROGRAMS	12-1
1. HOW TO USE SUBPROGRAMS	12-1
2. SPECIAL APPLICATIONS WHEN RETURNING FROM A SUBPROGRAM TO THE MAIN PROGRAM	12-3
3. SETTINGS RELATING TO SUBPROGRAMS	12-4
4. SEARCHING ORDER	12-5
CHAPTER 13 WIRE RADIUS OFFSET	13-1
1. OUTLINE	13-1
2. OFFSET AMOUNTS (D, H)	13-2
3. START-UP OF THE OFFSET MODE	13-2
4. CANCELING THE OFFSET MODE	13-3
5. OFFSET PATH	13-4
5-1. Straight Line - Straight Line	13-4
5-2. Straight Line - Arc (or Arc - Straight Line)	13-6
5-3. Arc - Arc	13-8

TABLE OF CONTENTS

	<u>PAGE</u>
6. OFFSET CHANGES	13-10
6-1. Straight Line - Straight Line	13-10
6-2. Straight Line - Arc (Arc - Straight Line)	13-11
6-3. Arc - Arc	13-12
6-4. Examples of Programs Containing Offset Code Change Blocks	13-13
6-5. Canceling the Offset Mode	13-15
6-6. G00 Offset and Taper Machining Mode Cancel	13-15
7. NOTES IN SPECIFYING OFFSET CHANGES	13-16
7-1. Changing the Direction of Offset on a Full-circle Path	13-16
7-2. Changing the Offset Amount on a Straight Line Path	13-17
7-3. Axis Movements in Offset Mode	13-18
 CHAPTER 14 TAPER MACHINING	 14-1
1. OUTLINE	14-1
2. PROGRAMMING FOR TAPER MACHINING	14-2
2-1. Basic Codes for Taper Machining	14-2
2-2. Angle of Inclination	14-3
2-3. Start of Taper Machining	14-4
2-4. End of Taper Machining	14-5
2-5. Taper Machining for the Geometry Defined by Straight Line – Straight Line	14-6
2-6. Taper Machining for the Geometry Defined by Straight Line – Arc (Arc – Straight Line)	14-7
2-7. Taper Machining for the Geometry Defined by Arc – Arc	14-9
3. PARAMETER DATA NECESSARY FOR TAPER MACHINING	14-11
3-1. Description of Parameters	14-11
3-2. Basic Example	14-12
3-3. Examples – Workpiece Bottom Surface not Aligned with Table Top Surface	14-13
3-4. Determining the Distance between Upper and Lower Guides	14-14
4. CHANGES IN THE TAPER ANGLE	14-16
4-1. Straight Line – Straight Line	14-16
4-2. Straight Line – Arc	14-17
4-3. Arc – Arc	14-18
4-4. Examples of Programs in which the Taper Angle is Changed	14-19

TABLE OF CONTENTS

	<u>PAGE</u>
5. SETTINGS RELATED TO TAPER MACHINING	14-22
5-1. Automatic Setting of Upper Guide Position	14-22
5-2. TP Code and TN code	14-22
5-3. Table to Limit Distance (TABLE TO LIMIT)	14-22
6. NOTES	14-23
CHAPTER 15 CORNER ROUNDING (CORNER R) FUNCTION	15-1
1. OUTLINE	15-1
2. CODES	15-2
3. CONDITIONS	15-2
4. CORNER R OPERATION EXAMPLES	15-3
5. SETTINGS RELATED TO CORNER R FUNCTION	15-5
6. NOTES	15-6
CHAPTER 16 FOUR-AXIS OFFSET	16-1
1. OUTLINE	16-1
2. G CODES	16-1
3. EXAMPLE PROGRAM	16-2
4. G74 PATTERN	16-3
5. NOTES	16-5
CHAPTER 17 INDEPENDENT TOP/BOTTOM GEOMETRY PROGRAMMING FUNCTION	17-1
1. OUTLINE	17-1
2. G CODES	17-1
3. EXAMPLE PROGRAMS	17-2
4. NOTES	17-7
CHAPTER 18 INTERFERENCE CHECK	18-1
1. OUTLINE	18-1
2. G CODES	18-1
3. EXAMPLE PROGRAMS	18-2
4. NOTES	18-6

TABLE OF CONTENTS

	PAGE
CHAPTER 19 FIGURE ROTATION	19-1
1. OUTLINE	19-1
2. CODES	19-1
3. EXECUTING FIGURE ROTATION	19-2
4. SETTING THE ANGLE OF ROTATION	19-2
5. SETTING THE COORDINATES FOR THE CENTER OF FIGURE ROTATION	19-3
6. EXAMPLE PROGRAM	19-3
7. NOTES	19-4
CHAPTER 20 M03 FUNCTION	20-1
1. OUTLINE	20-1
2. CONFIRMING THE STATUS AT OCCURRENCE OF M03 SEARCH	20-3
3. M CODES IGNORED DURING M03 SEARCH	20-4
CHAPTER 21 HOW TO USE SOFTWARE LIMITS	21-1
1. SOFTWARE LIMIT ON/OFF G CODES	21-1
2. INPUTTING SOFTWARE LIMIT VALUES	21-2
CHAPTER 22 Q COMMANDS	22-1
1. OUTLINE	22-1
2. Q CODES	22-1
3. METHOD FOR RETURNING FROM A Q FILE	22-1
4. ERROR MESSAGES	22-2
5. METHOD FOR SPECIFYING A FILE NAME FOR A Q COMMAND WITH AN OFFSET TERM	22-2
6. EXAMPLE PROGRAM USING Q COMMANDS	22-3
7. FUNCTION FOR PROGRAM EXECUTION FROM SEQUENCE NUMBER SPECIFIED IN Q COMMAND	22-4

TABLE OF CONTENTS

PAGE

CHAPTER 23	CALCULATIONS	23-1
1.	OUTLINE	23-1
2.	TYPES OF CALCULATION	23-1
3.	ORDER OF PRIORITY FOR CALCULATIONS	23-2
4.	FORMAT FOR EXPRESSIONS	23-2
5.	UNIT SYSTEM FOR CALCULATIONS	23-2
6.	ARITHMETIC OPERATIONS ON TIME DATA	23-4
7.	FACTORS THAT INFLUENCE THE RESULTS OF CALCULATIONS	23-5
8.	ERRORS RELATING TO CALCULATIONS	23-6
9.	NOTES	23-6
CHAPTER 24	USER MACRO FUNCTION	24-1
1.	OUTLINE	24-1
2.	TYPES OF MACRO COMMAND	24-1
2-1.	Assignment Statements	24-1
2-2.	IF Statements	24-2
2-3.	JUMP Statements	24-2
2-4.	KEYIN Statements	24-3
2-5.	CRT Statements	24-3
2-6.	PRINT Statements	24-4
CHAPTER 25	WIRE BREAKAGE RECOVERY FUNCTION	25-1
1.	OUTLINE	25-1
2.	OPERATION FOR WIRE BREAKAGE RECOVERY	25-2
3.	CONDITIONS FOR EXECUTING THE WIRE BREAKAGE RECOVERY FUNCTION	25-3
4.	COMBINATION OF THE WIRE BREAKAGE RECOVERY AND M03 FUNCTIONS	25-5
CHAPTER 26	PRESS DIE CORNER CONTROL FUNCTION	26-1
1.	OUTLINE	26-1
2.	PARAMETERS AND CONDITIONS FOR EXECUTING THE PRESS DIE CORNER CONTROL FUNCTION	26-2
3.	NOTES	26-5

TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER 27 Coordinate Rotation	27-1
1. OUTLINE	27-1
2. CODES	27-1
3. EXECUTING COORDINATE ROTATION	27-1
4. SETTING THE ANGLE OF ROTATION	27-2
5. COORDINATES FOR THE CENTER OF COORDINATE ROTATION	27-2
6. PRESENT POSITION DISPLAY IN THE ROTATED COORDINATE SYSTEM	27-3
7. NOTES	27-3
CHAPTER 28 CORNER CHAMFERING FUNCTION	28-1
1. OUTLINE	28-1
2. CORNER CHAMFERING SPECIFIED WITH OTHER FUNCTIONS	28-4
CHAPTER 29 INITIAL SETTINGS OF G CODES AND T CODES	29-1
CHAPTER 30 OPERATION STATUS DURING/AFTER M00 (M01) PROGRAM STOP	30-1
CHAPTER 31 CONTACT DETECTION	31-1
1. STOP PATTERNS BY CONTACT DETECTION	31-1
2. SETTING FOR CONTACT DETECTION	31-2
3. ERROR MESSAGES RELATED TO CONTACT DETECTION	31-2
CHAPTER 32 FLAGS AND PARAMETERS CLOSELY RELATED TO CODES	32-1
1. DATA SET ON THE [SETTING] MODE SCREEN	32-1
2. DATA SET ON THE [SETTING] – [ACTION] SUBMODE SCREEN	32-3

TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER 33 MESSAGES	33-1
1. INTRODUCTION	33-1
2. ERROR MESSAGES	33-3
3. HALT MESSAGES	33-24
4. COMMENT MESSAGES	33-28
CHAPTER 34 TO USERS OF MARK20 SERIES POWER SUPPLY	34-1