


ARF100

Paperless Recorder

Operation Manual

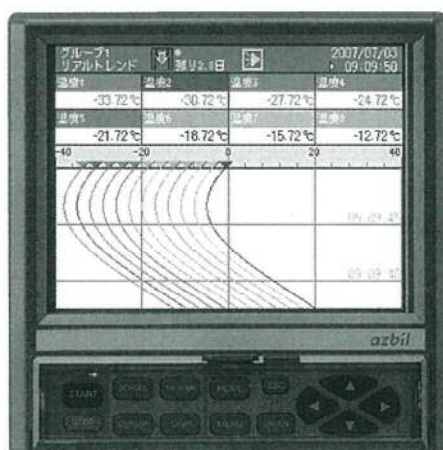

Thank you for purchasing the ARF100 Paperless Recorder.

This manual contains information for ensuring the correct use of the ARF100 Paperless Recorder. It also provides necessary information for installation, maintenance, and troubleshooting.

This manual should be read by those who design and maintain equipment that uses the ARF100 Paperless Recorder. Be sure to keep this manual nearby for handy reference.

Yamatake Corporation

Contents

SAFETY PRECAUTIONS

Chapter 1. OUTLINE

1.1. Introduction.....	1
■ Main Features.....	1
■ Additional functions	1
1.2. Model Selection Guide	2
■ Model number configuration.....	2
■ Optional parts.....	2
■ Data analysis software.....	2

Chapter 2. PART NAMES AND FUNCTIONS

■ Main unit.....	3
■ Rear terminals	3

Chapter 3. MOUNTING AND WIRING

3.1. Installation Site.....	4
3.2. Mounting	4
■ Panel cutout dimensions.....	4
■ Mounting methods.....	5
3.3. Wiring Precautions	6
3.4. Terminal Block.....	7
3.5. Wiring of Power and Protective Ground Terminals	8
3.6. Wiring of Measurement Input Terminals.....	9
3.7. Alarm Output Wiring (for applicable models).....	10
3.8. Digital Input Terminals (for applicable models).....	12
3.9. Ethernet Connections	13

Chapter 4. SETUP..... 14

Chapter 5. FRONT PANEL..... 15

5.1. Parts and Functions	15
5.2. Functions of Keys	16
5.3. Character Input.....	17

Chapter 6. SWITCHING SCREENS..... 18

Chapter 7. OPERATION SCREENS	20
7.1. Common Key Functions	20
7.2. Status Bar Information.....	22
7.3. Real-time Trend Screen.....	23
7.4. Bar Graph Screen.....	24
7.5. Numeric Display Screen	24
7.6. Historical Trend Screen.....	25
7.7. Dual Trend Screen.....	26
7.8. Alarm Display Screen.....	26
7.9. Internal Memory Screen	27
7.10. Card File Screen.....	28
7.11. Marker List Screen.....	28
 Chapter 8. INITIAL SETTINGS	 29
 Chapter 9. MENU STRUCTURE.....	 33
 Chapter 10. HOME SCREEN.....	 34
10.1. Quick Recorder Setup	34
10.2. Specifications Display.....	36
 Chapter 11. MENU SCREEN.....	 37
11.1. Overview.....	37
11.2. Input Settings.....	41
11.3. Display settings	47
11.4. Alarm Settings.....	53
11.5. File Settings Screen	55
11.6. Totalizer Settings.....	58
11.7. Schedule Settings	59
11.8. Marker Settings.....	60
11.9. Memory Operations.....	61
11.10. Network Settings	62
11.11. System Settings	68
 Chapter 12. WEB SCREEN	 73
12.1. Remote Monitoring and Configuration.....	73

Chapter 13. USB CONNECTION TO A PC	80
13.1. Overview.....	80
13.2. Operation Environment.....	80
13.3. Accessing Data Files	80
 Chapter 14. CALIBRATION	82
14.1. Overview.....	82
14.2. Conditions.....	82
14.3. Preparation	82
14.4. Connections.....	83
14.5. Zero and Span Adjustment	85
 Chapter 15. PART REPLACEMENT	89
15.1. Replacement Intervals	89
 Chapter 16. TROUBLESHOOTING	90
 Chapter 17. SPECIFICATIONS	92
■ General specifications.....	92
■ Standards	92
■ Input specifications.....	93
■ Recording specifications	94
■ Display specifications	94
■ Setting and operation specifications	94
■ Alarm specifications.....	94
■ Measurement range, indication accuracy, and display resolution	95
■ External dimensions.....	97