

CNC SYSTEMS

OSP-U100L
OSP-U10L

DEVICE NET SPECIFICATION

MAINTENANCE MANUAL (1st Edition)

Pub. No. 4983-E (LE34-031-R1) Sep. 2002

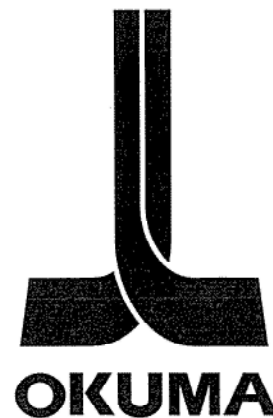


TABLE OF CONTENTS

PAGE

SECTION 1	OUTLINE OF OSP	1
1.	System Configuration	1
2.	DeviceNet and Servo Link	2
3.	Construction and Outline of Units	3
3-1.	CPU Unit	3
3-2.	NC Rack	3
3-3.	NC PCB's	4
3-4.	Power Supply Unit	5
3-5.	DeviceNet Units	6
3-5-1.	POS Unit	7
3-5-2.	DN-SLV	8
3-5-3.	DN-IC-16C	9
3-5-4.	DN-OC-16PC	10
3-6.	Servo Unit	13
3-7.	Motors and Position Encoders	13
3-8.	Floppy Disk Drive Unit	13
3-9.	Operation Panel	14
3-10.	Cooling Unit	14
3-11.	Control Enclosure	14
SECTION 2	MAINTENANCE AND INSPECTION	15
1.	Inspection during Installation	15
1-1.	Installation Site	15
1-2.	Environmental Requirements	15
1-3.	Primary Power Supply	16
1-4.	Input Voltage Range Including Voltage Variation	16
1-5.	Momentary Voltage Variation Rate and Power Source Inductance	17

	<u>PAGE</u>
2. Daily Inspection	19
2-1. Daily Inspection	19
2-2. Every Three-month Inspection	19
2-3. Cleaning the Floppy Disk Drive	19
 SECTION 3 TROUBLES AND TROUBLESHOOTING	 21
1. General Check Procedure When Trouble Occurs	21
2. Trouble Analysis	22
3. Checking the Input/Output Signals	23
3-1. Check by I/O Monitor Function	23
4. CPU Status Indication	25
5. Power Supply Unit Status Indication	27
6. Inspection of Overload Relay	29
7. Releasing Travel-end Limit	30
8. NC Turret	31
8-1. NC Turret Operation	31
8-2. Setting the Offset Data for NC Turret Position Encoder	32
8-3. Turret Rotatin by Pulse Handle	34
9. Hydraulically Operated Turret	35
 SECTION 4 SELF-DIAGNOSTIC FUNCTION	 36
1. Alarm and Error Display	37
2. Check Data Display	38
2-1. NC Axis Data	40
2-2. I/O Monitor Function	44
2-2-1. Outline of the Function	44
2-2-2. Operation	45
3. CNC Diagnostic Screen	55

PAGE

SECTION 5	PLC MONITOR FUNCTION	56
1.	Outline of PLC Monitor Function	56
2.	Calling the PLC Monitor Function	57
3.	Function Details	58
3-1.	PLC Data Display Function	58
3-2.	Ladder Diagram Monitor Function	69
3-3.	Data Trace Function	78
SECTION 6	PLC PROGRAM INSTRUCTIONS	88
1.	Outline of PLC Program Instructions	88
1-1.	Basic Instructions	88
1-2.	Application Instructions	88
1-3.	System Function Module	99
SECTION 7	INSTALLING SOFTWARE	109
1.	Outline of Install	109
2.	Glossary of Technical Terms	110
3.	Media Necessary for Installing Software	112
3-1.	Control Floppy Disks	112
3-1-1.	Kinds of Control Floppy Disks	112
3-1-2.	Configuration of Control Floppy Disks	115
3-2.	System Backup Floppy Disk	117
3-3.	Work Disk	117
4.	Steps for Installing Software	118
5.	Procedure for Installing Software	118
5-1.	Checking the Hardware Configuration	118
5-1-1.	Checking the UCMB	118
5-2.	MD Initialization Processing	119
5-2-1.	Cases Requiring MD Initialization Processing	119
5-2-2.	Procedure	119

	<u>PAGE</u>
5-3. Data Backup	121
5-3-1. Cases Requiring Data Backup Operation	121
5-3-2. Backup of the System Data	121
5-3-3. Backup of the User Files	121
5-3-4. Backup Procedure	121
5-4. Installing the Control Software	124
5-4-1. Use Order of Floppy Disks	124
5-4-2. Operation Procedure	125
5-5. Loading the Backup Data	127
5-5-1. Backup Data Loading Procedure	127
 SECTION 8 CHANGING THE BATTERY	 129
1. Battery Life Warning	129
2. Changing the Battery	130
 SECTION 9 APPENDIX	 134
1. Accessories	134
2. NC Operation Panel	135
3. Machine Operation Panel	138
4. Other Operation Panels	140