

NV5000

MAINTENANCE MANUAL

MORI SEIKI

CONTENTS

FOR SAFE OPERATION

MAINTENANCE MANUAL

MAINTENANCE INFORMATION

INSTALLATION MANUAL

DRAWINGS

MAINTENANCE MANUAL

The manuals for maintenance are comprised of the following three manuals including this manual:
MAINTENANCE MANUAL, MAINTENANCE INFORMATION,
and INSTALLATION MANUAL.

Applicable Model

MACHINING CENTERS

Applicable NC Unit

MSC-500	MSC-515	MSC-802
MSG-500	MSD-515	MSC-803
MSC-501	MSC-516	MSG-803
MSD-501	MSD-516	MSG-805
MSG-501	MSC-518	MSG-806
MSC-502	MSD-518	SEICOS Σ 16M
MSD-502	MSC-521	SEICOS Σ 18M
MSG-502		

Before starting operation, maintenance, or programming, carefully read the manuals supplied by Mori Seiki, the NC unit manufacturer, and equipment manufacturers so that you fully understand the information they contain.

Keep the manuals carefully so that they will not be lost.

MORI SEIKI

CONTENTS

SIGNAL WORD DEFINITION

FOREWORD

A: DAILY INSPECTION

B: REGULAR INSPECTION

C: OUTLINE OF SYSTEMS

CHAPTER A

DAILY INSPECTION

CONTENTS

A : DAILY INSPECTION

1.	THE IMPORTANCE OF DAILY INSPECTION	A-1
2.	NOTES ON INSPECTIONS AND MAINTENANCE	A-2
2.1	Work in General	A-2
2.2	Work Inside the Machine	A-3
2.3	Machine Management	A-3
2.4	Oils Used	A-3
3.	LUBRICATING AND HYDRAULIC OIL	A-4
3.1	Storing Oil	A-4
3.2	Cautions When Replenishing Oil	A-4
4.	SUPPLYING OIL IN DAILY MAINTENANCE	A-5
4.1	Supplying Oil to the Lubricating Oil Tank	A-5
4.2	Supplying Coolant to the Coolant Tank	A-5
4.3	Supplying Oil to the Lubricating Oil Tank for Oil Shot or Oil Mist (Option)	A-6
5.	CLEANING INSIDE THE MACHINE	A-7
5.1	Cleaning the Slideway (Ball Screw) Protection Covers	A-7
6.	CLEANING THE DRAIN OIL RECEIVER FOR THE LUBRICATING OIL	A-8
7.	CAUTIONS ON USING A CHIP CONVEYOR	A-9
8.	OPENING/CLOSING THE ELECTRICAL CABINET DOOR	A-10
8.1	Opening the Electrical Cabinet Door	A-10
8.2	Closing the Electrical Cabinet Door	A-12

CHAPTER B

REGULAR INSPECTION

CONTENTS

B : REGULAR INSPECTION

1. THE IMPORTANCE OF REGULAR INSPECTION	B-1
2. CHECKUPS BEFORE BEGINNING MAINTENANCE	B-1
3. PRECAUTIONS TO BE OBSERVED BY TECHNICIANS	B-2
4. CLEANING THE ELECTRICAL CABINET AIR FILTER	B-4
5. CLEANING THE AIR FILTER OF THE OIL COOLER AND FAN COOLER.....	B-5
6. CLEANING THE COOLANT TANK	B-6
7. CLEANING THE LUBRICATING OIL TANK.....	B-7
8. CLEANING THE SUCTION STRAINER IN THE HYDRAULIC OIL TANK.....	B-9
9. CLEANING THE FANS.....	B-10
10. CLEANING INSIDE THE ELECTRICAL CABINET	B-11
11. INSPECTION AND REPLACEMENT OF SLIDE SEALS.....	B-12
12. CHANGING HYDRAULIC FLUID.....	B-13
13. CHANGING COOLING OIL OF OIL COOLER AND FAN COOLER	B-14
14. CHANGING THE BATTERY.....	B-15
14.1 Changing the Memory Back-up Battery	B-17
14.1.1 Type 1 (Alkaline Battery/Manganese Battery).....	B-17
14.1.2 Type 1 (Lithium Battery, Type A).....	B-18
14.1.3 Type 1 (Lithium Battery, Type B).....	B-19
14.1.4 Type 2 (Electrical Cabinet Side)	B-20
14.1.5 Type 2 (Operation Panel Side)	B-21
14.1.6 Type 3 (2CR5 Type Lithium Photo Battery)	B-23
14.2 Changing the Absolute Position Sensing Batteries	B-24
14.2.1 Type 1 (Alkaline Battery/Manganese Battery).....	B-24
14.2.2 Type 1 (Lithium Battery)	B-25
14.2.3 Type 2	B-27
14.2.4 Type 3 (2CR5 Type Lithium Photo Battery)	B-29

15. ADJUSTING THE SETTING PRESSURE	B-30
15.1 Adjusting Hydraulic Unit Main Pressure	B-30
15.2 Adjusting Air Pressure	B-31

CHAPTER C

OUTLINE OF SYSTEMS

CONTENTS

C : OUTLINE OF SYSTEMS

1. SLIDEWAY (FEED AXIS) LUBRICATION SYSTEM.	C-1
2. HYDRAULIC SYSTEM.	C-1
3. COOLANT SYSTEM	C-1
4. PNEUMATIC SYSTEM.	C-1
5. SPINDLE HEAD COOLING SYSTEM	C-2
6. SPINDLE BEARING LUBRICATION SYSTEM	C-2

MAINTENANCE INFORMATION

The manuals for maintenance are comprised of the following three manuals including this manual:
MAINTENANCE MANUAL, MAINTENANCE INFORMATION,
and INSTALLATION MANUAL.

Applicable Model

NV5000
NVD5000

Applicable NC Unit

MSG-501
MSG-502
MSG-511

Before starting operation, maintenance, or programming, carefully read the manuals supplied by Mori Seiki, the NC unit manufacturer, and equipment manufacturers so that you fully understand the information they contain.
Keep the manuals carefully so that they will not be lost.

MORI SEIKI

CONTENTS

SIGNAL WORD DEFINITION

A: SPECIFICATIONS

B: OUTLINE OF SYSTEMS

**C: REGULAR INSPECTION AND
ADJUSTMENTS**

CHAPTER A

SPECIFICATIONS

CONTENTS

A : SPECIFICATIONS

1. NAMES OF MAJOR PARTS.....	A-1
2. MACHINE SPECIFICATIONS.....	A-2
2.1 NV5000A.....	A-2
2.2 NV5000B.....	A-4
2.3 NVD5000.....	A-6
3. NUMERICAL CONTROL UNIT SPECIFICATIONS.....	A-8
3.1 NV5000.....	A-8
3.2 NV5000 (U-axis Specification).....	A-18
4. OILING CHARTS.....	A-28
4.1 Oil Recommendations.....	A-30

CHAPTER B

OUTLINE OF SYSTEMS

CONTENTS

B : OUTLINE OF SYSTEMS

1. FEED AXIS LUBRICATING SYSTEM	B-1
1.1 Lubrication Points.....	B-1
2. ELECTRICAL SYSTEM	B-2
2.1 General.....	B-2
2.2 Installation Positions of Proximity Switches and Limit Switches.....	B-4
3. PNEUMATIC SYSTEM.....	B-6
3.1 Compressed Air Applications.....	B-6

CHAPTER C

REGULAR INSPECTION

AND ADJUSTMENTS

CONTENTS

C : REGULAR INSPECTION AND ADJUSTMENTS

- 1. REGULAR INSPECTION LIST. C-1
- 2. REPLENISHING COOLANT TO COOLANT TANK C-3
- 3. CLEANING THE LINE FILTER IN THE LUBRICATING OIL TANK C-4
- 4. Cleaning the Air Filter. C-5
 - 4.1 Manual Discharge of the Drain. C-5
 - 4.2 Cleaning the Air Filter. C-6
 - 4.2.1 Air Filter. C-6
- 5. REPLACING THE MACHINE LIGHT C-7

INSTALLATION MANUAL

The manuals for maintenance are comprised of the following three manuals including this manual:
MAINTENANCE MANUAL, MAINTENANCE INFORMATION,
and INSTALLATION MANUAL.

■ Applicable Model ■

NV5000
NVD5000

■ Applicable NC Unit ■

MSG-501
MSG-502
MSG-511

Before starting operation, maintenance, or programming, carefully read the manuals supplied by Mori Seiki, the NC unit manufacturer, and equipment manufacturers so that you fully understand the information they contain.
Keep the manuals carefully so that they will not be lost.

MORI SEIKI

CONTENTS

1. ENVIRONMENTAL REQUIREMENTS	P-1
2. FOUNDATION WORK	P-2
3. PREPARATION FOR INSTALLATION	P-3
3.1 Power Requirements	P-4
3.2 Power Cable	P-5
3.3 Grounding Cable	P-6
3.4 Main Breaker for the Shop Power Distribution Board	P-7
3.5 Compressed Air Supply	P-7
3.6 Hoses for Supplying Compressed Air	P-7
4. AFTER RECEIVING THE MACHINE	P-8
5. CARRYING THE MACHINE	P-9
5.1 Preparation	P-9
5.2 Carrying the Machine by Hoisting	P-10
6. CONNECTING THE POWER CABLE	P-12
7. CONNECTION OF COMPRESSED AIR SUPPLY HOSE	P-14
8. REMOVING TRANSIT CLAMPS	P-14
9. LEVEL ADJUSTMENT	P-15
APPENDIX 1 INSTALLATION DATA	APPENDIX P-1
1.1 Positions of Transit Clamps	APPENDIX P-1
1.2 Hoisting the Machine	APPENDIX P-3
APPENDIX 2 POWER CAPACITY TABLE	APPENDIX P-4
2.1 NV5000A/40	APPENDIX P-4
2.2 NV5000A/50	APPENDIX P-6
2.3 NV5000B/40	APPENDIX P-7
2.4 NV5000B/50	APPENDIX P-8
2.5 NV5000B/50 (U-axis Specification)	APPENDIX P-9
APPENDIX 3 POWER CABLE SIZE AND SCREW TIGHTENING TORQUE	APPENDIX P-10
3.1 Power Cable Size (Specified According to Breaker Capacity)	APPENDIX P-10
3.2 Tightening Torque	APPENDIX P-11
APPENDIX 4 MACHINE NOISE DATA	APPENDIX P-12

DRAWINGS

■ Applicable Model ■

NV5000

Before starting operation, maintenance, or programming, carefully read the manuals supplied by Mori Seiki, the NC unit manufacturer, and equipment manufacturers so that you fully understand the information they contain.

Keep the manuals carefully so that they will not be lost.

MORI SEIKI

CONTENTS

1.	GENERAL VIEW	1
1.1	NV5000A/40	1
1.1.1	Standard	1
1.1.2	60-tool Specification	3
1.1.3	APC Specification	4
1.1.4	APC + 60-tool Specification	6
1.2	NV5000A/50	7
1.2.1	Standard	7
1.2.2	60-tool Specification	9
1.2.3	APC Specification	10
1.2.4	APC + 60-tool Specification	12
1.3	NV5000B/40	13
1.3.1	Standard	13
1.3.2	60-tool Specification	15
1.3.3	APC Specification	16
1.3.4	APC + 60-tool Specification	18
1.4	NV5000B/50	19
1.4.1	Standard	19
1.4.2	60-tool Specification	21
1.4.3	APC Specification	22
1.4.4	APC + 60-tool Specification	24
2.	INSTALLATION DRAWINGS	25
2.1	NV5000A/40	25
2.1.1	Standard	25
2.1.2	APC Specification	26
2.2	NV5000A/50	27
2.2.1	Standard	27
2.2.2	APC Specification	28

2.3	NV5000B/40	29
2.3.1	Standard	29
2.3.2	APC Specification	30
2.4	NV5000B/50	31
2.4.1	Standard	31
2.4.2	APC Specification	32
3.	FOUNDATION DIAGRAMS	33
3.1	NV5000A	33
3.1.1	Standard	33
3.1.2	Dry Anchor Specification	35
3.1.3	APC Specification	37
3.2	NV5000B	39
3.2.1	APC Specification	39
3.2.2	APC + Dry Anchor Specification	41
4.	DISASSEMBLY DIAGRAMS	44
4.1	NV5000A/40	44
4.2	NV5000A/50	45
4.3	NV5000B/40	46
4.4	NV5000B/50	48
5.	SPINDLE SPEED OUTPUT DIAGRAMS	50
5.1	NV5000/40	50
5.1.1	Standard	50
5.1.2	20000 min ⁻¹ Specification	51
5.2	NV5000/50	52
5.2.1	8000 min ⁻¹ Specification	52
5.2.2	15000 min ⁻¹ Specification	53
6.	AXIS TRAVEL DIAGRAMS	54
6.1	NV5000A/40	54
6.1.1	Standard	54
6.1.2	APC Specification	57

6.2	NV5000A/50	61
6.2.1	Standard	61
6.2.2	APC Specification	64
6.3	NV5000B/40	66
6.3.1	Standard	66
6.3.2	APC Specification	69
6.4	NV5000B/50	73
6.4.1	Standard	73
6.4.2	APC Specification	76
7.	TABLE DIMENSIONS	78
7.1	NV5000A	78
7.2	NV5000B	79
8.	SUB TABLE DIMENSIONS	80
8.1	Standard	80
8.2	T-slot Specification	81
9.	PALLET DIMENSIONS	82
9.1	NV5000A	82
9.1.1	T-slot Pallet	82
9.1.2	Tap Pallet (inch)	83
9.2	NV5000B (APC Specification)	84
9.2.1	T-slot Pallet	84
9.2.2	Tap Pallet (inch)	85
10.	TOOL SHANK DIMENSIONS	86
10.1	MAS.	86
10.1.1	No. 40 Taper	86
10.1.2	No. 50 Taper	87
10.2	CAT	88
10.2.1	No. 40 Taper	88
10.2.2	No. 50 Taper	89

10.3	Side Through-spindle Coolant Hole	90
10.3.1	No. 40 Taper	90
10.3.2	No. 50 Taper	90
11.	RETENTION KNOB DIMENSIONS	91
11.1	Tables of Retention Knob	91
11.1.1	No. 40 Taper Specification	91
11.1.2	No. 50 Taper Specification	92
11.2	MAS Mori 90°	93
11.2.1	No. 40 Taper	93
11.2.2	No. 50 Taper	93
11.3	CAT Mori 90°	94
11.3.1	No. 40 Taper	94
11.3.2	No. 50 Taper	94
11.4	Cautions on Using Retention Knob	95
12.	TOOL RESTRICTIONS	96
13.	MOUNTABLE ACCESSORIES OF SPINDLE HEADS	97
13.1	NV5000A/40	97
13.2	NV5000A/50	98
14.	SPINDLE BEARING LUBRICATION PUMP DIAGRAM	99
15.	COOLANT PUMP DIAGRAMS	102
15.1	Spindle Coolant Pump (Standard)	102
15.2	High Pressure Coolant Pump (Through-spindle Coolant System Specification, Scraper Drum Filter Type Chip Conveyor Outside Machine Specification)	105
15.3	Chip Flush Coolant Pump (Standard)	107
16.	CHARGE TANK (FOR OIL SHOT, OIL MIST)	109
17.	HYDRAULIC UNIT DIAGRAMS	111
17.1	Hydraulic Circuit Diagram	111
17.2	General View and Specifications of Hydraulic Unit	113
17.2.1	NV5000B (APC Specification)	113
17.3	General View and Specifications of APC Valve Unit	116

18. PNEUMATIC CIRCUIT DIAGRAMS	118
19. OIL COOLER DIAGRAMS	122
19.1 NU-YEC112BMN03.....	122
19.2 PS-NVD5000-CUA	128
19.3 Coolant Cooling Unit	137
