

**INSTRUCTION MANUAL**  
**SH C**  
**INJECTION MOLDING MACHINE**  
**SH 100•130•160•220•280•350**

# TABLE OF CONTENTS

|                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>INTRODUCTION</b>                                    | <p>PREFACE</p> <p>Warranty</p> <p>Precautions for Exportation</p> <p>For Your Safety</p> <p>Danger/Caution Plate</p> <p>Safety</p> <p>Precautions about Electric Circuits and Devices</p> <p>Care to be Taken for Installation of Peripheral Devices</p> <p>Care to be Taken when Using Injection Molding Machine</p> <p>On Screw Revolution after Finishing Disassembly and Reassembly of the Screw Assembly</p>                                                                                                                                                                                                                                                                                                                                                          |
| <b>Chapter 1<br/>SUMMARY</b>                           | <p>Main Specifications ..... 1 - 1</p> <p>Identification of Molding Machine Components ..... 1 - 3</p> <p>Operation Panel Identification ..... 1 - 4</p> <p>Arrangement of Encoders/Limit Switches/Proximity Switches ..... 1 - 5</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Chapter 2<br/>PREPARATION<br/>FOR<br/>OPERATION</b> | <p>For Your Safety ..... 2 - 1</p> <p>Preparation and Checking before Operation ..... 2 - 2</p> <p>1. Checking the Hydraulic Tank for Proper Oil Level ..... 2 - 4</p> <p>2. Feeding the Hydraulic Oil Cooling Water ..... 2 - 4</p> <p>3. Feeding of Water to Water Jacket ..... 2 - 5</p> <p>4. Resetting the Emergency Stop Button ..... 2 - 6</p> <p>5. Main Power Supply and Control Power Supply ..... 2 - 6</p> <p>6, 7. Hydraulic Oil Pump Motor ON/OFF ..... 2 - 7</p> <p>8. Supplying the Heater Power/Heating up the Heating Cylinder ..... 2 - 8</p> <p>9. Air Bleeding from Hydraulic System ..... 2 - 9</p> <p>10. Mold Clamping Safety System<br/>(Safety door interlocking function) ..... 2 - 10</p> <p>11. Injection Unit Safety Device ..... 2 - 12</p> |
| <b>Chapter 3<br/>OPERATION</b>                         | <p>Effects of Mode Selection ..... 3 - 1</p> <p>Starting of Motor and Heater ..... 3 - 2</p> <p>Operations in Standby Mode ..... 3 - 3</p> <p>Operations in Manual Mode ..... 3 - 6</p> <p>Operation in OFF Mode ..... 3 - 10</p> <p>Operations in Semi-Automatic Mode ..... 3 - 11</p> <p>Operations in Automatic Mode ..... 3 - 13</p>                                                                                                                                                                                                                                                                                                                                                                                                                                   |

**Chapter 4**  
**MOLDING**  
**PROGRAM**

|                                                     |         |
|-----------------------------------------------------|---------|
| Setting/Operation Panel Identification .....        | 4 - 1   |
| Various LEDs / Space Card Slot .....                | 4 - 2   |
| Emergency Stop Button & Display .....               | 4 - 3   |
| Identification of Screen Setting Keys .....         | 4 - 4   |
| Programming Method .....                            | 4 - 5   |
| Language Change-over .....                          | 4 - 7   |
| Examples of Displayed Screen .....                  | 4 - 8   |
| SET UP Screen .....                                 | 4 - 25  |
| SET UP Screen (Standby) .....                       | 4 - 28  |
| CLAMP Screen .....                                  | 4 - 30  |
| INJECTION Screen .....                              | 4 - 35  |
| INJECTION Screen (2V-2P) .....                      | 4 - 38  |
| INJECTION Screen (5V-4P) .....                      | 4 - 41  |
| INJ. DETAIL Screen .....                            | 4 - 43  |
| TEMP. Screen .....                                  | 4 - 46  |
| TEMP : MOLD Screen .....                            | 4 - 50  |
| CUTOFF Screen .....                                 | 4 - 51  |
| OUTLINE Screen (2V-2P) .....                        | 4 - 52  |
| OUTLINE Screen (5V-4P) .....                        | 4 - 53  |
| ANALYSIS Screen .....                               | 4 - 54  |
| SUPERVI. Screen .....                               | 4 - 56  |
| Q'LTy CNT Screen (When supervision is unused) ..... | 4 - 59  |
| Q'LTy CNT Screen (When supervision is used) .....   | 4 - 61  |
| Q' : DETAIL Screen .....                            | 4 - 63  |
| PROD CONT Screen .....                              | 4 - 65  |
| PROD CONT Screen (Stocker) .....                    | 4 - 67  |
| STORAGE Screen .....                                | 4 - 68  |
| AUTO PROG. Screen .....                             | 4 - 70  |
| SET. LIST Screen .....                              | 4 - 72  |
| AUTO START Screen .....                             | 4 - 74  |
| MAINT. Screen .....                                 | 7 - 76  |
| ABNORMAL Screen .....                               | 4 - 78  |
| Printing Function .....                             | 4 - 86  |
| SYSTEM SETUP Screen .....                           | 4 - 89  |
| EXTENSION Screen .....                              | 4 - 92  |
| I/O CHECK Screen .....                              | 4 - 94  |
| Protect Screen .....                                | 4 - 101 |

**Chapter 5**  
**MOLDING**

|                                                                     |        |
|---------------------------------------------------------------------|--------|
| Checking before Operation/Starting .....                            | 5 - 1  |
| Mounting the Mold .....                                             | 5 - 4  |
| Symptoms and Causes of Main Molding Defects .....                   | 5 - 19 |
| Checking at the End of Molding Operation/Stopping the Machine ..... | 5 - 20 |

|                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                   |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Chapter 6<br/>FUNCTION OF<br/>INDIVIDUAL<br/>UNITS</b> | Hydraulics ..... 6 - 1<br>Mold Clamping Unit ..... 6 - 2<br>Hydraulic Ejector ..... 6 - 5<br>Injection and Plasticizing Unit ..... 6 - 6                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                   |
| <b>Chapter 7<br/>MAINTENANCE</b>                          | Daily Inspection ..... 7 - 1<br>Every Month Inspection ..... 7 - 18<br>Every 3 Months Inspection ..... 7 - 23<br>Every 6 Months Inspection ..... 7 - 31<br>Every Year Inspection ..... 7 - 39<br>Every 3 Years Inspection ..... 7 - 48<br>Every 4 Years Maintenance ..... 7 - 52<br>Disassembling and Reassembling Screw Assembly ..... 7 - 54<br>Nozzle Center Adjustment ..... 7 - 60<br>Replacing the Fuses ..... 7 - 61<br>Replacing the Battery ..... 7 - 64 |                                                                                                                                                                                   |
| <b>Chapter 8<br/>OPTIONAL<br/>ACCESSORIES</b>             | The following provides useful data well fitted to customer's specification.                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                   |
| <b>Chapter 9<br/>Supplementary<br/>Explanations</b>       | The descriptions of supplementary explanations are appended.                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                                                   |
| <b>APPENDIX</b>                                           | Selection of an Injection Molding Machine ..... A - 1<br>Making a Choice of Screw Assembly ..... A - 3<br>Characteristics of Thermoplastic Resin & General Molding Conditions ..... A - 6<br>How to Calculate Plasticizing Stroke ..... A - 8<br>How to Calculate Mold Clamping Force ..... A - 9<br>Consideration to be Given to Purging ..... A - 10                                                                                                            |                                                                                                                                                                                   |
| <b>Guide to<br/>Preparations<br/>for Installation</b>     | Read this Instruction Guide before operating your machine                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                   |
| <b>ATTACHED<br/>MATERIALS</b>                             | General Assembly<br>Foundation Plan<br>Mold Platens<br>Nozzle • Needle • Heater List<br>Hopper Arrangement<br>Hydraulic Circuit Diagram<br>Operation Sequencer<br>Hydraulic Equipment Arrangement Layout<br>Mold Clamping Cylinder                                                                                                                                                                                                                                | Hydraulic Ejector Cylinder<br>Injection Unit<br>Control Unit Parts Layout<br>Operation Unit Parts Layout<br>Elementary Diagram<br>Heater Bands<br>Spare Parts List<br>Parts Guide |