

# AUTOGAUGE

FOR PRESS BRAKES & SHEARS

# 1000

CNC OPERATOR MANUAL

**AUTOMECH**

82 Calvary Street, Box 519 Waltham, MA 02154  
Telephone 617-893-3403 Telex: 4972530

## TABLE OF CONTENTS

Section I	Page
How to Use Manual.....	3
System Description.....	4
Display Functions.....	7
Bend Allowance Chart.....	11
Section II	
Simple Operation - One Axis.....	17
Programming Example - One Axis.....	18
Two-Axis Operation	
Simple Operation - Two Axis - Category I - Pure Hydraulic.....	21
Programming Example.....	23
Simple Operation - Two Axis - Category II - Up-Acting Hydraulic.....	25
Programming Example.....	27
Simple Operation - Two Axis - Category IV & V - Depth-Stop Hydraulic.....	29
Programming Example.....	31
Section III	
Correction to Dimensions.....	33
Use of Angle Mode.....	34
Memory Use.....	35
Optional 2000 Station Memory.....	36
Clear Memory.....	37
Program Ram Offset.....	38
Program Retract/Delay.....	39
Calculate Bend Allowance.....	40
Set Ram Slow-Down.....	41
Error Modes.....	42
Operation of Ram Control Relays.....	43
Photos of Typical Installation.....	44
Shock Mount Operation.....	45
Change Display Modes.....	46
Host Mode Switches.....	48

Scale Factors.....	53
Program Sheet Example.....	54
Decimal Equivalent Table.....	55
Metric Conversion Table.....	56
Specifications.....	57
Blank Program Sheet.....	60
Mounting Procedure.....	61
One-Axis Calibration.....	71
Gauging Surfaces.....	72
Assembly of Uprights.....	74
Parts.....	95
Maintenance & Troubleshooting.....	104
Section IV	
Front Gauge - Installation.....	113
Front Gauge - Operation.....	118
Programmable Gauge Bar Height.....	121
Section V	
Product Literature	