

NT-series

Support Tool for Windows 95/98 Ver. 3.2

Operation Manual

Produced September 1999

TABLE OF CONTENTS

SECTION 1

Introduction to the Support Tool	1
1-1 What Is Support Tool?	2
1-2 Equipment Necessary for Using the Support Tool	7
1-3 General Configuration of the Support Tool	8
1-3-1 Outline of Screen Data	8
1-3-2 Correspondence to PC (PLC) Data	11
1-3-3 Tables	17
1-3-4 Types of Screens	19
1-4 Basic Operation Flow	22
1-5 Menu Chart	23
1-6 Usable Hardware Combinations	28
1-6-1 Applicable PT	28
1-6-2 Communication method for each PT type	29

SECTION 2

Setting Up the Support Tool	31
2-1 Before Installing the Software	32
2-2 Installing the Support Tool	34
2-2-1 Basic Installation Operation	34
2-2-2 Procedure	35
2-2-3 Uninstall	40

SECTION 3

Support Tool Starting-up and Exiting Procedure and File Operation	41
3-1 Starting-up and Exiting the Support Tool	42
3-1-1 Start-up Procedure	42
3-1-2 Exit Procedure	43
3-2 User Interface	44
3-2-1 Functions Provided in the Main Window	44
3-2-2 Major Functions of Dialog Boxes	48
3-2-3 Functions of Message Boxes	50
3-3 Operation of Screen Data (Application) File	51
3-3-1 Creating New Screen Data (Application) File	51
3-3-2 Reading the Existing Screen Data (Application) File	59
3-3-3 Saving the Screen Data (Application) File	60
3-3-4 Closing the Screen Data (Application) File	62
3-3-5 Importing (Reading) the DOS Version Screen Data (Application) File	63
3-3-6 Importing Components from Different Screen Data File (Starting Up the Second Support Tool)	64
3-3-7 Using Method of Parts Collection	68

SECTION 4

Application Manager	71
4-1 What Is the Application Manager?	72

4-2	Operating the Application Manager	74
4-2-1	Opening a Data Creation Screen	74
4-2-2	Closing a Creation Screen	74
4-2-3	Creating a New Screen	74
4-2-4	Copying a Screen	75
4-2-5	Deleting a Screen	76
4-2-6	Displaying and Setting the PT configuration	76
4-2-7	Displaying and Setting Screen Properties	76
4-2-8	Editing a Table	77
4-2-9	Copying the Whole Table	77
4-2-10	Saving the Screen Data (Application) to a File	78
4-2-11	Error Check (Validation)	79
4-2-12	Sending (Downloading) the Data to a PT	81
4-2-13	[Window] Menu	83
4-2-14	[Help] Menu	85

SECTION 5

Screen Types 87

5-1	Types of Screens, Common Dialog Box Settings and Operations	88
5-1-1	Setting the Screen Attributes	89
5-1-2	Grid Setting	91
5-1-3	Changing the Display Method on the Support Tool	92
5-1-4	Filter function	96
5-1-5	Switching Screens by Extended I/O Input at Each Screen	97
5-1-6	Saving the Screen Image	99
5-2	Standard Screen	100
5-3	Continuous/Overlapping Screens	101
5-3-1	Continuous Screens	101
5-3-2	Overlapping Screens	103
5-3-3	Editing a Parent Screen (Modification)	104
5-4	Window/Keyboard Screens	105
5-4-1	Window/Keyboard Screens	105
5-4-2	Improved input key-window/keyboard function	107
5-5	Extended Screen	111
5-6	Occurrence History Screen	112
5-7	Frequency History Screen	113
5-8	Host Connect Screen (System Initializing Screen)	114
5-9	Password Screen	115
5-10	Menu Screen	115
5-11	Print Format Screen	116

SECTION 6

Element Operating Procedure 117

6-1	Common Operation	119
6-1-1	Creating an Element	119
6-1-2	Pop-up Edit Menu	120
6-1-3	Selecting an Element	120
6-1-4	Modifying an Element	124
6-1-5	Copying, Cutting, Pasting, and Deleting Elements	126
6-1-6	Aligning Elements	129
6-1-7	Grouping Elements	130

6-1-8	Associating Elements with the Touch Switch	131
6-1-9	Centralizing the Label of Lamp and Touch Switch	132
6-1-10	Setting Properties	133
6-1-11	Relationships between Elements and Memory Tables	148
6-2	Fixed Display	149
6-2-1	Polyline	149
6-2-2	Arc	151
6-2-3	Rectangle	152
6-2-4	Circle	153
6-2-5	Polygon	155
6-2-6	Sector	157
6-2-7	Text	158
6-2-8	Tiling	161
6-2-9	Image Object (Data)	163
6-2-10	Mark	167
6-2-11	Library Object (Data)	169
6-3	Alarm	173
6-3-1	Alarm List	174
6-3-2	Alarm History	181
6-4	Data Input	187
6-4-1	Numeral Input	187
6-4-2	(Character) String Input	196
6-4-3	Thumbwheel Switch	205
6-5	Lamps	209
6-5-1	Standard Lamps	209
6-5-2	Image/library Lamps	212
6-6	Numeral Display	215
6-7	(Character) String Display	219
6-8	Touch Switches	222
6-8-1	Input Notify Touch Switch	228
6-8-2	Switch Screen Touch Switch	228
6-8-3	(Character) String Input Touch Switch	229
6-8-4	Pop-up Window/Keyboard Function Touch Switch	229
6-8-5	Control Code Input Touch Switches	231
6-8-6	Copy Setting Touch Switch	233
6-8-7	Cursor Moving Touch Switch	235
6-8-8	Window Moving Touch Switch	236
6-8-9	Print Screen Touch Switch	237
6-9	Graphs	238
6-9-1	Bar Graph	238
6-9-2	Analogue Meter	243
6-9-3	Broken-line Graph	251
6-9-4	Trend Graph	257
6-10	Registering Created Elements (Symbol Manager Operation)	268
6-10-1	Screen Configuration of Symbol Manager	268
6-10-2	Basic Symbol Manager Operation	269
6-10-3	Operating the Symbol Manager	271
6-10-4	Pasting a Symbol to Screen	275
6-10-5	Operating Procedure of Color Palette Symbol	276

SECTION 7

Memory Table Setting 279

7-1	Common Operation	280
7-1-1	Reference Operation	280
7-1-2	Search Operation	282
7-1-3	Batch Address Change Operation	284
7-1-4	Edit Operation	286
7-1-5	Copy Increment Setting Operation	289
7-1-6	Table Display Operation by Specifying the Table Number	290
7-2	Numeral Memory Tables	291
7-2-1	Operation Procedure	291
7-2-2	Related Elements	292
7-2-3	Description of Numeral Memory Table Fields	292
7-3	Character String Memory Tables (String Tables)	298
7-3-1	Operation Procedure	298
7-3-2	Related Elements	299
7-3-3	Description of Character String Memory Table (String Table) Fields	299
7-3-4	Inserting Mark Data into a (Character) String	302
7-3-5	Inserting Image Data into a (Character) String	303
7-3-6	Inserting Library Data into a (Character) String	304
7-4	Bit Memory Tables	305
7-4-1	Operation Procedure	306
7-4-2	Related Elements	306
7-4-3	Description of Bit Memory Table Fields	306
7-5	Extended I/O Input Tables	310
7-5-1	Operation Procedure	311
7-5-2	Description of Extended I/O Input Table Fields	312
7-6	Extended I/O Output Table	315
7-6-1	Operation Procedure	315
7-6-2	Description of Extended I/O Output Table Fields	316
7-7	I/O Comment Tables	317
7-7-1	Operation Procedure	317
7-7-2	Description of I/O Comment Table Fields	318
7-7-3	Importing I/O Comment from Ladder Program	320
7-8	F-Key Input Notify Table	324
7-8-1	Operation Procedure	324
7-8-2	Description of F-Key Input Notify Table	324

SECTION 8

Editing Graphic Data 325

8-1	Image Editor	326
8-1-1	Operating the image table	326
8-1-2	Creating Image Data Using Image Editor	329
8-2	Library Editor	339
8-2-1	Operating the library table	339
8-2-2	Creating Library Data Using Library Editor	342
8-3	Mark Editor	347
8-3-1	Screen Configuration	347
8-3-2	Creating Marks Using the Mark Editor	348

SECTION 9	
Example Screens	355
9-1 Example Screen Configuration	356
9-1-1 Screen Configuration	356
9-1-2 Screen Transfer among Example Screens	357
9-2 Operation Flow	363
9-3 Creating the Sample Data	367
9-3-1 Starting up the Support Tool	367
9-3-2 [File] - [New]	367
9-3-3 Setting the PT Configuration	367
9-3-4 Setting Memory Tables	368
9-3-5 Creating the Menu Screen	371
9-3-6 Creating the Monitor Screen (Child Screen 1)	375
9-3-7 Creating the Monitor Screen (Child Screen 2)	381
9-3-8 Creating the Monitor Screen (Parent Screen)	392
9-3-9 Creating the Set Screen	393
9-3-10 Creating the Alarm Screen	405
9-3-11 Creating the Alarm List Library Data	411
9-3-12 Creating the Pop-up Display Numeric Keys	413
9-3-13 Saving the Created Data	417
9-3-14 Downloading to the PT	418
SECTION 10	
Quick Reference	419
SECTION 11	
Data Communications with a PT	437
11-1 Preparation for Data Communications with a PT and Data Communication Procedure .	438
11-1-1 Connection to PT	438
11-1-2 Available Data Communication Methods by PT Models	439
11-1-3 Data Communication Procedure	440
11-2 Communication Setting at the Support Tool	441
11-3 Sending (Downloading) the Data	442
11-4 Receiving (Uploading) Data	445
11-5 Receiving (Uploading) the History Record	448
11-6 Setting and Reading the Date and Time	449
SECTION 12	
Making Reports	451
12-1 Report Types	452
12-1-1 Cross-Reference	453
12-1-2 Direct Connection Information	454
12-1-3 History Report	455
12-1-4 Image/Library Report	455
12-1-5 Mark List	456
12-1-6 Screen Image	457
12-1-7 Screen List	458
12-1-8 Table Report	458
12-1-9 Validation Report	458
12-2 Printing Reports	459

12-2-1 Printer Setting	459
12-2-2 Output to a Printer	460
12-2-3 Output to a File (RTF)	465
12-3 Displaying the Print Image (Preview)	467
12-4 Outputting the Screen Image	468
APPENDICES	469
APPENDIX A Data Conversion	470
Direct Access Types	470
Data Conversion Procedure	471
Correcting the Screen Data Conversion	473
APPENDIX B System Installer Operation	490
Applicable PT Models	490
Starting and Exiting the System Installer	491
Functions of the Main Window	492
Installing the System Program	494
APPENDIX C NT Transfer Utility	495
Equipment necessary for using the NT Transfer Utility	495
Installing the NT Transfer Utility	496
How to use the NT Transfer Utility	499
APPENDIX D Table of Functions of Each PT Model	503
PLC Vendor (PT Configuration-PT Type)	503
System Setting (PT Configuration)	504
Report	505
Data Transmission (Download/Upload)	505
Image Data, Library Data, and Marks	506
Memory Tables	506
Screens	508
Screen Properties	508
Elements	509
APPENDIX E Limits on Numbers of Elements	522
Limits with Conventional Models	522
New Models	523
APPENDIX F New Functions of Support Tool Ver.3.2	526
APPENDIX G Error Messages	530
APPENDIX H Short Cut Keys	535
APPENDIX I Connecting Cable Specifications	536
Tool Interface Connector Specifications	536
Assembly of Connecting Cables	536
APPENDIX J	538
Keycode Tables and Conversion Rule	538
ISO 8859/1	538
MS-DOS CP437	539
Keycode Conversion Rule	540