



Operating Instructions

**Plate, Section and Barstock Shears
with Notcher and Punch**

Model 210/16

Paul Ferd. Peddinghaus . 5820 Gevelsberg / W. Germany



C O N T E N T S

page

1. General	2
1.1. Foundation dimensions	2
1.2. Performance table metric measure	3
1.3. Performance table English measure	3
2. Transporting the machine	4
3. Connecting the motor	4
4. Accessories	5
5. Lubrication	5
6. Description of the machine	6
6.1. The plate shears	6
6.2. The section shears	7
6.3. The barstock shears	13
6.4. The notcher	14
6.5. The punch	16
6.6. Readjusting the guideways	18
6.7. The clutch	19
7. Maintenance and care of tools	21

Spare parts list with order number

*) Please state when ordering tools or spare parts.