

OKK

AUTO MILLER
MHA 4 5 0 P

SPECIFICATIONS & INSTALLATION
INSTRUCTION MANUAL

OKK CORPORATION
3-21-9, Toyosaki, Kita-ku
Osaka, Japan

MHA45P-I
April, 1992-P

SPECIFICATIONS & INSTALLATION CONTENTS

I . MACHINE OVERVIEW	1~9
1. Machine Main Body Specifications	1
2. Spindle Output / Torque Diagram	2~3
3. Major Dimensional Drawing	4
4. Floor Space Drawing	5
5. Main Parts Drawing	6~8
6. Main Parts Name	9
II . MACHINE INSTALLATION PROCEDURE	10~25
1. Machine Installation	10~17
1.1 Machine Transport and Carrying-in	10~11
1.2 Operation after Machine Carrying-in	11~12
1.3 Regular Levelling	13
1.4 Check before Transport	13
1.5 Machine Carrying-out	14
1.6 Foundation and Installation	15~16
1.7 Installation Foundation Drawing	17
2. Electrical Arrangements at Installation	18~19
2.1 Power Supply Connection and Connections at Respective Parts	18~19
2.2 Machine Operation Prearrangements	19
3. Hydraulic Oil and Lubricating Oil	20~22
3.1 Lubricating Oil Control Chart	21
3.2 Lubricating Oil List	22
4. Warming-up and Arbor Support Oil Level Adjustment before Machine Operation	23
5. Accessories	24~25
5.1 Standard Accessories List	24
5.2 Tool Box Contents List	25