

Micro FF Milling Machine

HYPER 5

(Professional A NC)

Operation Manual

MAKINO MILLING MACHINE CO., LTD.

No. HYP101-96(E)

Table of Contents

A. Specifications

1. Machine Specifications	A - 1
2. Standard Equipment	A - 2
3. Special Accessories	A - 3
4. Numerical Control "Professional A"	A - 5
5. Spindle Characteristics N-T and N-P	A - 9
6. Views	A - 10
7. Floor Plan	A - 11

B. Installation

1. Location for Installation	B - 1
2. Floor Plan	B - 1
3. Power and Compressed Air Supplies	B - 1
4. Foundation	B - 2
5. Lifting	B - 2
5.1 Lifting the Machine	B - 2
6. Installing and Leveling	B - 6
7. Power and Compressed Air Connections	B - 7
7.1 Connecting the Air Supply	B - 7
7.2 Connecting the Power Supply	B - 8
8. Preparation for Operation	B - 9
8.1 Removing Rust Preventive	B - 9
8.2 Removing Clamps	B - 9
8.3 Removing Lifting Hooks	B - 9
8.4 Placing Covers	B - 10
9. Turning on the Power	B - 12
10. Precautions for Installation	B - 13
10.1 Keeping the Spindle Front-cap On	B - 13
10.2 Coolant Tank and the Height of Installation	B - 14

C. Machine Operation

1. Identification of Machine Parts	C - 1
2. Safety Precautions	C - 2
3. Main Control Components	C - 3
3.1 Main Power Switch	C - 3
3.2 Main Control Panel	C - 4
3.3 Manual Pulse Generator	C - 6
4. Emergency Stop and Power Shutdown	C - 9
4.1 Emergency Stop	C - 9
4.2 Recovery from Emergency Stop	C - 10
4.3 Power Shutdown	C - 10
4.4 Alarms	C - 11

5. Initial Starting Procedure	C - 12
6. Machine Operations	C - 13
6.1 Manual Operations	C - 13
6.1.1 Manual Cutting Feed (Jog Feed)	C - 13
6.1.2 Manual Rapid Traverse	C - 13
6.1.3 Manual Pulse-generated Feed	C - 14
6.1.4 Manual Zero Return	C - 14
6.2 Automatic Operations	C - 15
6.2.1 Automatic Operation Modes	C - 15
6.2.2 Preparing for Automatic Operation	C - 16
6.2.3 Starting Automatic Operation	C - 17
6.2.4 Stopping and Restarting Automatic Operation	C - 18
6.2.5 Ending Automatic Operation	C - 20
7. Shutdown Procedure	C - 21
7.1 Shutting Down the Power	C - 21
7.2 Shutting Down the Air Supply	C - 21
7.3 Cleaning	C - 21

D. Spindle

1. Structure	D - 1
2. Tool Specification	D - 2
3. Tool Clamp/Unclamp	D - 4
4. Tool-length Measurement	D - 5
5. Spindle Start/Stop	D - 6
6. Allowable Spindle Speeds	D - 7
7. Changing Collets	D - 8
8. Precautions for Spindle Operation	D - 9
9. Accessory Toolbox	D - 10

E. ATC

1. Specifications	E - 1
2. Preparing Tools for ATC	E - 2
3. Press-fitting Snap-ring on Tools	E - 3
4. Tool Length and Snap-ring Position	E - 4
5. Loading Tools on Tool Magazine	E - 5
6. Changing Tool-magazine Plates	E - 6
7. ATC and Work Limitations	E - 7
8. Control Principles of ATC	E - 8
9. Outline of ATC Programming	E - 9
10. ATC Operation Sequence	E - 12
11. Precautions for Using ATC	E - 13

F. Manual Control Buttons

1. Magazine Check Button (one-touch function)	F - 1
2. Tool Length Measurement Button (one-touch function)	F - 2

3. Spindle Lock Button	F - 3
4. Spindle Centering Softkey	F - 4

G. Splashguard

1. Interlock Function	G - 1
2. Precautions	G - 1

H. Optional Equipment

1. Centering Microscope	H - 1
2. Small-diameter Tool Adapter	H - 2
3. Coolant Unit	H - 3

I. Machining Operation

1. Introduction of FF Machining Method	I - 1
2. Machining Conditions	I - 2
3. Example of Machining Program	I - 3
4. Precautions for Achieving High Precision	I - 8
4.1 Stabilizing Machine Operation	I - 8
4.2 Regulating Toolpoint Position	I - 9
4.3 Preventing Stepped Cuts	I - 10
4.4 Using Temperature-controlled Coolant	I - 11
4.5 Keeping the Spindle Collet Clean	I - 12
4.6 Maintaining the Tool-length Measurement Stylus	I - 13
5. Tools	I - 14

J. Periodical Maintenance

1. Daily Inspection	J - 1
1.1 Air Control Unit	J - 2
1.2 Air-hydraulic Unit	J - 3
1.3 NC Unit	J - 4
1.4 OilMatic Unit	J - 4
1.5 Lubricator	J - 5
1.6 Tool-length Measurement Stylus	J - 6
1.7 ATC Unit	J - 6
1.8 Collet	J - 7
1.9 Coolant Unit (optional)	J - 7
2. Periodical Maintenance: Every 3 Months	J - 8
2.1 Machine Level Adjustment	J - 8
3. Periodical Maintenance: Every 12 Months	J - 10
3.1 Ball Screws and Roller Linear Guides	J - 10
3.2 Air Control Unit	J - 12
4. Assembly Adjustments	J - 13
4.1 Lubricator Oil Adjustment	J - 13
4.2 Tool-length Measurement Stylus Sensor Adjustment	J - 14