

**ABSODEX
DIALOGUE TERMINAL
H-TYPE AX0170H
Motion Programming Tool**

INSTRUCTION MANUAL

Ver. 1.0 Dec.1996

CKD CKD Corporation

CONTENTS

CHAPTER 1 BEFORE STARTING

1.1 Precautions for Use	1
1.2 Features of Dialogue Terminal	3

CHAPTER 2 ABSODEX SPECIFICATIONS 5

CHAPTER 3 OPERATION

3.1 Dialogue Terminal and Description of Keys and Use ...	7
3.2 Operating Dialogue Terminal	9
▼ Mode Selection	9
Mode Section Method	9
▼ Edit Mode	10
Programming of Equal Segment Motion	10
NC Programming Procedure	17
Reading programs from Absodex Driver	19
Continued Editing of Programs	20
Storing Edited Program into Absodex Driver	20
Listing Program Numbers	22
Changing Edit Program Numbers	23
Changing Program Numbers in Absodex Driver	23
Deleting Program Number	25
Executing Sample Programs	26
▼ Display Mode	28
Displaying I/O Status	28
Displaying Motor Positions	29
Displaying Alarms	29
▼ Parameter Mode	30
Changing Parameter Data	31
Storing Edit Parameter Data	35
Changing Data on RAM	37

▼ Motion Mode	38
Starting Program	38
Stopping Active Program	39
Selecting Program to be Started	39
Resetting Alarm	40
Running Programs Block by Block	40
Executing MDI (Manual Data Input)	41
Turning Brake ON	41
Turning Brake OFF	42
Turning Servo ON	42
Turning Servo OFF	42
Setting Home Position Offset	43
Clearing Offset	44
Operating Terminal	45
Home Positioning	47
▼ Copy Mode	48
Reading Programs into the Terminal from the Absodex Driver	48
Storing Programs to the Absodex Driver from the Terminal	49
▼ Communication Error Display	50
 CHAPTER 4 COMMUNICATION CODE LIST	 51
 CHAPTER 5 NC PROGRAM	
5.1 Sample Program	54
5.2 NC Program Format	58
5.3 Error Code List	60
5.4 NC Code List	61
 CHAPTER 6 PARAMETER LIST	 66
 CHAPTER 7 ALARMS LIST	 71
 CHAPTER 8 DIALOGUE TERMINAL PROCESS FLOW	 72