


Operator's Manual

QuickSet

TRUMPF

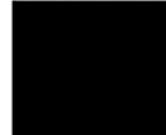

Operator's manual

QuickSet

Original operator's manual

Edition **2022-04-01**

EN

Chapter 1

Safety

1	Safety concept	1-3
2	Regulations and guidelines	1-4
3	Terms	1-5
4	Operational safety	1-6
4.1	Intended use	1-6
4.2	Significant change to the machine	1-6
4.3	Authorized personnel	1-7
5	Hazards	1-8
5.1	Mechanical dangers	1-8
	Aligning the punch with the alignment ring	1-8
	Lowering the cross beams for measuring procedures	1-8
	Lowering the cross beams with clamped punch	1-9



	Releasing the cross beams in measuring mode	1-9
	Indexing the tool change position	1-10
	Working with punches in punch holders	1-10
	Working with sharp-edged punch geometries	1-10
	Lifting and setting down the device	1-10
6	Organizational measures to be taken by the user	1-12
6.1	Training and instructing operators	1-12
6.2	Spare parts, accessories and operating materials	1-12
7	Disassembly and disposal	1-13



Chapter 2

Installation conditions

1	Installation conditions	2-2
1.1	Weights and space requirements	2-2
1.2	Electrical supply	2-3
1.3	Storage	2-4
1.4	Transport	2-5
	Unpacking the QuickSet	2-5
	Transporting the QuickSet	2-7
	Packing the QuickSet	2-7

Chapter 3

Description

1	Device functions	3-3
2	Components	3-4
2.1	Operating elements and display	3-5
2.2	Punch cross beam	3-6
2.3	Stripper cross beam	3-7
2.4	Tool setup aid	3-8
2.5	Measuring table	3-8
2.6	Ram	3-9
2.7	Additional punch holder	3-10
2.8	Die holder and clamping lever	3-11
2.9	Drawer	3-12
2.10	Alignment plane	3-13
2.11	Punch alignment station	3-13

2.12	Universal holder, calibration ring and parallel support	3-15
2.13	Locking lever	3-16
3	Accessories	3-17

Chapter 4

Operation

1	Operation	4-2
1.1	Referencing the QuickSet	4-2
1.2	Aligning the punch to the alignment ring	4-3
1.3	Setting up MultiTool	4-6
1.4	Determining the die regrind amount	4-6
1.5	Set up die	4-8
1.6	Performing a triple measurement	4-8
1.7	Measuring the tool length	4-9
1.8	Measuring the regrind amount of a punch (TC 500 / 600)	4-11
1.9	Measuring the tool length and plunging depth into stripper	4-12
1.10	Measuring the tool length and die height	4-13
1.11	Measuring the die height	4-14
1.12	Checking the punch alignment with the die	4-16
1.13	Setting up a size 2 tool cartridge	4-16
1.14	Setting up a size 5 tool cartridge	4-18
1.15	Removing the tool cartridge	4-20



Chapter 5

Setting work

1	Positioning the device	5-2
2	Menu settings	5-3



Chapter 6

Error message control

1	Error 00 - Missing position transmitters	6-2
2	Error 01 - No communication	6-3
3	Error 02 - No data transmission via CAN (defective cable)	6-4
4	Error 03 - No feedback from DHCP	6-5
5	Error 05 - No IP received via DHCP	6-6
6	Error 06 - No or invalid correction table	6-7



Chapter 7

FAQ

1	FAQ - Frequently asked questions	7-2
1.1	The device won't switch on	7-2
1.2	The punch won't lock into place in the punch holder	7-2
1.3	The measuring procedure won't start	7-2
1.4	Measured values are not recognized	7-2
1.5	Waiting time while transferring measured values	7-2
1.6	The punch won't lock into place in the punch alignment station	7-3
1.7	The tool cartridge locking pin won't release	7-3
1.8	The display texts aren't easily legible	7-3
1.9	The QuickSet is unstable	7-4



Chapter 8

Maintenance

1	Information on maintenance	8-2
2	Maintenance Overview	8-3
3	Maintenance points	8-4
3.1	Bushings and guide columns	8-4
	Lubricating the bushings and the guide columns	8-4
3.2	Punch alignment station	8-5
	Cleaning the flange bushing	8-5
	Lubricating the bushing	8-5
3.3	Measuring table	8-6
	Cleaning the measuring table	8-6
3.4	Drawer maintenance point	8-7
	Lubricating the guide rails	8-7
3.5	Ram maintenance point	8-8
	Lubricating the ram	8-8