

EQUIPTOP®

EC MACHINERY DIRECTIVE 89/392/EEC

INSTRUCTION MANUAL

HORIZONTAL SURFACE GRINDING MACHINE

**MODEL : 1228ASDII, 1236ASDII
1632ASDII, 1640ASDII**

EQUIPTOP MACHINERY CO., LTD.

.EC MACHINERY DIRECTIVE 89/392/EEC
OPERATION MANUAL

PRESERVE THIS MANUAL FOR
FUTURE REFERENCE AND USE

MACHINE NAME: HORIZONTAL SURFACE GRINDING MACHINE

MODEL: 1 2 2 8 A S D II , 1 2 3 6 A S D II

1 6 3 2 A S D II , 1 6 4 0 A S D II

VERSION: 1
DATE OF ISSUE : Mar, 2002
FILE NO.:12/16 ASD II

CONTENT

CHAPTER 1: SAFETY PRECAUTIONS

CHAPTER 2: GRINDER DESCRIPTION

2.1 : Introduction to the ASD II series grinder.....	4
2.2 : Noise level and operator position	5
2.3 : The main parts of machine,and the position of operator	6
2.4 : Dimensions and floor requirement	7
2.5 : The warning sign	9
2.6 : Potential hazards area	12
2.7 : The position of safety limits switches grinder.....	13
2.8 : Working area	14
2.9 : Assembly drawing of wheel flange and spindle.....	15
2.10 : Specification for 12/16 series	16
2.11 : Standard accessories and operation accessories	18

CHAPTER 3: REQUIREMENT OF MACHINE

3.1 :Space requirement	20
3.2 :Requirement of the ground.....	20
3.3 :Requirement of the enviroment.....	21
3.4 :Requirement of the electricity.....	22
3.5 :The specification of coolant water,hydraulic oil,and lubrication oil	22

CHAPTER 4:LIFING

4.1 :Lifting by the crane	23
4.2 :Moveing by fork lift	25
4.3 :Clamping for machine	26
4.4 :Installation of machine	26
4.5 :Adjust the leveling of machines	27

CHAPTER 5: PREPARTION BEFORE OPERATING MACHINE

5.1 :To remove desiccant and clean the anti-rust oil.....	29
5.2 :Remove the clamp	29
5.3 :Fill the lubrication oil	29
5.4 :Installation of hydraulic system	29
5.5 :Coolant system connection	30
5.6 :Power connection	32
5.7 :Re-check before operation.....	33
5.8 :The way to adjust parallel dresser	35

CHAPTER6: HOW TO OPERATE THE MACHINE

6.1 :Control panel FOR ASD II Series	36
6.2 :ASD II control panel	39
6.3 :Vertical movement FOR ASD II	46

6.4 :The operation of grinding machine	53
6.5 :Rotation test of wheel	54
6.6 :Table movement (Longitudinal movement)	55
6.7 :Saddle movement (cross movement)	57
6.8 :Grinding wheel Engaging/Disengaging Procedure	58
6.9 :Grinding wheel dressing procedure	58
6.10 :Balancing grinding wheel procedure.....	59
6.11 :Setting grinding wheel into flange	60
6.12 :Manual pulse generator for vertical movement.....	64
6.13 :Micro crossfeed control.....	65

CHAPTER7: CHOOSING AND STORING GRINDING WHEEL

7.1 :Standard wheel markings	66
7.2 :Recommended list of grinding wheel.....	67
7.3 :Storing the grinding wheel	68
7.4 :Sound test of wheel	69
7.5 :Choosing the wheel by knowing the wheel speed.....	70

CHAPTER8: MAINTENANCE

8.1 :Daily maintenance for the operator	71
8.2 :Monthly maintenance	72
8.3 :Hydraulic oil pressure adjust	75
8.4 :Piping of hydraulic system	76
8.5 :Trouble shootings when grinding workpiece	77

.EC MACHINERY DIRECTIVE 89/392/EEC
ELECTRICAL MANUAL

PRESERVE THIS MANUAL FOR
FUTURE REFERENCE AND USE

MACHINE NAME: HORIZONTAL SURFACE GRINDING MACHINE

MODEL: 1228 ASD II , 1236 ASD II
1632 ASD II , 1640 ASD II

CONTENT

CHAPTER 1:

1.1:DESIGN REQUIREMENT OF ELECTRICAL SYSTEM	1
1.2:GROUNDING SYSTEM DIAGRAM	2
1.3:EMERGENCY STOP DIAGRAM	3
1.4:LIMIT(OR PROXIMITY)SWITCHES LAYOUT	4
1.5:CONNECTING MAIN POWER SUPPLY	5
1.6:CONTROL PANEL FOR ASD II SERIOR	6

CHAPTER 2:ELECTRIC CIRCUIT DIAGRAM SERIES

CHAPTER 3:ELECTRICAL PARTS LIST

3.1: PART OF CONTROL STATION.....	20
3.2: PART OF OPERATION PANEL	21
3.3:PART OF LIMITS(OR PROXIMITY) SWITCHES	22
3.4:PART OF MOTOR	22
3.5:INSPECTION AND MAINTENANCE.....	23

.EC MACHINERY DIRECTIVE 89/392/EEC
PARTS LIST

PRESERVE THIS MANUAL FOR
FUTURE REFERENCE AND USE

MACHINE NAME: HORIZONTAL SURFACE GRINDING MACHINE

MODEL: 1228ASD II , 1236ASD II

1632ASD II , 1640ASD II

VERSION: I
DATE OF ISSUE : May, 2002
FILE NO.: 12&16ASD II

CONTENT

1 :Spindle (3811,4811).....	PL-01
2 :Column (3821,3821H,4821,4821H).....	PL-02
3 :Spindle & Column (3810,3810H,4810,4810H).....	PL-03
4 :Grinding Wheel & Column (2512A,3812,3813,3822,3822H,3823,3823H,3824,3813E,3813AE)	PL-04
5:Crosswise screw set (3631G,3631H,463G1,4631H)	PL-05
6:Saddle crosswise drive (2532,2532N,3634,2536,3637,3633,3639).....	PL-06
7:Table longitudinal drive	PL-07
8:Chuck & Splash guard (2548,3646,4746)	PL-08
9:Longitudinal hydraulic system (3643)	PL-09
10:Lifting structure (3654,3655)	PL-10
11:Electrical and Control box (3A3695,3695A)	PL-11
12:Vertical feed (3651-1,3651N-1,3651A-1,3651AN-1)	PL-12
13:Table reversing arrangement (3661)	PL-13
14:Hydraulic system (366).....	PL-14
15:Lubrication system (368)	PL-15

※ Following parts list are for many kinds of models. As there are several different specification of parts depends on different orders, please check carefully before placing any order. And you shall be able to contact local distributor for correct parts by this way. Thank you your attention to the above.