


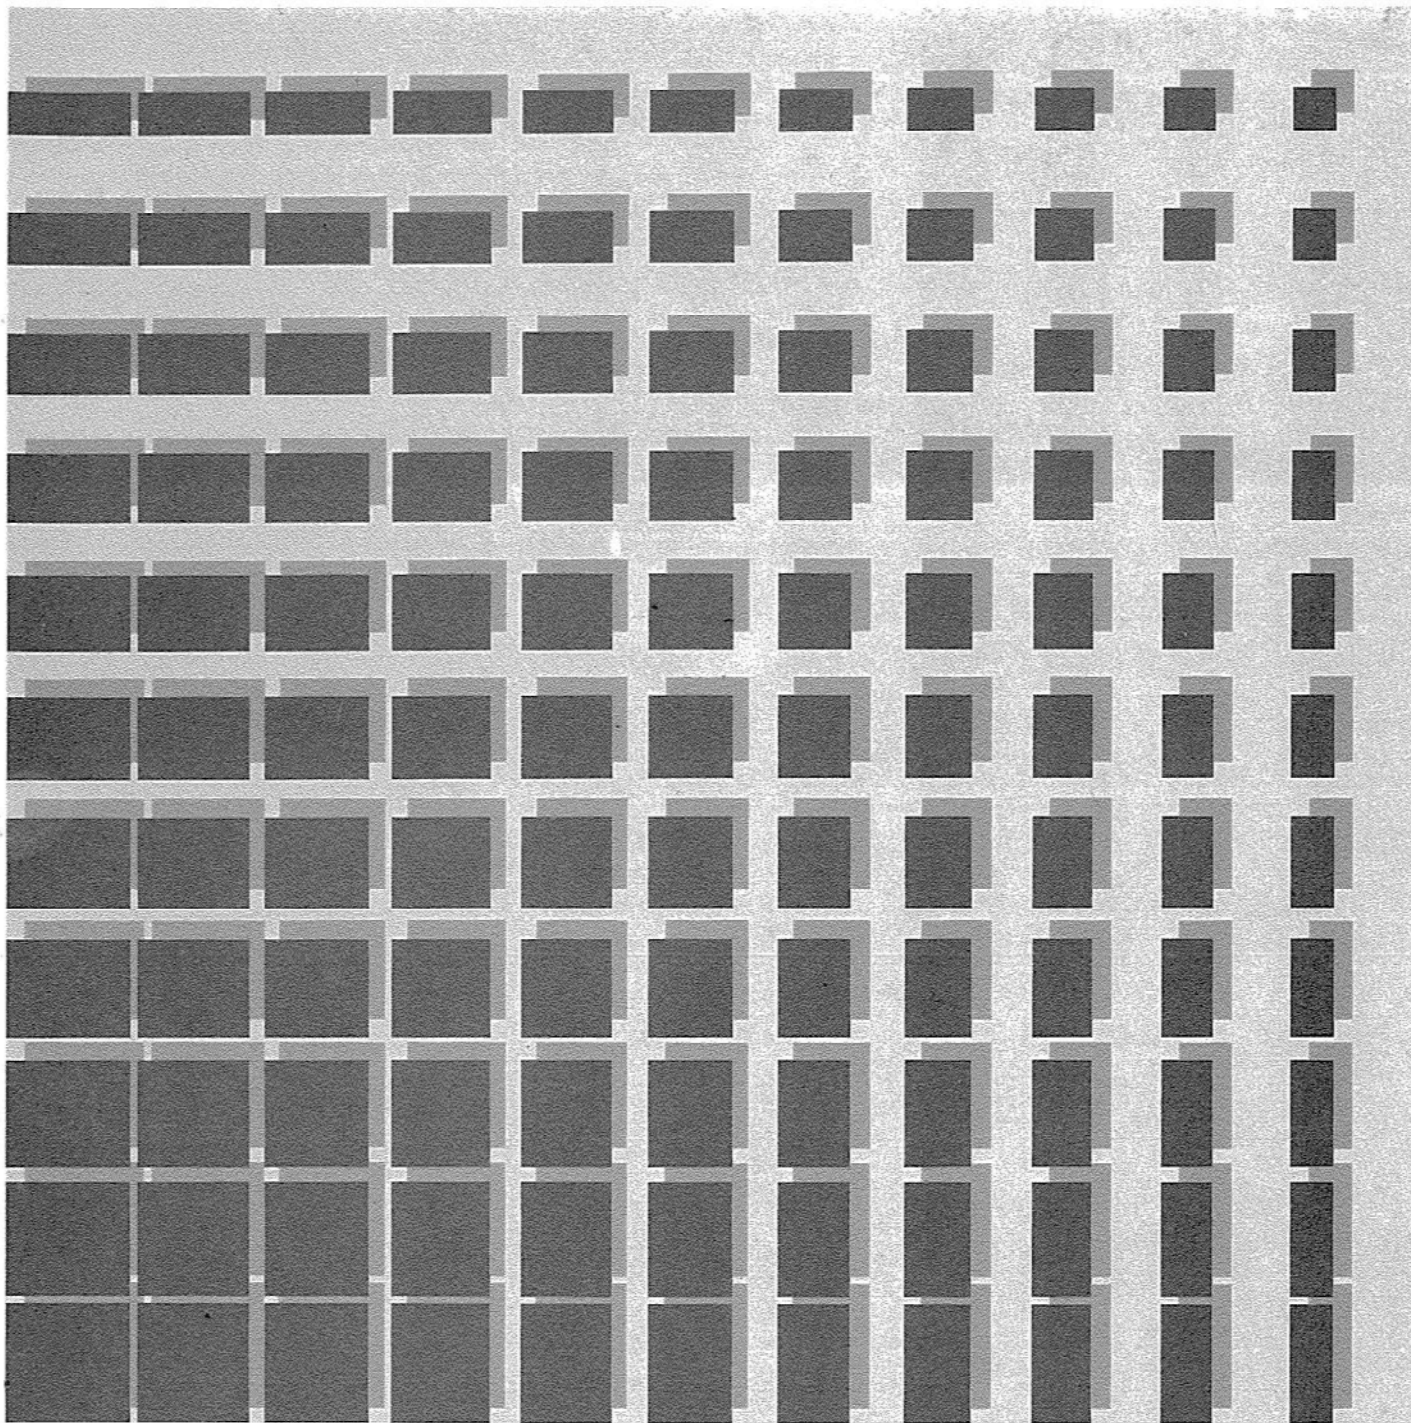

NV-10 / NV-11

NV-20 / NV-21

INSTALLATION & OPERATION MANUAL



Fagor Automation S. Coop. (Spain)

INSTALLATION INDEX

Introduction	1
Declaration of conformity	2
Safety conditions	3
Warranty terms	5
Material returning terms	6
 1. Unit description	 7
1.1 Front panel	7
1.2 Rear panel	9
1.3 General technical characteristics	10
 2. Connections	 11
2.1 connection of the feedback systems	11
2.2 Power and machine connection	12
2.3 Turning the unit on and off	12
 3. Parameter setting.....	 13
3.1 Parameters to configure axis count and display	15

INTRODUCTION

Warning:



Before starting up the DRO, carefully read the instructions of Chapter 2 in the Installation Manual.

The DRO must not be powered-on until verifying that the machine complies with the "89/392/CEE" Directive.

OPERATION INDEX

Introduction	1
1. Unit description	2
1.1 Front panel	2
1.2 Rear panel	4
2. Coordinate display	6
2.1 Display modes	6
2.2 Incremental, Absolute and with respect to Machine Reference Zero	7
2.3 Machine Reference selection and search	9
2.4 Axis coordinate preset	11
3. Special operations	14
3.1 Scaling factor	14
3.2 Part centering	14
3.3 Coordinate freeze (HOLD). Lathe	15
3.4 Operating with tool compensation (NV-20 / NV-21). Mill	16
3.4.1 Entering tool diameter	16
3.4.2 Example of how to work with tool compensation	16
3.5 Bolt-hole drilling (NV-20 / NV-21). Mill	19
Appendix	22
Error codes	22
Maintenance	24

INTRODUCTION

Throughout this manual, certain installation parameters are referred to which affect the description of certain DRO functions.

These parameters have been set by the installer and may be modified by the operator.

These parameters are described in the installation manual supplied with this unit.