

GAUGING SYSTEMS

OSP-P200M

INSTRUCTION MANUAL

(1st Edition)

Pub No. 5249-E (ME61-012-R1) June 2005

OSP INSTRUCTION MANUAL

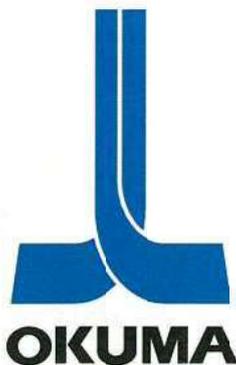


TABLE OF CONTENTS

SECTION 1 AUTOMATIC TOOL LENGTH OFFSET/AUTOMATIC TOOL BREAKAGE DETECTION FUNCTION	1
1. Overview	1
1-1. Displaying the Result of Gauging	2
1-2. Function Menu	3
2. Automatic Tool Length Offset/Automatic Tool Breakage Detection Operation	9
2-1. Setting the Touch Sensor Zero Point	10
2-2. Setting the Tool Pot No./Tool No. Table	16
2-3. Operation Mode Designation	17
2-4. Automatic Tool Length Offset Function	19
2-5. Setting the Tool Change Position (Other Than MC-H)	23
2-6. Automatic Tool Breakage Detection	24
2-7. Cycle Time Reduction for Automatic Tool Length Offset/Automatic Tool Breakage Detection Cycle	29
2-8. New Cycle Time Reduction Function for Automatic Tool Length Offset/Automatic Tool Breakage Detection Cycle	31
3. Automatic Tool Length Offset/Automatic Tool Breakage Detection Function for Special Tools and Attachments	35
3-1. Automatic Tool Length Offset/Automatic Tool Breakage Detection Function for Horizontal Tools of MCM	35
3-2. Operation for Automatic Tool Length Offset/Automatic Tool Breakage Detection on B/C-axis Attachments, 90° Angular Attachments and Extension Attachments (Option)	42
3-3. Operation of Automatic Tool Length Offset/Automatic Tool Breakage Detection with 30° Angular Attachments (Option)	51
3-4. Operation of Automatic Tool Length Offset/Automatic Tool Breakage Detection with 45° Angular Attachments (Option)	63
4. Y-axis Escape Position (MCM-B/MCR-B II/MCR-A/VH-40)	75
4-1. Setting the Y-axis Escape Position	75
4-2. Tool Movements during Automatic Tool Length Offset (Cutter Radius Compensation)/Automatic Tool Breakage Detection Cycle	76
5. Interference Prevention Measures for MCV-A/MCV-A II During Execution of the Automatic Tool Length Offset/Automatic Tool Breakage Detection Cycle	78
5-1. Touch Sensor Operation Interlock	78
5-2. Measures against Interference during Execution of the Automatic Tool Length Offset/Tool Breakage Detection Cycle	78
6. Variables Used in Subprograms	80
6-1. Table of Subprograms and Variables	80
6-2. Table of Subprograms and Variables (MCM Horizontal Tools)	83
6-3. How to Use Variables	86
7. Cautions on Operation	94
8. Program Examples	96
8-1. Automatic Tool Length Offset	96

8-2. Automatic Tool Breakage Detection.....	98
9. Alarm List.....	101
SECTION 2 AUTOMATIC GAUGING FUNCTION.....	108
1. Overview.....	108
1-1. Dimension Check Function.....	108
1-2. Automatic Zero Offset Function.....	108
2. Operation of the Automatic Gauging Function.....	109
2-1. Setting the Datum Hole Zero Point.....	110
2-2. Touch Probe Radius Compensation.....	112
2-3. Touch Probe Length Offset.....	118
2-4. Inner Diameter (ID) Gauging Function.....	120
2-5. Outer Diameter (OD) Gauging Function.....	122
2-6. End Face Gauging Cycle.....	125
2-7. Saving of Gauging Cycle Results.....	131
2-8. Calculating the Center and Distance between Two Points.....	132
2-9. Calculating the Center and Distance between Two End Faces.....	134
2-10. Automatic Zero Offset Function.....	137
2-11. Copying the Touch Probe Offset Data.....	138
3. Automatic Gauging Function for B-/C-axis, 90° Angular and Extension Attach- ments (Option).....	139
3-1. Automatic Gauging for 90° Angular Attachment and B-/C-axis Attachment (PAB=90°).....	141
3-2. Automatic Gauging for Extension Attachment and B-/C-axis Attachment (PAB=0°).....	142
4. Power ON/OFF Cycle of Renishaw's Optical Touch Probe (MP7/MP9/MP10).....	143
4-1. Power ON/OFF Cycle Commands.....	143
4-2. Power ON/OFF Cycle Operation.....	144
5. Details.....	146
5-1. Touch Probe Movements.....	146
5-2. Approach Speed to the Workpiece.....	149
5-3. Dwell Time in Work Gauging.....	151
5-4. Reducing Time before Movement of Touch Probe.....	151
5-5. Variables Used in Subprograms.....	152
6. Touch Probe Safety Measures.....	166
6-1. Checking Proximity Switch Operation.....	166
6-2. Replacing the Touch Probe Battery.....	167
7. Supplementary Information.....	168
8. Program Examples.....	170
8-1. ID Gauging.....	170
8-2. OD Gauging.....	171
8-3. End Face Gauging on Z-axis.....	172
8-4. Distance between End Faces (X-axis direction).....	173
8-5. Automatic Zero Offset.....	174

8-6. Example Program for MCM Horizontal Spindle	175
9. Examples of Gauging Result Display	178
10. Alarm List	181
10-1. Alarm List	181
10-2. Gauging Impossible Cause Code Chart (Alarm B 2305)	183
SECTION 3 GAUGING DATA OUTPUT TO FILE	189
1. Outline	189
2. Parameters	189
2-1. NC Optional Parameter Bit	189
3. Designation of Displaying Device	190
4. Print Command	190
4-1. System Variables for Printing	191
SECTION 4 MANUAL GAUGING	193
1. Overview	193
1-1. Specifications	193
1-2. Overview of Manual Gauging Functions	194
1-3. List of Display Screens	198
2. Basic Operation	199
3. Preparation for Gauging	200
3-1. Preparation for Work Gauging/Tool Length Gauging Cycles	200
3-2. Preparation for Cutter Radius Compensation Cycle	207
4. Work Gauging	209
4-1. End Face Gauging (X, Y, Z)	209
4-2. I.D. Center Gauging	214
4-3. O.D. Center Gauging	219
4-4. Internal Faces Center Gauging	226
4-5. External Faces Center Gauging	240
4-6. Inclination and Corner Gauging	254
5. Tool Length Gauging	263
6. Cutter Radius Gauging	266
7. Comparison and Calculation of Gauging Results	269
7-1. Transferring Gauging Results	269
7-2. Comparison with Gauging Data	271
7-3. Example of Calculation Results Display	272
8. Error List	275
SECTION 5 INTERACTIVE GAUGING FUNCTION	277
1. Specifications	277
2. List of Display Screen	278
3. Switches	279

3-1. Interactive Gauging Operation Panel	279
4. Terminology	280
5. Basic Operation	281
6. Outline of Interactive Gauging Function	282
7. Work Gauging Function	288
7-1. PARAMETER (WORK) Screen	288
7-2. PREPARATION (WORK) Screen	289
7-3. X, Y, Z END FACE	295
7-4. I.D. CENTER	299
7-5. O.D. CENTER	303
7-6. INT END CENTER	306
7-7. EXT END CENTER	309
7-8. INCLINE, CORNER	312
8. Tool Length Gauging	315
8-1. Parameter (Tool Length)	315
8-2. Preparation (Tool Length)	317
8-3. Tool Length Gauging	320
9. Other Supplementary Explanations	323
10. Operation Flow	325
11. Error List	326
SECTION 6 NON-CONTACT SENSOR CALCULATION FUNCTION	328
1. What is Non-contact Sensor?	328
2. Outline	329
3. Maker's Subprogram in the Movable Sensor Mode	330
4. Maker's Subprogram in the Fixed Sensor Mode	349
5. Maker's Subprogram for Gauging a Vertical Spindle Tool in the Fixed Sensor Mode	350
6. Maker's Subprogram for Gauging a Horizontal Spindle Tool in the Fixed Sensor Mode	366
7. List of Alarms	381
SECTION 7 NON-CONTACT SENSOR GAUGING FUNCTION FOR HORIZONTAL MC	382
1. What is Non-contact Sensor?	382
2. Outline	383
3. Gauging with the Fixed Sensor	383
4. Each Manufacturer's Subprogram for the Fixed Sensor	384
5. List of Alarms	402
SECTION 8 SPECIAL BARRIER FUNCTION FOR HORIZONTAL MC	403
1. Outline	403
2. Detailed Specifications	403

2-1. Parameter Setting.....	403
2-2. Setting Items.....	404
2-3. Barrier Range Setting Example.....	405
2-4. Barrier Alarm and Resetting Method	405
3. Alarms.....	406
3-1. Alarm A.....	406
SECTION 9 NON-CONTACT SENSOR GAUGING FUNCTION FOR MCR- AF	407
1. What is Non-contact Sensor?	407
2. Outline	408
3. Manufacturer's Subprogram for the Fixed Sensor.....	408
4. Manufacturer's Subprogram for Gauging Vertical Spindle Tools with the Fixed Sen- sor.....	409
5. List of Alarms	428
SECTION 10NON-CONTACT SENSOR GAUGING FUNCTION FOR 30°/ 45° AT (103 VERSIONS)	429
1. What is Non-contact Sensor?	429
2. Outline	430
3. Manufacturer's Subprogram for the Fixed Sensor.....	431
4. Manufacturer's Subprogram for 30°/45° AT Tool Gauging by the Fixed Sensor.....	432
5. List of Alarms	451