

TC-31A TC-31AN NC -OPERATION MANUAL

This manual is common with TC-31A and TC-31AN.

Please read this manual carefully before starting operation.

brother

CONTENTS

NC Operation

Chapter 1 General precautions----- 1-1

1-1	Precautions of first importance-----	1-2
1-1-1	When feeding an axis -----	1-2
1-1-2	When indexing the magazine -----	1-2
1-1-3	When performing an automatic operation -----	1-2
1-1-4	When performing a maintenance work or setup-----	1-3
1-1-5	In case of machine trouble or danger -----	1-4
1-1-6	Operate the machine correctly -----	1-4
1-2	Precautions on safety -----	1-5
1-2-1	Before turning on the machine -----	1-6
1-2-2	Before starting an operation -----	1-6
1-2-3	During an operation -----	1-7
1-2-4	If a machine trouble occurs during an operation-----	1-7
1-2-5	When turning off the machine -----	1-7
1-2-6	Other precautions-----	1-8
1-3	Person allowed for operation -----	1-9
1-3-1	Operation Qualifications -----	1-9
1-3-2	Working area -----	1-10

Chapter 2 General system description2.1 ----- 2-1

2-1	Main Features-----	2-2
2-1-1	ATC (Automatic tool changer)-----	2-2
2-1-2	Tapping cycle -----	2-3
2-2	Basic Configuration -----	2-4
2-2-1	Basic configuration-----	2-4
2-2-2	Machine rear -----	2-5
2-3	Table Size and Machining Volume -----	2-6
2-3-1	Table top surface dimensions -----	2-6
2-3-2	Machining volume -----	2-7
2-3-3	Jig design area -----	2-8

2-4	CNC unit specifications -----	2-11
2-5	Machining capability -----	2-13
2-6	Safety devices -----	2-14
2-6-1	Main safety devices -----	2-14
2-7	Coolant -----	2-14

Chapter 3 Operation ----- 3-1

3-1	Turning on the power -----	3-2
3-1-1	Preliminary checks -----	3-2
3-1-2	Turning on the power -----	3-3
3-2	Turning off the power -----	3-5
3-2-1	Checks before turning off the power -----	3-5
3-2-2	Turning off the power supply -----	3-5
3-3	Operation panel overview -----	3-6
3-4	Screen layout -----	3-7
3-5	Switches -----	3-8
3-6	Keys -----	3-11
3-7	Cautions on workpiece and tool setting -----	3-20
3-7-1	Limitation of tool holder -----	3-21
3-8	Setting and removing a tool on and from the magazine -----	3-23
3-8-1	Setting a tool on magazine -----	3-24
3-8-2	Removing a tool from the magazine -----	3-26

Chapter 4 Screen display ----- 4-1

4-1	Position screen -----	4-2
4-1-1	Present position screen -----	4-2
4-1-2	Screen of modal information -----	4-4
4-1-3	Screen of soft limit -----	4-6
4-1-4	Screen of enlarged display -----	4-7
4-2	Program display -----	4-8
4-3	Conditions of manual operation -----	4-8

4-4	Magazine-----	4-9
4-5	Alarm display -----	4-10
4-5-1	Alarm screen -----	4-10
4-5-2	Alarm log screen -----	4-11
4-6	Production monitor display -----	4-16
4-6-1	Work counter-----	4-16
4-6-2	Time display -----	4-18
4-6-3	Communication status display -----	4-20
4-6-4	Thermal measurement data -----	4-21
4-6-5	Measurement results -----	4-22
4-6-6	Automatic thermal displacement compensation -----	4-24
4-7	Data bank -----	4- 27
4-8	Erasing screen -----	4- 27

Chapter 5 Manual operation----- 5-1

5-1	Manual operation -----	5-2
5-2	Zero point return -----	5-3
5-3	Axis feed -----	5-6
5-3-1	Rapid traverse -----	5-6
5-3-2	Jog feed rate -----	5-7
5-3-3	Step feed -----	5-8
5-4	Starting and stopping spindle -----	5-9
5-5	Tool change -----	5-10
5-6	Magazine rotation -----	5-11
5-7	Axis movement and stroke -----	5-12
5-8	Release + zero point return -----	5-13

Chapter 6 MDI operation ----- 6-1

6	MDI operation -----	6-2
---	---------------------	-----

Chapter 7 Memory operation----- 7-1

7-1	Setting tools for magazine -----	7-2
7-1-1	Setting tool number -----	7-3
7-1-2	Setting tool group number -----	7-3
7-1-3	Setting tool type-----	7-3
7-2	Selection of main program and operation -----	7-4
7-3	Start -----	7-10
7-4	Halt -----	7-11
7-5	Sequence-----	7-12
7-6	Restart function -----	7-14
7-7	Manual intervention during operation and return -----	7- 17
7-8	Single block -----	7-19
7-9	Optional block skip -----	7-20
7-10	Optional stop -----	7-20
7-11	Machine lock -----	7-21
7-12	Dry run -----	7-22
7-13	Lock functions and dry run -----	7-22
7-14	Reset -----	7-23
7-15	Emergency stop-----	7-23

Chapter 8 Program editing----- 8-1

8-1	Program editing -----	8-3
8-2	Extended mode -----	8-6
8-3	Character string operation -----	8-7
8-3-1	Search for character string -----	8-8
8-3-2	Character string replacement (Replace query) -----	8-9
8-3-3	Character string replacement (Replace all) -----	8-11
8-4	Jump of cursor -----	8-12
8-5	Copy of program by block -----	8-13
8-6	Deletion of program by block -----	8-14
8-7	Paste function in extended mode -----	8- 15

8-8	Editing completion -----	8-16
8-9	Memory status display -----	8-17
8-10	Format of memory -----	8-19
8-11	Program memory display -----	8-21
8-11-1	Program memory display -----	8-21
8-11-2	Deleting machining data -----	8-23
8-11-3	Copying/ Checking program -----	8-25
8-12	Data bank memory display -----	8-26
8-12-1	Data bank memory display -----	8-26
8-12-2	Changing effective DATA NO. -----	8-27
8-12-3	Deleting data bank -----	8-28

Chapter 9 External program I/O ----- 9-1

9-1	Computer (Master station TC) -----	9-2
9-1-1	Input from computer -----	9-3
9-1-2	Computer output menu -----	9-16
9-1-3	Computer data delete menu -----	9-30
9-1-4	Maintenance menu -----	9-40
9-2	PTP/PTR (Master station TC) -----	9-46
9-2-1	PTR input menu -----	9-47
9-2-2	PTP output menu -----	9-58
9-2-3	Maintenance menu -----	9-65
9-3	Input/output by computer (T/C slave station) -----	9-67
9-4	List of tape codes used for communication -----	9-68
9-5	Protocol of PTP/PTR -----	9-72
9-5-1	Tape format -----	9-72
9-5-2	List of communication method -----	9-75
9-6	Computer communication protocol Type 1 -----	9-77
9-7	Computer communication protocol Type 2 -----	9-81
9-7-1	External device communication function -----	9-81
9-7-2	File list and operation range -----	9-81
9-7-3	Remote protocol command list -----	9-83
9-7-4	Control format -----	9-84
9-8	List of computer communication methods -----	9-95

Chapter 10 Data bank ----- 10-1

10-1	Setting of working coordinates zero position -----	10-3
10-1-1	Setting by the data inputting -----	10-4
10-1-2	Automatic setting -----	10-4
10-2	Setting of tool data -----	10-8
10-2-1	Tool list setting -----	10-9
10-2-2	Setting by the data inputting -----	10-10
10-2-3	Setting tool life -----	10-10
10-2-4	Automatic setting of tool length offset -----	10-12
10-2-5	Tool group setting -----	10-13
10-2-6	Details of tool group -----	10-14
10-3	Setting of macro variable -----	10-15
10-3-1	Setting by the data inputting -----	10-15
10-4	Setting of user parameter -----	10-16
10-4-1	User parameter1 (switch1) -----	10-17
10-4-2	User parameter2 (switch2) -----	10-36
10-4-3	User parameter3 (communication) -----	10-45
10-4-4	User parameter4 (extr1 in signal) -----	10-50
10-4-5	User parameter5 (extr1 out signal) -----	10-51
10-4-6	User parameter6 (Z measurement) -----	10-52
10-4-7	User parameter7 (zero measurement) -----	10-56
10-4-8	User parameter8 (auto THRM DISP CMP) -----	10-59
10-4-9	Parameter9 (quick table) -----	10-60
10-4-10	List of external input signals and functions -----	10-61
10-4-11	Details of external input signals and functions -----	10-69
10-4-12	List of external output signals and functions -----	10-71
10-4-13	Details of external output signals -----	10-85
10-4-14	Details -----	10-95

Chapter 11 C axis ----- 11-1

11-1	About quick table -----	11-2
11-2	Manual operation -----	11-2
11-2-1	C-axis rotation -----	11-2
11-2-2	Indexing inside pallet to outside -----	11-4
11-3	MDI operation -----	11-5
11-4	Memory operation -----	11-6
11-4-1	Switches relating C-axis -----	11-6

11-4-2 PALLET SELECT switch settings and motions -----	11-7
11-4-3 Sequence search -----	11-10
11-4-4 Restart -----	11-10
11-4-5 Dry run operation -----	11-10
11-4-6 Single operation -----	11-10
11-5 Program Example -----	11-11

Chapter 12 Effective programming ----- 12-1

12-1 Modal / comment information -----	12-2
12-2 Tool change (non-stop ATC : G100) -----	12-3
12-2-1 Hole machining•" ATC•" Hole machining < Example: Center drill(T1)•" Dril(T2) > -----	12-6
12-2-2 Hole machining•" Tool change•" Milling < Example: Drill(T2)•" Endmill(T3) > -----	12-8
12-2-3 Milling•" Tool change•" Milling < Example: Endmill(T3)•" Drill(T4) > -----	12-10
12-2-4 Milling•" Tool change•" Hole machining < Example: Endmill(T4)•" Drill(T5) > -----	12-12
12-3 Synchro - tap (G77-78, 74, 84) -----	12-14
12-4 Calculation of hole positions (Coordinate calculation : G36-39) -----	12-17

Chapter 13 Alarm message ----- 13-1

13-1 Display of alarm messages -----	13-2
13-2 Alarm stop level and reset level -----	13-3
13-2-1 Alarm stop level -----	13-3
13-2-2 Alarm reset level -----	13-4
13-3 Axis display -----	13-5
13-4 Alarm message -----	13-6
13-5 Servo error message -----	13-75
13-6 Resetting ATC -----	13-79

Chapter 14 Option ----- 14-1

14-1	Coolant unit -----	14-1
1	Cautions for handling -----	14-2
2	Sketch drawing -----	14-3
3	Operation procedure -----	14-4
14-2	Manual pulse generator -----	14-5
1	Cautions -----	14-6
2	Overall view -----	14-6
3	Operation procedure -----	14-7
14-3	Indication lamp -----	14-8
1	External view -----	14-9
2	Function of indicator lamps -----	14-10
14-4	Automatic centering unit -----	14-11
1	Preparation for center alignment -----	14-14
2	Operation of center alignment -----	14-15
2-1	Corner -----	14-18
2-2	Parallel -----	14-24
2-3	Circle(hole) -----	14-30
2-4	Circle (boss) -----	14-36
2-5	Level -----	14-42
2-6	Probe offset value -----	14-47
2-7	Probe offset value (G121/G129) -----	14-48
2-8	Probe offset value (G124/G125) -----	14-54
3	Setting of data on center alignment -----	14-62
4	Mounting and dismounting of probe -----	14-65
14-5	Tool breakage detection unit -----	14-66
1	Cautions for handling sketch drawing -----	14-67
2	Sketch drawing -----	14-67
3	User parameter (Switch 1) setting -----	14-68
3-1	Tool breakage detection option -----	14-68
3-2	Tool breakage detection return position -----	14-69
4	How to use the tool breakage detection unit -----	14-72
4-1	MDI operation -----	14-72
4-2	Memory operation -----	14-73
4-3	Notes for operation -----	14-73

4-4	When an alarm has occurred -----	14-74
5	Trouble shooting -----	14-74
14-6	Automatic intermittent lubricating unit 1 -----	14-75
1	Cautions -----	14-76
2	General view -----	14-76
3	Recommended lubricant -----	14-77
4	Alarm -----	14-77
14-7	Automatic door -----	14-78
1	Outline -----	14-79
2	Functions -----	14-79
3	Operation switches -----	14-79
4	Automatic operation -----	14-80
5	Door controller parameter settings -----	14-82
6	Alarm messages -----	14-82
7	Automatic door safety device -----	14-83
8	Area sensor -----	14-83
9	Door stop conditions -----	14-84
14-8	Tape run -----	14-8-1
1	Tape run procedure -----	14-8-2