

OKK

USER'S MANUAL

MACHINING CENTER

VM5 II

FANUC i Series

OKK CORPORATION

3-21-9, Toyosaki, Kita-ku
Osaka, Japan

OPERATION

E60-0001/A-SE
98-03-OTC

OKK

Table of Contents

1. Display and MDI (Manual Data Input) Unit

- 1.1 Panel Configuration BE1- 1
- 1.2 Functions BE1- 3

2. Machine Control Panel

- 2.1 Panel Configuration BE2- 1
- 2.2 Functions BE2- 4

3. PMC Switch

- 3.1 How to Display the PMC Switch Screen BE3- 1
- 3.2 PMC Switch Screen BE3- 2
- 3.3 PMC Switch Status Display BE3- 3
- 3.4 How to Operate the PMC Switches BE3- 3
- 3.5 Notes when Operating the PMC Switches BE3- 3
- 3.6 PMC Switch Functions BE3- 4

4. Tool Registration

- 4.1 How to Display the Tool Registration Screen BE4- 1
- 4.2 Tool Registration Screen BE4- 2
- 4.3 How to Register Tools BE4- 3
- 4.4 Group Setting Method BE4- 4
- 4.5 How to Delete Tool Nos. BE4- 5
- 4.6 Notes for Entering Tool Nos. BE4- 6

5. Load Meter

- 5.1 How to Display the Load Meter Screen BE5- 1
- 5.2 Load Meter Screen BE5- 1

6. M-signals

- 6.1 M-signal List BE6- 1
- 6.2 Description of M-signals BE6- 5
- 6.3 M-signals for Table Clamp/Unclamp BE6-15

MAINTENANCE

E61-0379/A-ME
98-11-OTC

OKK

Table of Contents

1. Maintenance Specifications

1.1	Control Panel	CE1- 1
1.2	Inspection Items	CE1- 3
1.3	Machine Operation Flow	CE1- 4
1.3.1	Machine Body	CE1- 4
1.3.2	ATC Operation	CE1- 6
1.4	How to Return the ATC Arm if it Stops	CE1- 7
1.4.1	How to Return the ATC Arm Automatically by Using Switches ..	CE1- 8
1.4.2	Tool Detachment	CE1- 9
1.4.3	How to Return the ATC Arm by Using the Wrench	CE1-10
1.5	Self-Diagnosis Screen (PMC Interface-Diagnosis)	CE1-11
1.6	Dog-less Zero Return	CE1-13
1.6.1	Parameters	CE1-13
1.6.2	Zero Return Procedure	CE1-14
1.7	Inverter (FVR-E9S series)	CE1-15
1.7.1	Inverter Appearance and Functions	CE1-15
1.7.2	Check Items	CE1-16
1.7.3	Displaying and Releasing Alarms	CE1-17
1.7.4	Alarm Message List	CE1-19
1.7.5	Displaying Parameters	CE1-20
1.7.6	Changing Parameters	CE1-21
1.7.7	Standard Settings of ATC/Magazine/Tool Mounting/(Pot Drive) Inverter Parameters	CE1-23

(

○

1

PARAMETER LISTS

E61-0379/A-PE
99-01-OTC

9

(