



*THE MILLING MACHINE*

*M-2*

*M-2V*

*M-3V (M-5V)*

# ***OPERATION MANUAL***

## TABLE OF CONTENTS

	<u>Page</u>
Machine Specifications	3
Milling Head Specifications	4
Uncrating	5
Shortages	5
Cleaning	5
Lifting Machine	6
Placing on Solid Foundation	7
Leveling Machine	7
Handles	7
Connecting Power Supply	7
Alignment of Head	9
Lubrication	9
Adjustment of Table Gib	10
Adjustment of Saddle and Knee Gibs	10
Clamping Table, Saddle and Knee	11
Removing Table	12
Removing Saddle	12
Mounting Vari-Drive Attachment to Ram Adapter	14
Lubrication	14
Operating Instructions	14
Spindle Brake	16
High-Low Range Switch	16
Hi-Neutral-Lo Lever	16
Power Feed Transmission Engagement Crank	17
Quill Feed Selector	17
Feed Reversing Knob	17
Manual Feed	17
Feed Control Lever	18
Quill Feed Handle	18
Quill Stop	18
Micrometer Adjusting Nut	18
Position of Ram	19
Operating Instructions	19
Removing Motor	20
Changing Vari-Drive Belt	22
Changing Timing Belt	23
General Speed Recommendations	24
M-2 Milling Head	25
Basic Machine	26
Leadscrew Assembly	28
M-2 Head Top Housing	30
M-2 Head	32
M-2V Head Top Housing	34
M-2V Head Back Gear	36
M-3V (M-5V) Head Top Housing	37
M-3V (M-5V) Head Back Gear	38
Central Lubricating Oil-Feeding Equipment	40