

CNC SYSTEMS
OSP7000L
OSP700L

MAINTENANCE MANUAL (2nd Edition)

Pub. No. 3818-E-R1 (LE34-024-R2) June 1995

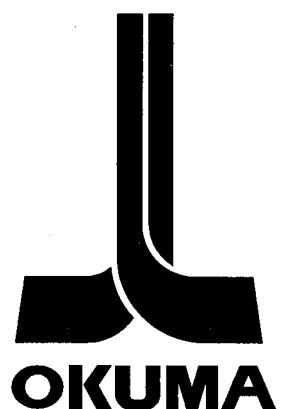


TABLE OF CONTENTS	
	<u>PAGE</u>
SECTION 1 OUTLINE	1
1. SPECIAL FEATURES OF OSP7000L	1
2. SUMMARY OF OPERATION	2
3. STRUCTURE OF OSP7000L	3
3-1. CPU and Power Supply Unit	3
3-2. Field Net Slave Station Unit	4
3-3. Servo Drive Unit	4
3-4. VAC Drive Unit	4
3-5. Position Encoder	4
3-6. Operation Panel	4
3-7. Control Enclosure	4
3-8. Cooling Unit	4
SECTION 2 MAINTENANCE AND INSPECTION	6
1. INSPECTION DURING INSTALLATION	6
1-1. Installation Site	6
1-2. Environmental Requirements	7
1-3. Power Supply Voltage Inspection	7
2. PERIODICAL INSPECTION	8
2-1. Weekly Inspection	8
2-2. Every Three Months Inspection	8
3. OPERATION OF THE OSP7000L	9
3-1. Example of Operation	9
SECTION 3 TROUBLE AND TROUBLESHOOTING	10
1. MACHINE-MOUNTED ELECTRICALS	11
1-1. Inspection of Limit Switches Using Multi-Meter	11
1-2. Inspection of Limit Switches and Proximity Switches Using Self-Diagnostic Function	12
2. INSPECTION OF POSITION ENCODER	13

	<u>PAGE</u>
3. CPU	14
3-1. Checking CPU Operations	14
3-2. Power Supply Unit	15
4. INSPECTION OF MAGNET SWITCHES	16
4-1. Operation and Structure of Magnet Switch	16
4-2. Inspection of Magnet Switch Using Multi-Meter	16
5. NC TURRET	17
5-1. Operation of NC Turret	17
5-2. Setting the Offset for Turret Position Detection Encoder	17
5-3. Rotating the Turret by Pulse Handle	19
6. TURRET	20
 SECTION 4 Self-diagnostics	 21
1. CHECK FUNCTION BY ALARM DISPLAY AND ERROR DISPLAY	21
1-1. Alarm Display	22
1-2. Error Display	22
2. CHECK DATA DISPLAY	23
 SECTION 5 INSTALL MODE	 58
1. INSTALL MODE	58
2. INSTALLING THE CONTROL SOFTWARE	58
2-1. Floppy Disks Used for Installing the Control Software	58
2-2. Installation Procedure	59
3. DETECTING BATTERY LIFE	61