
SUPER KIATURN 15/21 CNC HIGH SPEED LATHE

INSTALLATION MAINTENANCE **MANUAL**

(FANUC Oi-TB)

VERSION No. : 1.0



KIA HEAVY INDUSTRIES

Contents



I . INTRODUCTION

II . SAFETY

III . SPECIFICATION

IV . TRANSPORT & INSTALLATION

V . REPAIR & PRESERVATION





INTRODUCTION

I . INTRODUCTION

1. Outline of The MANUAL	I -5
1-1. Symbol and Description	I -6
2. Characteristics	I -7
3. Standard Accessory	I -7
4. Special Accessory	I -8



SAFETY

II . SAFETY

1. General	II -5
2. General Safety Precautions	II -6
3. Notice When Operating the Machine	II -10
4. Notice When Repairing and Checking	II -14
5. Notice on the Electric And NC Devices	II -17
6. Safety Device	II -19
6-1. Name Plates	II -19
6-2. Safety Device	II -20
6-2-1. Door Lock System(Applicable only to the C.E.)	II -20
6-2-2. Pressure Switch(Applicable only to the C.E.)	II -21



Specification

III . Specification

1. Introduction	III -5
1-1. Head Stock	III -5
1-2. Tool Post	III -5
1-3. Tail Stock	III -5
2. Specification	III -6
2-1. Spindle Output and Torque Diagram	III -7
3. NC Device Specification(FANUC Oi-TB)	III -8
3-1. G Function	III -11
3-2. M Function (Auxiliary)	III -13
4. Machine Part and Name	III -16
5. Machine Outline Diagram	III -17
6. Head Stock	III -18
6-1. SUPER KIATURN 15	III -19
6-2. SUPER KIATURN 21	III -19
6-3. Major dimension of Head Stock	III -20

7. Chuck and Rotary Cylinder	III -21
7-1. Hollow Chuck Major Dimension	III -22
7-2. SUPER KIATURN 15 Hollow Chuck	III -22
7-2-1. Connecting Parts for Rotary Cylinder	III -23
7-2-2. Major Dimensions	III -23
7-3. SUPER KIATURN 21 Hollow Chuck(8", ϕ 210)	III -24
7-3-1. Connecting Parts for Rotary Cylinder.	III -24
7-3-2. Major Dimensions	III -24
8. Tool Post	III -25
8-1. Turret	III -26
8-2. SUPER KIATURN 15	III -26
8-3. SUPER KIATURN 21	III -27



TRANSPORT & INSTALLATION

VI. TRANSPORT & INSTALLATION

1. General	IV -4
2. Layout of Machine	IV -4
3. Transporter	IV -5
3-1. Crane	IV -6
3-2. Fork Lift	IV -8
4. Installation	IV -9
4-1. Preparation to Install	IV -9
4-1-1. Installation Condition	IV -9
4-1-2. Foundation Work	IV -10
4-2. Foundation Work	IV -11
4-2-1. Without Using Foundation Bolt	IV -12
4-2-2. Using Foundation Bolt(Optional)	IV -12
5. Adjustment of Level	IV -13
6. Cleaning	IV -15
7. Lubrication & Oiling	IV -16
7-1. Hydraulic Oil	IV -16
7-2. Oiling Wet Moving Part in the X- and Z-axes	IV -16
7-3. Oiling Hydraulic Chuck	IV -17
8. Coolant	IV -18
9. Electric Power and Wiring	IV -19
9-1. Power Switch	IV -20
9-2. Wiring to Machine from Power Switch	IV -20
9-3. Changing Electric Units According to Voltage and Frequency	IV -21
9-3-1. Tab Changing for Controlling Transformer	IV -21
9-3-2. External Transformer	IV -22
9-4. Grounding	IV -22

10. Disassembling and Cleaning Shipment Fixture	IV-24
11. Check Before Test Working	IV-25
12. Required Dimension in Working	IV-25
12-1. Tool Moving Range	IV-25
12-2. Tool Interference Diagram	IV-26
12-3. Workpiece Interference Diagram of Q-Setter	IV-28



Repair and Preservation

V . Repair and Preservation

1. Mechanical Overview	V -7
1-1. Mechanical Construction	V -7
1-2. Moving Range of Axis	V -8
1-3. Reference Point Adjustment of Each Axis	V -9
1-3-1. Reference Point Adjusting Method 1	V -9
1-3-2. Reference Point Adjusting Method 2	V -14
1-3-3 Z-axis Dog and Limit Switch Attached Position	V -23
1-4. X- and Z-axes Backlash Adjusting Method	V -24
1-5. Q-Setter Position Adjustment	V -27
2. General Check and Repair	V -30
2-1. General	V -30
2-2. Check and Repair Items	V -32
2-3. Daily Check and Repair	V -33
2-3-1. Inside of the Machine	V -33
2-3-2. Outside of the Machine	V -35
2-3-3. Checking Oil Flow	V -36
2-3-4. Checking Pressure	V -37
2-3-5. Filling and Changing Oil	V -38
2-3-6. Around the Machine	V -40
2-4. Weekly Check and Repair	V -40
2-4-1. Inside of the Machine	V -40
2-4-2. Outside of the Machine	V -41

2-5. Monthly Check and Repair	V -42
2-5-1. Inside of the Machine	V -42
2-5-2. Filling and Changing Oil	V -43
2-5-3. Outside of the Machine	V -45
2-6. Six-Monthly Check and Repair	V -46
2-6-1. Filling and Changing Oil	V -46
2-6-2. Around the Machine	V -49
2-7. Yearly Check and Repair	V -54
2-7-1. Around the Machine	V -54
2-8. Check and Repair Before Long-term Storage	V -55
2-9. Check and Repair Before Operation Since Long-term Storage	V -56
3. Maintenance of Major Units	V -58
3-1. Spindle	V -58
3-1-1. Adjustment of Degree in Spindle	V -58
3-1-2. Cleaning Front Cover of Spindle	V -59
3-2. X- and Z-Axes	V -60
3-2-1. X- and Z-Axes Constructions	V -60
3-2-2. Restoring Torque Limiter	V -60
3-3. Tool Post	V -62
3-3-1. Tool Post Construction	V -62
3-3-2. Tool Post Home Position Setting	V -63
3-3-3. Adjustment and Exchange of clamp,.....	V -65
Unclamp and Limit Switches	
3-3-4. Restoration in Collision of Turret	V -66
3-4. Hydraulic	V -67

3-4-1. Hydraulic Circuit Diagram	V -67
3-4-2. Repairing Hydraulic Tank	V -68
3-4-3. Pressure and Flow Adjustment	V -70
3-4-4. Repairing Manifold	V -72
3-5. Lubrication Device	V -76
3-5-1. Place to be lubricated	V -76
3-5-2. Cleaning Lubrication Unit	V -77
3-5-3. Discharge of Lubricating Oil	V -80
3-6. Coolant	V -81
3-6-1. Coolant Unit Construction	V -81
3-6-2. Specification and Cleaning	V -82
3-6-3. Check and Repair	V -84
3-7. Tail Stock	V -85
3-7-1. Tail Stock Construction	V -85
3-7-2. Tail Stock Operation and Adjustment of Degree	V -85
3-7-3. Proximity Switch Setting Method	V -90
3-7-4. Motor Specification	V -91
3-8. Chuck and Cylinder	V -91
3-8-1. Chuck and Cylinder Construction	V -91
3-8-2. Adjustment	V -92
3-8-3. Specification	V -93
3-9. Cover	V -96
3-9-1. Door Roller	V -96
3-9-2. Door Safety Glass	V -96
3-10. Electricity	V -97
3-10-1. Electric Device Layout	V -97

3-10-2. Alarm Lamp(Optional)	V -98
3-10-3. Alarm Indicator	V -98
3-10-4. Parameter	V -101
3-10-5. Exchanging Method of Battery	V -101
3-10-6. Servo Amp for Tool Post	V -102
3-10-7. Turret Amp	V -101
3-10-8. Alarm Related to Spindle	V -111

APPENDIX

A-1. Spindle Amplifier Module	A-5
A-1- 1. Alarm A0, A1	A-5
A-1- 2. Alarm AL-01	A-6
A-1- 3. Alarm AL-02	A-6
A-1- 4. Alarm AL-03	A-7
A-1- 5. Alarm AL-07	A-8
A-1- 6. Alarm AL-09	A-8
A-1- 7. Alarm AL-12	A-8
A-1- 8. Alarm AL-13	A-9
A-1- 9. Alarm AL-15	A-9
A-1-10. Alarm AL-16	A-10
A-1-11. Alarm AL-19	A-10
A-1-12. Alarm AL-20	A-10
A-1-13. Alarm AL-24	A-11
A-1-14. Alarm AL-25	A-11
A-1-15. Alarm AL-26	A-12
A-1-16. Alarm AL-27	A-12
A-1-17. Alarm AL-28	A-13
A-1-18. Alarm AL-29	A-14
A-1-19. Alarm AL-31	A-15
A-1-20. Alarm AL-32	A-15
A-1-21. Alarm AL-34	A-15
A-1-22. Alarm AL-35	A-16



APPENDIX

A-1-23. Alarm AL-36	A-16
A-1-24. Alarm AL-37	A-17
A-1-25. Alarm AL-39	A-17
A-1-26. Alarm AL-40	A-18
A-1-27. Alarm AL-41	A-19
A-1-28. Alarm AL-42	A-19
A-1-29. Alarm AL-43	A-20
A-1-30. Alarm AL-44	A-21
A-1-31. Alarm AL-46	A-21
A-1-32. Alarm AL-47	A-22
A-1-33. Alarm AL-49	A-23
A-1-34. Alarm AL-50	A-23
A-1-35. Alarm AL-53	A-23
A-1-36. Alarm AL-54	A-24
A-1-37. Alarm AL-55	A-24
A-1-38. Alarm AL-56	A-25