


KUM UX

Curve Measuring Program

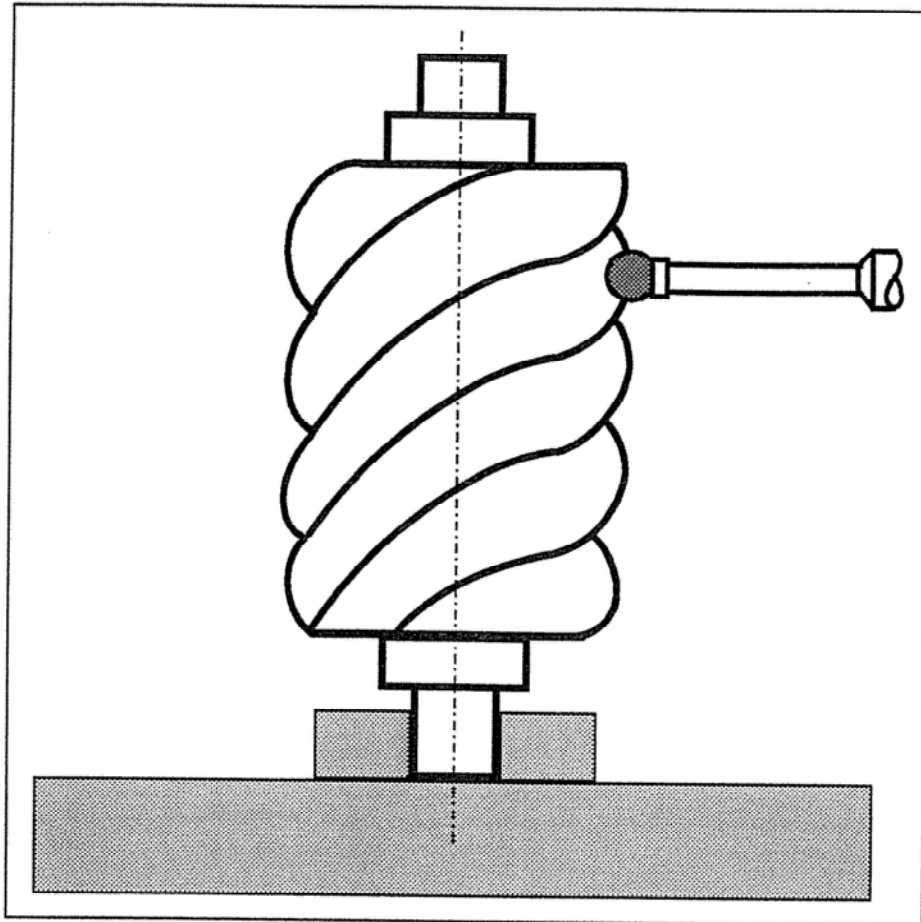

Operating Instructions



KUM UX

Curve Measuring Program

Revision: 7.x
Edition: 08 / 94
Order no: 612402-9103

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Overview

Chap.	Overview	Page number
1	Introduction	10
2	Definition of terms	12
3	Data administration	30
4	Using the commands	21
5	Nominals	37
6	Measurements	21
7	Calculations	34
8	Printer output	9
9	Plotter output	35
10	VDA Interface	23

List of contents

	Page
1 Introduction	
1.1 General remarks on KUM	1 - 1
1.1.1 Interaction of UMESS and KUM	1 - 2
1.1.2 KUM program structure	1 - 3
1.1.3 Interaction with the program	1 - 4
1.2 KUM Program start	1 - 5
1.2.1 Call of the KUM main menu	1 - 6
1.2.2 General softkey functions	1 - 8
1.2.3 Information menu <INFO>	1 - 9
1.3 Help with program faults	1 - 10
1.3.1 Data errors occurring	1 - 10
1.3.2 Automatic check of nominal and measured data	1 - 10
2 Definition of terms	2 - 1
2.1 Terms used in curve metrology	2 - 1
2.1.1 Open curve - closed curve	2 - 1
2.1.2 Known curves - unknown curves	2 - 2
2.1.3 Measured value - contact point	2 - 2
2.1.4 Nominal value - actual value - deviation	2 - 3
2.1.5 Reference curve - Auxiliary curve	2 - 4
2.1.6 Surface normal - Direction cosine	2 - 5
2.1.7 Direction of travel	2 - 6
2.1.8 Best fit	2 - 6
2.2 Types of curve	2 - 7
2.2.1 Flat curves (2D measurement)	2 - 7
2.2.2 Spatial curves (3D measurement)	2 - 8
2.2.2.1 Contour	2 - 8
2.2.2.2 Edge profile	2 - 9
2.2.2.3 Face cam	2 - 10
2.3 Coordinate systems	2 - 10
2.3.1 Cartesian coordinates	2 - 11
2.3.2 Cylinder coordinates	2 - 11
2.3.3 Sphere coordinates	2 - 12
3 Data administration	3 - 1
3.1 Workpiece administration	3 - 1
3.1.1 Workpiece selection	3 - 3

3.1.2	Creating a new workpiece	3 - 4
3.1.3	Listing the workpiece catalog on the screen	3 - 5
3.1.4	Deleting workpieces	3 - 6
3.1.4.1	Verification inquiry on deleting the workpiece	3 - 8
3.1.5	Workpiece correction	3 - 9
3.1.6	Setting the workpiece "free"	3 - 10
3.2	Parts administration	3 - 12
3.2.1	Methods for selecting the part number	3 - 14
3.2.1.1	Entering the part number and part identification	3 - 15
3.2.2	Creating a new part	3 - 17
3.2.2.1	Application examples	3 - 18
3.2.3	Output of the part catalog	3 - 19
3.2.4	Deleting a part	3 - 21
3.2.5	Correcting the part identification	3 - 23
3.3	Curve administration	3 - 24
3.3.1	Output of the curve catalog	3 - 26
3.3.2	Output of the curve specific data	3 - 28
3.4	KUM directories	3 - 30
4	Using the commands	4 - 1
4.1	KUM commands	4 - 1
4.1.1	Linking matrix	4 - 2
4.1.2	Command line and command block	4 - 2
4.1.3	Workpiece identification	4 - 3
4.1.4	Defining blank lines	4 - 3
4.1.5	Ending a command block	4 - 3
4.1.6	Command input	4 - 4
4.2	Performance modes	4 - 7
4.2.1	Performance mode names	4 - 7
4.2.2	Performance mode command block	4 - 7
4.2.3	Examples on command input	4 - 8
4.3	Command block / Performance mode administration	4 - 8
4.3.1	Command block administration	4 - 10
4.3.2	Command block / Parameter	4 - 12
4.3.3	Administration of the performance mode command blocks	4 - 14
4.3.4	Performance mode command block	4 - 16
4.3.5	Performance mode administration	4 - 18
4.3.6	Standard	4 - 20
5	Nominals	5 - 1
5.1	Nominal input main menu	5 - 1
5.1.1	Editing new curves (nominal values)	5 - 3
5.1.2	Entering nominals point by point	5 - 5
5.1.3	Changing the input mode of the nominal values	5 - 7

5.2	Input of tolerances and equidistances	5 - 8
5.2.1	Entering tolerances for the entire curve	5 - 8
5.2.2	Entering tolerances sector by sector	5 - 10
5.2.3	Entering equidistants sector by sector	5 - 13
5.3	Data generation	5 - 15
5.3.1	Element no. 1: Irregular point aggregation	5 - 17
5.3.2	Element No. 2: Line	5 - 19
5.3.3	Element No. 3: Plane	5 - 21
5.3.4	Element No. 4: Circle or circle section	5 - 23
5.3.5	Element No. 5: Ellipse	5 - 25
5.3.6	Element No. 6: Cylinder	5 - 27
5.3.7	Element No. 7: Spiral	5 - 29
5.3.8	Element No. 8: Sphere	5 - 31
5.4	Editing nominals	5 - 33
5.4.1	Linking nominals	5 - 33
5.4.2	Standard preassignment / Comment	5 - 35
5.4.3	Copying nominals or measured values	5 - 36
6.	Measurements	6 - 1
6.1	"MEASUREMENT" input mask	6 - 2
6.1.1	Remarks on measuring known curves	6 - 4
6.1.2	Remarks on the measurement of unknown curves	6 - 5
6.2	2D measurement	6 - 6
6.3	3D measurement	6 - 7
6.3.1	Placing the auxiliary curve	6 - 8
6.3.2	Calculating the 3D normal from two nominal curves	6 - 9
6.4	Measured value input - main menu	6 - 10
6.4.1	Editing new curves (measured values)	6 - 12
6.4.2	Entering measured values point by point	6 - 14
6.4.3	Entering equidistants sector by sector	6 - 16
6.4.4	Changing the input mode of the measured values	6 - 18
6.5	CNC mode	6 - 19
6.5.1	Preparing the measurement	6 - 19
6.5.2	Programming the CNC measuring run	6 - 20
6.5.3	Starting the CNC run	6 - 21
7	Calculations	7 - 1
7.1	Conversion main menu	7 - 1
7.1.1	Contact point correction with 3D normals	7 - 3
7.2	Deviations - Main menu	7 - 5
7.2.1	Deviation calculation	7 - 6

7.2.2	Calculating actuals	7 - 7
7.2.3	Curve can be smoothed, Command: DEV FIL	7 - 7
7.2.4	Deviations - eliminating outliers, command: DEV ELO	7 - 8
7.2.5	Calculating the offset, command: OFS CAL	7 - 10
7.3	Best fit of measured values	7 - 12
7.3.1	2D best fit	7 - 13
7.3.3	Remarks on the translational best fit	7 - 15
7.3.4	Remarks on the rotational best fit	7 - 15
7.3.5	Translational and rotational best fit	7 - 16
7.3.6	Copying KUM best fit data to UMESS	7 - 17
7.4	Curve transformation	7 - 18
7.4.1	Coordinate rotation, translation and scaling	7 - 20
7.4.2	Mirroring the planes	7 - 22
7.4.3	Exchange of axes	7 - 24
7.4.4	Changing the equidistants	7 - 26
7.4.5	Specifying the normal direction	7 - 28
7.4.6	Rotation of the normals about the tangents	7 - 29
7.4.7	Calculation of the unit vector (Normal standardization)	7 - 30
7.4.8	Reversing the normals	7 - 30
7.4.9	Transforming deviations	7 - 31
7.5	Development / Envelopment (cylinder surface)	7 - 32
7.5.1	Definition of the development	7 - 33
7.5.2	Representation examples	7 - 34
7.5.3	Developing nominals or measured values	7 - 35
7.5.4	Enveloping nominals or measured values	7 - 36
7.6	Compensation of the probe bend (only with measuring probe heads) ..	7 - 37
7.6.1	Commands for compensation of the probe bend	7 - 38
7.6.2	Application example	7 - 39
7.7	Reversing measured values or nominals	7 - 40
7.8	Optimizing the measuring run	7 - 41
8	Printer output	
8.1	Nominal value record	8 - 1
8.2	Output columns for nominal values	8 - 3
8.3	Measured value record	8 - 5
8.4	Output columns for measured values	8 - 6
8.5	Deviation record	8 - 7
8.6	Output columns for deviations	8 - 9

9	Plotter output	
9.1	Procedure for creating a plot	9 - 1
9.1.1	Plot application examples	9 - 2
9.2	Plot init main menu	9 - 4
9.2.1	Character sizes and colors	9 - 7
9.2.2	Page layout of the "image information" field	9 - 8
9.2.3	Page layout of the "Curve results" field	9 - 11
9.2.4	Label arrangement	9 - 14
9.3	Plot form	9 - 17
9.3.1	Explanation of the plot terms	9 - 18
9.4	Plot main menu	9 - 20
9.4.1	Plot format	9 - 23
9.4.2	Plot tasks description	9 - 25
9.4.3	Axis and grid	9 - 28
9.4.4	Automatic plot transformation	9 - 30
9.5	Special features with the graphics representation	9 - 32
9.5.1	Paper change	9 - 32
9.5.2	Peak formation with rounded off external edges	9 - 32
9.5.3	Peak formation with peaked inner corners	9 - 32
9.5.4	Curl formation with tight curves	9 - 33
9.5.5	Contour overlappings with sharp outer corners	9 - 33
9.6	Plotting texts	9 - 34
10	VDA interface	
10.1	Explanation of VDA terms	10 - 1
10.1.1	Data formats	10 - 2
10.1.2	Notation of VDA statements	10 - 3
10.1.3	Definition of geometric elements	10 - 3
10.1.4	No-geometric elements	10 - 7
10.2	Converting KUM data to VDA format <KUM $\Rightarrow$ VDA>	10 - 9
10.2.1	Standard heading	10 - 11
10.2.2	Example of a VDA source file	10 - 13
10.3	Transfer of VDA data to KUM <VDA $\Rightarrow$ KUM>	10 - 14
10.4	Input dialog with "CURVE" VDA element	10 - 17
10.4.1	Checking VDA standards	10 - 19
10.5	Input dialog with the "SURF" VDA element	10 - 21