


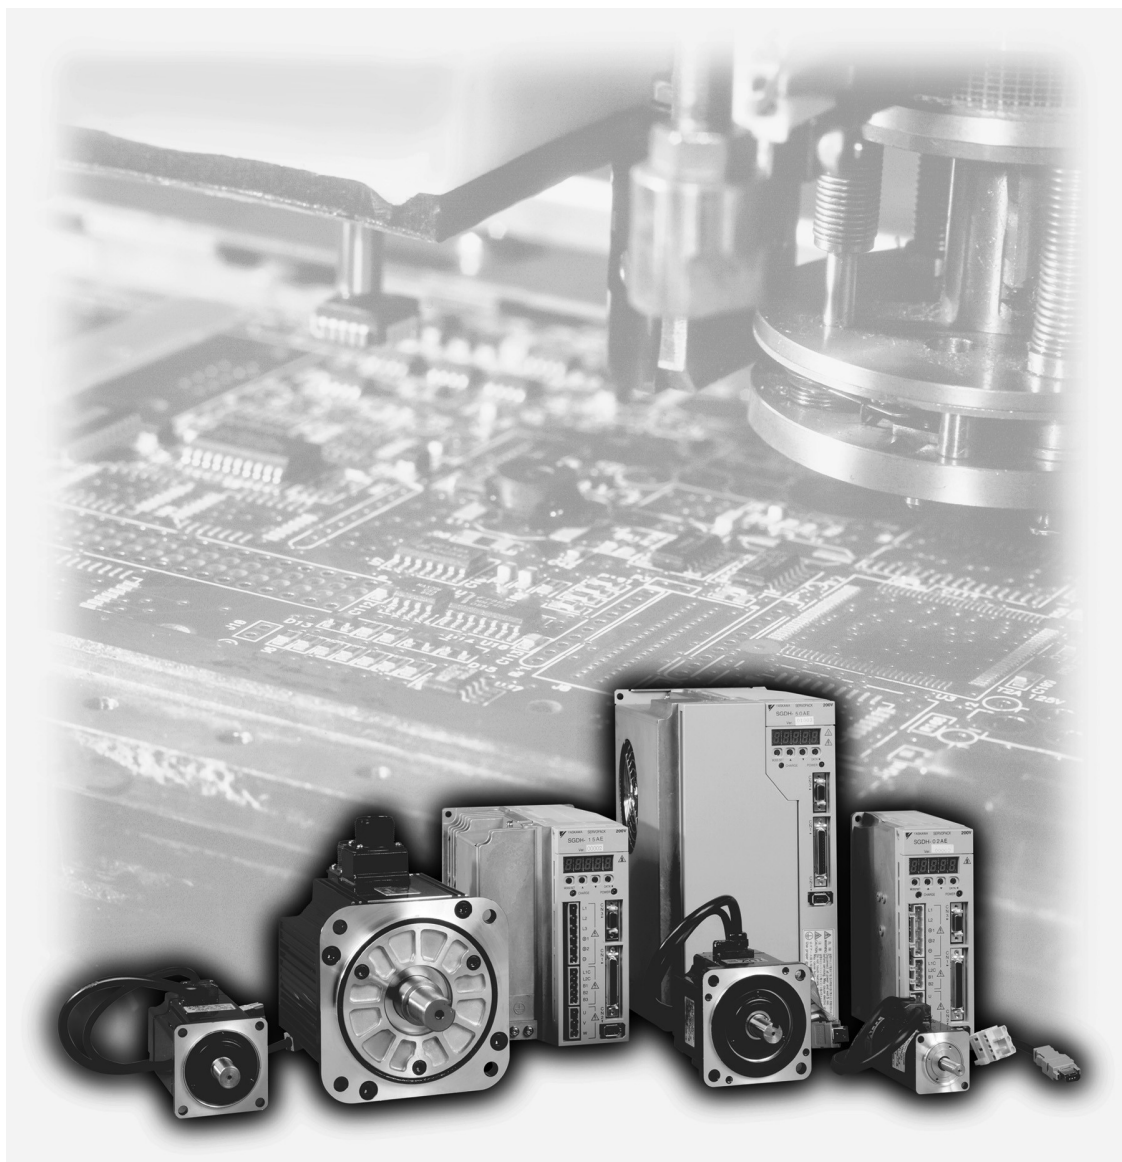

Sigma II Series Servo System User's Manual

Table of Contents

1. Checking Product and Part Names.....	1 - 1
1.1 Checking the Sigma II Series Products on Delivery.....	1 - 2
1.1.1 Servomotors.....	1 - 2
1.1.2 Direct-drive Motor Supporting Function.....	1 - 4
1.1.3 Servo Amplifiers	1 - 6
1.2 Product Part Names	1 - 8
1.2.1 Servomotors.....	1 - 8
1.2.2 Servo Amplifiers	1 - 9
2. Installation.....	2 - 1
2.1 Servomotors	2 - 2
2.1.1 Storage Temperature	2 - 2
2.1.2 Installation Site	2 - 2
2.1.3 Alignment	2 - 3
2.1.4 Orientation.....	2 - 3
2.1.5 Allowable Shaft Loads.....	2 - 4
2.1.6 Vibration Resistance	2 - 5
2.1.7 Vibration Class	2 - 6
2.1.8 Handling Oil and Water.....	2 - 6
2.1.9 Cable Stress	2 - 6
2.2 Servo Amplifiers.....	2 - 7
2.2.1 Storage Conditions.....	2 - 7
2.2.2 Installation Site	2 - 7
2.2.3 Orientation.....	2 - 8
2.2.4 Installation	2 - 9
3. Wiring	3 - 1
3.1 Connecting to Peripheral Devices.....	3 - 3
3.1.1 Single-Phase (100V or 200V) Main Circuit Specifications.....	3 - 4
3.1.2 Three-Phase (200V) Main Circuit Specifications	3 - 5
3.1.3 Three-Phase (400V) Main Circuit Specifications	3 - 6
3.2 Servo Amplifier Internal Block Diagrams	3 - 7
3.2.1 30W to 400W (200V) and 30W to 200W (100V) Models	3 - 7
3.2.2 0.5kW to 1.5kW (200V) Models	3 - 8
3.2.3 2.0 kW to 5.0kW (200V) Models.....	3 - 8
3.2.4 6.0kW to 15.0kW (200V) Models	3 - 9
3.2.5 0.5kW to 3.0kW, 400V Models.....	3 - 9
3.2.6 5.0kW (400V) Models.....	3 - 10
3.2.7 6.0kW to 7.5kW, 400V Models.....	3 - 10
3.2.8 11.0kW to 15.0kW (400V) Models.....	3 - 11
3.2.9 22.0kW to 55kW (400V) Models	3 - 11

3.3	Main Circuit Wiring	3 - 12
3.3.1	Names and Descriptions of Main Circuit Terminal.....	3 - 13
3.3.2	Typical Main Circuit Wiring Example	3 - 14
3.3.3	Cable Specifications and Peripheral Devices	3 - 14
3.3.4	Servo Amplifier Power Losses	3 - 15
3.3.5	Wiring Main Circuit Terminal Blocks.....	3 - 16
3.4	I/O Signals	3 - 17
3.4.1	Example of Typical I/O Signal Connections	3 - 17
3.4.2	List of CN1 Terminals.....	3 - 18
3.4.3	I/O Signal Names and Functions	3 - 19
3.4.4	Interface Circuits	3 - 21
3.5	Wiring Encoders (for SGMGH and SGMSH Motors Only)	3 - 24
3.5.1	Encoder Connections.....	3 - 24
3.5.2	CN2 Encoder Connector Terminal Layout and Types	3 - 26
3.6	Examples of Standard Connections	3 - 27
3.6.1	Single-Phase Power Supply Specifications	3 - 27
3.6.2	Three-Phase Power Supply Specifications (200V)	3 - 28
3.6.3	Three-Phase Power Supply Specifications (400V)	3 - 29
3.6.4	Position Control Mode.....	3 - 32
3.6.5	Speed Control Mode	3 - 33
3.6.6	Torque Control Mode	3 - 34
4.	Trial Operation	4 - 1
4.1	Two-Step Trial Operation.....	4 - 2
4.1.1	Step 1: Trial Operation for Servomotor without Load	4 - 3
4.1.2	Step 2: Trial Operation with the Servomotor Connected to a Load	4 - 9
4.2	Additional Setup Procedures in Trial Operation.....	4 - 10
4.2.1	Servomotors with Brakes.....	4 - 10
4.2.2	Position Control by Host Controller.....	4 - 12
4.3	Minimum Parameters and Input Signals.....	4 - 13
4.3.1	Parameters	4 - 13
4.3.2	Input Signals	4 - 13
5.	Parameter Settings and Functions	5 - 1
5.1	Settings According to Device Characteristics	5 - 5
5.1.1	Switching Servomotor Rotation Direction	5 - 5
5.1.2	Setting the Overtravel Limit Function.....	5 - 6
5.1.3	Limiting Torque.....	5 - 9
5.2	Settings According to Host Controller	5 - 14
5.2.1	Speed Reference	5 - 14
5.2.2	Position Reference.....	5 - 16
5.2.3	Using the Encoder Signal Output	5 - 22
5.2.4	Sequence I/O Signals.....	5 - 26
5.2.5	Using the Electronic Gear Function.....	5 - 28

5.2.6	Contact Input Speed Control	5 - 32
5.2.7	Using Torque Control	5 - 37
5.2.8	Torque Feed-Forward Function	5 - 44
5.2.9	Speed Feed-Forward Function	5 - 45
5.2.10	Torque Limiting by Analog Voltage Reference	5 - 47
5.2.11	Reference Pulse Inhibit Function (/INHIBIT)	5 - 49
5.3	Setting Up the Servo Amplifier	5 - 51
5.3.1	Parameters	5 - 51
5.3.2	JOG Speed	5 - 52
5.3.3	Input Circuit Signal Allocation	5 - 53
5.3.4	Output Circuit Signal Allocation	5 - 57
5.3.5	Control Mode Selection	5 - 59
5.4	Setting Stop Functions	5 - 62
5.4.1	Adjusting Offset	5 - 62
5.4.2	Servo OFF Stop Mode Selection	5 - 63
5.4.3	Using the Zero Clamp Function	5 - 64
5.4.4	Using the Holding Brake	5 - 66
5.5	Forming a Protective Sequence	5 - 71
5.5.1	Using Servo Alarm and Alarm Code Outputs	5 - 71
5.5.2	Using the Servo ON Input Signal (/S-ON)	5 - 73
5.5.3	Using the Positioning Completed Output Signal (/COIN)	5 - 74
5.5.4	Speed Coincidence Output (/V-CMP)	5 - 76
5.5.5	Using the Running Output Signal (/TGON)	5 - 77
5.5.6	Using the Servo Ready Output Signal (/S-RDY)	5 - 79
5.5.7	Using the Warning Output Signal (/WARN)	5 - 80
5.5.8	Using the Near Output Signal (/NEAR)	5 - 82
5.5.9	Handling Power Loss	5 - 83
5.6	Selecting a Regenerative Resistor	5 - 84
5.6.1	External Regenerative Resistor	5 - 85
5.6.2	Calculating the Regenerative Power Capacity	5 - 87
5.7	Absolute Encoders	5 - 97
5.7.1	Interface Circuit	5 - 98
5.7.2	Configuring an Absolute Encoder	5 - 99
5.7.3	Handling Batteries	5 - 100
5.7.4	Absolute Encoder Setup	5 - 101
5.7.5	Absolute Encoder Reception Sequence	5 - 105
5.8	Special Wiring	5 - 110
5.8.1	Wiring Precautions	5 - 110
5.8.2	Wiring for Noise Control	5 - 117
5.8.3	Using More Than One Servodrive	5 - 121
5.8.4	Extending Encoder Cables	5 - 122
5.8.5	400V Power Supply Voltage	5 - 124
5.8.6	Reactor for Harmonic Suppression	5 - 126
5.8.7	DB Unit	5 - 128

5.9	Reserved Parameters.....	5 - 130
5.10	List of Upgraded Functions (Applicable only to SGD H amplifiers of version number 33□□□ or higher.)	5 - 131
5.10.1	Additional Functions	5 - 131
5.10.2	Improved Functions	5 - 131
5.10.3	Improvement of Dividing Output Resolution	5 - 133
5.10.4	Reference Pulse Input Multiplication Range Switching Function.	5 - 137
5.11	Improved Functions (Applicable only to SGD H amplifiers of version #33□□□ or higher.)	5 - 140
5.11.1	Moment of Inertia Ratio Setting Range	5 - 140
5.11.2	Adaptation to Single-turn Data Absolute Encoder	5 - 140
5.11.3	Improvement of Linear Motor Related Specifications	5 - 142
5.11.4	Supporting Function for Linear Motor with Hall Sensor	5 - 144
6.	Servo Adjustment	6 - 1
6.1	Smooth Operation	6 - 2
6.1.1	Using the Soft Start Function.	6 - 2
6.1.2	Smoothing	6 - 3
6.1.3	Adjusting Gain	6 - 4
6.1.4	Adjusting Offset	6 - 5
6.1.5	Setting the Torque Reference Filter Time Constant	6 - 5
6.1.6	Notch Filter	6 - 6
6.2	High-Speed Positioning	6 - 10
6.2.1	Setting Servo Gain	6 - 10
6.2.2	Using Feed-Forward Control	6 - 12
6.2.3	Using Proportional Control	6 - 13
6.2.4	Setting Speed Bias	6 - 14
6.2.5	Using Mode Switch	6 - 15
6.2.6	Automatic Gain Switching Function (Applicable Only to SGD H amplifiers with version # 33□□□ or higher)	6 - 19
6.2.7	Speed Feedback Compensation	6 - 22
6.3	Auto-Tuning	6 - 24
6.3.1	Online Auto-Tuning	6 - 25
6.3.2	Mechanical Rigidity Settings for Online Auto-Tuning	6 - 27
6.3.3	Saving Results of Online Auto-Tuning	6 - 29
6.3.4	Parameters Related to Online Auto-Tuning	6 - 31
6.4	Servo Gain Adjustments	6 - 33
6.4.1	Servo Gain Parameters	6 - 33
6.4.2	Basic Rules of Gain Adjustment	6 - 33
6.4.3	Making Manual Adjustments	6 - 35
6.4.4	Gain Setting Reference Values	6 - 40

6.5	Analog Monitor.	6 - 42
7.	Using the Digital Operator.	7 - 1
7.1	Basic Operation.	7 - 2
7.1.1	Connecting the Digital Operator	7 - 2
7.1.2	Functions	7 - 3
7.1.3	Resetting Servo Alarms	7 - 4
7.1.4	Basic Mode Selection	7 - 5
7.1.5	Status Display Mode	7 - 5
7.1.6	Operation in Parameter Setting Mode	7 - 8
7.1.7	Operation in Monitor Mode.	7 - 14
7.2	Applied Operation.	7 - 20
7.2.1	Operation in Alarm Traceback Mode	7 - 21
7.2.2	JOG Operation Using the Digital Operator	7 - 22
7.2.3	Automatic Adjustment of the Speed and Torque Reference Offset	7 - 25
7.2.4	Manual Adjustment of the Speed and Torque Reference Offset	7 - 27
7.2.5	Clearing Alarm Traceback Data	7 - 33
7.2.6	Checking the Motor Model	7 - 34
7.2.7	Checking the Software Version	7 - 38
7.2.8	Origin Search Model.	7 - 39
7.2.9	Initializing Parameter Settings.	7 - 42
7.2.10	Manual Zero Adjustment and Gain Adjustment of Analog Monitor Output	7 - 44
7.2.11	Adjusting the Motor Current Detection Offset	7 - 49
7.2.12	Write Protected Setting	7 - 53
7.2.13	Clearing the Option Unit Detection Alarm	7 - 54
8.	Ratings and Characteristics.	8 - 1
8.1	Servomotors: Ratings, Specifications, and Dimensional Drawings	8 - 2
8.1.1	SGMAH Servomotors	8 - 2
8.1.2	SGMPH Servomotors	8 - 7
8.1.3	SGMGH Servomotors	8 - 11
8.1.4	SGMSH Servomotors	8 - 15
8.1.5	SGMUH Servomotors	8 - 19
8.1.6	SGMBH Servomotors	8 - 22
8.1.7	SGMCS Direct Drive Motors	8 - 28
8.2	Specifications	8 - 30
8.2.1	Combined Specifications.	8 - 30
8.2.2	Ratings and Specifications	8 - 36
8.2.3	Base-Mounted Servo Amplifier Dimensions in inches (mm)	8 - 45
9.	Inspection, Maintenance, and Troubleshooting.	9 - 1
9.1	Servodrive Inspection and Maintenance.	9 - 2
9.1.1	Servomotor Inspection.	9 - 2
9.1.2	Servo Amplifier Inspection	9 - 3

9.1.3	Replacing the Battery for the Absolute Encoder	9 - 4
9.2	Troubleshooting	9 - 5
9.2.1	Troubleshooting Problems with Alarm Displays.....	9 - 5
9.2.2	Troubleshooting Problems with No Alarm Display	9 - 37
9.2.3	Alarm Display Table	9 - 40
9.2.4	List of Additional or Modified Alarm and Warning Displays (Applicable only to SGDH amplifiers with version # 33□□□ or higher)	9 - 42
9.2.5	Warning Displays	9 - 43
9.2.6	Additional Sigma II Alarms.....	9 - 44
A.	Host Controller Connection Examples	A - 1
A.1	Connecting the GL-series MC20 Motion Module	A - 2
A.2	Connecting the CP-9200SH Servo Controller Module (SVA)	A - 3
A.3	Connecting the GL-series B2813 Positioning Module	A - 4
A.4	Connecting OMRON's C500-NC221 Position Control Unit.....	A - 5
A.5	Connecting OMRON's C500-NC112 Position Control Unit.....	A - 6
A.6	Connecting MITSUBISHI's AD72 Positioning Unit.....	A - 7
A.7	Connecting MITSUBISHI's AD75 Positioning Unit.....	A - 8
B.	List of Parameters	B - 1
B.1	Parameters.....	B - 2
B.1.1	List of Additional and Improved Parameters (Applicable only to SGDH amplifiers with version #33□□□ or higher).....	B - 5
B.2	Switches.....	B - 8
B.2.1	Additional Switches (Applicable only to SGDH amplifiers with version #33□□□ or higher)	B - 12
B.3	Input Signal Selections	B - 13
B.4	Output Signal Selections	B - 15
B.4.1	Additional Output Signal Selection (Applicable only to SGDH amplifiers with version # 33□□□ or higher).....	B - 16
B.5	Auxiliary Functions	B - 17
B.5.1	Detail of Fn011 (Motor Model Display).....	B - 18
B.6	Monitor Modes	B - 19
B.7	List of Added & Changed Parameters	B - 20
B.7.1	Parameter list	B - 20
B.7.2	Switch list	B - 22
B.7.3	Input Signal Selection List	B - 23
B.7.4	Output Signal Selection List	B - 24
B.7.5	Monitor List	B - 24
B.7.6	Auxiliary Function List	B - 24
B.7.7	Alarm and Warning List	B - 25
C.	Examples of Standard Connections	C - 1
C.1	Single-Phase Power Supply Specifications	C - 2
C.2	Three-Phase Power Supply Specifications (200V)	C - 3
C.3	Three-Phase Power Supply Specifications (400V)	C - 4

C.4	Position Control Mode.....	C - 7
C.5	Speed Control Mode	C - 8
C.6	Torque Control Mode	C - 9