

SJ-201P

Surface Roughness Tester

User's Manual

Read this User's Manual thoroughly
before operating the instrument. After reading,
retain it close at hand for future reference.

Mitutoyo

CONTENTS

CONVENTIONS USED IN USER'S MANUAL	i
PRECAUTIONS	iii
WARRANTY	iii
1 SJ-201P OVERVIEW	1-1
1.1 Outline of the SJ-201P	1-1
1.2 Standard SJ-201P Configuration	1-3
1.3 Name of Each Part on the SJ-201P	1-5
1.4 Attaching and Detaching the Drive/Detector Unit	1-9
1.4.1 Attaching and Detaching the Detector	1-9
1.4.2 Attaching and detaching the drive/detector unit	1-11
1.4.3 Plugging in and unplugging the display unit cable	1-13
1.4.4 Using the connection cable	1-14
1.5 Carrying Case	1-16
2 OUTLINE OF THE SJ-201P FUNCTIONS AND KEY OPERATIONS	2-1
2.1 Relationship Between SJ-201P Functions and Available Keys	2-1
2.2 Key Operations to Enter Numeric Values	2-6
3 MEASUREMENT OPERATION	3-1
3.1 Overall Measurement Flow	3-1
3.2 Power ON and OFF	3-4
3.3 Calibration	3-8
3.3.1 Calibration preparation	3-8
3.3.2 Performing calibration	3-11
3.4 Measurement	3-14
3.4.1 Setting the workpiece and SJ-201P	3-14
3.4.2 Starting measurement	3-16
3.4.3 Switching the objective parameter to be displayed	3-17
3.4.4 Detector retraction procedure	3-18
3.5 Daily Care	3-20
3.5.1 Storage of SJ-201P	3-20
3.5.2 Recharging the built-in battery	3-20
4 MODIFYING THE MEASUREMENT CONDITIONS	4-1
4.1 Switching the Cutoff Length	4-1
4.2 Modifying the Number of Sampling Lengths	4-3
4.3 Setting the Evaluation Length to an Arbitrary Length	4-5
4.4 Setting the Pre-travel/Post-travel Length to OFF	4-7
4.5 Modifying the Measurement Range	4-9
4.6 Switching the Surface Roughness Standard	4-11
4.7 Changing the Measured Profile	4-13
4.8 Changing the Filter	4-15
4.9 Setting the GO/NG Judgment Function	4-17
4.10 Setting Parameters Other Than Ra, Ry, Rz, and Rq	4-20
4.11 Modifying the Traversing Speed	4-27
4.12 Modifying the Calibration Conditions	4-29
4.13 Resetting to the Factory-Set Defaults	4-32
4.14 Switching the Unit of Measurements	4-34

5	INSTALLING THE SJ-201P WITH OPTIONAL ACCESSORIES	5-1
6	SAVING/OUTPUTTING/COMMUNICATING THE MEASUREMENT RESULTS	6-1
6.1	Setting the Measurement Result Output	6-1
6.2	Saving/Calling/Deleting Measurement Results	6-3
6.2.1	Saving measurement results	6-3
6.2.2	Calling the saved data	6-5
6.2.3	Deleting the saved data	6-7
6.3	Printing Measurement Results and Saved Data	6-9
6.3.1	Connecting the SJ-201P and printer	6-10
6.3.2	Printing the measurement results or saved data	6-13
6.3.3	Setting the print items	6-16
6.3.4	Setting the print magnification	6-18
6.3.5	Setting the print language	6-21
6.4	SPC Data Output	6-23
6.4.1	Connecting the SJ-201P and DP-1HS	6-24
6.4.2	Outputting the measurement results or saved data	6-25
6.5	Connecting with a Personal Computer	6-28
7	REPLACEMENT OF THE BUILT-IN BATTERY PACK	7-1
7.1	Purchasing a Built-In Battery Pack	7-1
7.2	Replacing the Built-In Battery Pack	7-2
8	TROUBLESHOOTING	8-1
9	PRODUCT SPECIFICATIONS	9-1
9.1	Detector	9-1
9.2	Drive Unit	9-1
9.3	Display Unit	9-2
9.3.1	Compatible surface roughness standard	9-2
9.3.2	Measured profiles and applicable filters	9-2
9.3.3	Cutoff length/sampling length, number of sampling lengths, and sampling interval	9-2
9.3.4	Roughness parameters and display range	9-3
9.3.5	Evaluation length	9-3
9.3.6	Measurement range and resolution	9-3
9.4	Power Supply	9-4
9.5	Temperature/Humidity Range	9-4
9.6	External Dimensions and Mass	9-4
9.7	Optional Accessories	9-5
9.8	SPC Output Specifications	9-6
9.9	Connection Specifications with a Personal Computer	9-8
9.10	RS-232C Communication Specifications	9-9

10	REFERENCE INFORMATION	10-1
10.1	Surface Roughness Standard	10-1
10.1.1	Evaluation according to JIS B0601-1982	10-1
10.1.2	Evaluation according to JIS B0601-1994	10-2
10.1.3	Evaluation according to DIN	10-3
10.1.4	Evaluation according to ISO	10-4
10.1.5	Evaluation according to ANSI	10-5
10.2	Assessed Profile and Applicable Filters	10-6
10.2.1	Measured profile	10-6
10.2.2	Filters	10-9
10.2.3	Difference of filter characteristics	10-12
10.2.4	Amplitude characteristic of 2RC and PC50 (Gaussian) filters	10-13
10.3	Mean line compensation	10-14
10.4	Traversing Length	10-15
10.5	Definitions of the SJ-201P Roughness Parameters	10-17
10.5.1	Arithmetic mean deviation of the profile, Ra	10-17
10.5.2	Root-mean-square deviation of the profile, Rq	10-17
10.5.3	Maximum height of the profile, Ry (JIS).....	10-18
10.5.4	Ten-point height of irregularities, Rz (JIS)	10-19
10.5.5	Maximum two point height of the profile, Ry (DIN, ANSI)	10-20
10.5.6	Maximum height of the profile, Rz (DIN, ISO, ANSI).....	10-20
10.5.7	Maximum profile peak height, Rp (DIN, ISO, New JIS).....	10-20
10.5.8	Total height of the profile, Rt.....	10-20
10.5.9	Mean width of the profile elements, Sm (JIS, ISO, DIN)	10-21
10.5.10	Peak count, Pc (JIS, ISO, DIN)	10-21
10.5.11	Material ratio of the profile, mr	10-22
10.5.12	Base roughness depth, R3z	10-22
10.5.13	Mean spacing of local peaks of the profile, S	10-23
10.5.14	Material ratio curve of the profile (Abbott Firestone curve), BAC	10-24
10.5.15	Core roughness depth, Rk (Depth of the roughness core profile)	10-25
10.5.16	Reduced peak height, Rpk (Average height of the protruding peaks above the roughness core profile)	10-25
10.5.17	Reduced valley depth, Rvk (Average depth of the profile valleys projecting through the roughness core profile)	10-25
10.5.18	Material portion, Mr1	10-25
10.5.19	Material portion, Mr2	10-25
10.5.20	Peak area, A1	10-25
10.5.21	Valley area, A2	10-25
10.5.22	Measuring volume Vo	10-26