

INSTRUCTION MANUAL

SINKER EDM

MGF GENERATOR

PROGRAMMING

MAKINO MILLING MACHINE CO., LTD.

6GF1-NF02-9602(E)

CONTENTS

1. PREFACE	1- 1
2. FUNDAMENTALS OF PROGRAMMING	2- 1
2.1 PROGRAMMING OVERVIEW	2- 1
2.2 PROGRAM STRUCTURE	2- 2
2.2.1 ADDRESS/WORD	2- 4
2.2.1.1 Program No. word	2- 4
2.2.1.2 Sequence No. word	2- 5
2.2.1.3 Coordinate word	2- 5
2.2.1.4 Preparatory function word	2- 7
2.2.1.5 Feed function word	2- 7
2.2.1.6 Spindle function word	2- 7
2.2.1.7 Electrode function word	2- 7
2.2.1.8 Auxiliary function word	2- 7
2.2.1.9 Calling program number word/repeat count word	2- 7
2.2.1.10 Offset number word	2- 7
2.2.1.11 Machining condition word	2- 8
2.2.2 BLOCKS	2- 8
2.2.2.1 End of block	2- 8
2.2.2.2 Optional block skip	2- 9
2.2.2.3 Comment input	2- 10
2.3 COORDINATE SYSTEM	2- 10
2.3.1 MACHINE COORDINATE SYSTEM	2- 11
2.3.2 WORKPIECE COORDINATE SYSTEM	2- 12
2.3.3 LOCAL COORDINATE SYSTEM	2- 13
2.3.4 ABSOLUTE AND INCREMENTAL COMMANDS	2- 13
3. FUNCTION WORDS	3- 1
3.1 G/M CODE LIST	3- 1
3.1.1 G CODE LIST	3- 1
3.1.2 M CODE LIST	3- 4
3.2 COORDINATE SYSTEM COMMANDS	3- 6
3.2.1 PLANE DESIGNATION (G17/18/19)	3- 7
3.2.2 INHIBIT AREA SPECIFICATION (G22/23)	3- 9
3.2.3 LOCAL COORDINATE SYSTEM SETTING (G52)	3- 11

3.2.4	MACHINE COORDINATE SYSTEM COMMAND (G53)	3- 13
3.2.5	WORKPIECE COORDINATE SYSTEM SELECTION (G54-61/G500-509)	3- 15
3.2.6	WORKPIECE COORDINATE SYSTEM SETTING (G92)	3- 18
3.3	SELECTION OF COMMAND VALUE INPUT UNIT SYSTEM	3- 21
3.3.1	ABSOLUTE/INCREMENTAL (G90/91)	3- 22
3.4	TRAVEL COMMANDS	3- 24
3.4.1	LINEAR INTERPOLATION (G00/01)	3- 25
3.4.2	CIRCULAR INTERPOLATION (G02/03)	3- 28
3.4.3	DWELL (G04)	3- 33
3.4.4	UNIDIRECTIONAL POSITIONING (G14)	3- 34
3.4.5	REFERENCE POINT RETURN (G28/29)	3- 36
3.4.6	2ND-4TH REFERENCE POINT RETURN (G30)	3- 40
3.4.7	EXTERNAL SKIP FUNCTION (G31)	3- 42
3.4.8	DIRECT FEED RATE INPUT (F)	3- 44
3.5	DATA SETTING	3- 45
3.5.1	DIRECT DATA WRITING (G10)	3- 46
3.6	ELECTRODE COMPENSATION	3- 55
3.6.1	SELECTION OF ELECTRODE COMPENSATION VALUE (D/H)	3- 56
3.6.2	CHANGE OF ELECTRODE COMPENSATION VALUE (G10)	3- 58
3.6.3	ELECTRODE DIAMETER COMPENSATION (G40/41/42)	3- 59
3.6.4	ELECTRODE LENGTH COMPENSATION (G43/44/49)	3- 71
3.7	SCALING (G47/48)	3- 73
3.8	ROTATION (G68/69)	3- 77
3.9	MIRROR IMAGE (G70/71)	3- 79
3.10	CANNED CYCLE	3- 81
3.10.1	PATTERN MACHINING (G74/75)	3- 82
3.10.2	JUMP (G76/77)	3- 86
3.10.3	MACHINING (G80/81/82/83)	3- 96
3.10.4	POSITIONING (G84/85/86)	3- 103
3.10.5	MACHINING START POINT/INTERRUPT POINT RETURN FUNCTION (G98/99) CONTINUOUS BLOCK (CONTOUR) MACHINING OFF/ON (G958/959)	3- 107
3.10.6	ROTATION COPY (G26)	3- 108

3.11 AUXILIARY (M)/SPINDLE (S)/ELECTRODE (T) FUNCTION	3- 114
3.11.1 AUTOMATIC OPERATION STOP/TERMINATION (M00/01/02/03)	3- 116
3.11.2 TOUCH STOP DISREGARD FUNCTION (M19)	3- 117
3.11.3 POLARITY REVERSE FUNCTION (M24/25)	3- 118
3.11.4 DIELECTRIC FLUID SUPPLY FUNCTION (M28/29)	3- 118
3.11.5 MACHINING FUNCTION (M26/27)	3- 119
3.11.6 SUBPROGRAM FUNCTION (M98/99)	3- 120
3.11.7 ELECTRODE CHANGE FUNCTION (M06/07/08/T)	3- 121
3.11.8 MA HEAD FUNCTION (M57/56/03/05)	3- 127
3.11.9 DH HEAD FUNCTION (M18)	3- 132
3.11.10 BLOWING FUNCTION (M09/40-49/50)	3- 133
3.11.11 TANK ELEVATING FUNCTION (M58/59)	3- 136
3.11.12 PALLET CHANGE FUNCTION (M60)	3- 136
3.11.13 SL FUNCTION (M70/71)	3- 137
3.12 MACHINING CONDITIONS (E/G10)	3- 138
4. APPENDIX	4- 1
4.1 STANDARD ON COMMAND TAPE	4- 1
4.1.1 COMMAND TAPE	4- 1
4.1.2 TAPE CODES	4- 1
4.1.2.1 Discrimination Between EIA and ISO Codes	4- 2
4.1.2.2 Parity check (TH check)	4- 2
4.1.2.3 Codes Used in the Program	4- 2