

INSTRUCTION MANUAL

VERTICAL MACHINING CENTER

FNC 128-A

FANUC SYSTEM 11M



MAKINO MILLING MACHINE CO., LTD.

No. FN1003-86

SPECIFICATIONS

7FS 03A

CONTENTS

	Page
1. GENERAL	A - 1
1.1 General View of the Machine	A - 1
1.2 Nomenclature and Description of Each Part	A - 2
2. MAIN DIMENSIONS AND VALUES	A - 5
2.1 Machine	A - 5
2.1.1 Range of movement	A - 5
2.1.2 Spindle	A - 5
2.1.3 Table	A - 5
2.1.4 Feed	A - 5
2.1.5 Machine zero point	A - 6
2.1.6 ATC unit	A - 7
2.1.7 Fan cooler	A - 7
2.1.8 Hydraulic unit	A - 8
2.1.9 Coolant unit	A - 8
2.1.10 Pneumatic supply	A - 8
2.1.11 Power requirement	A - 10
2.1.12 Power supply	A - 11
2.1.13 Machine weight	A - 11
2.1.14 Optional accessories	A - 11
2.2 NC Unit (FANUC SYSTEM 11M)	A - 14
3. NEW DRAWING	A - 17
4. FLOW PLAN	A - 20
5. STANDARD ACCESSORIES	A - 22

INSTALLATION

7FI 03A

CONTENTS

	Page
1. SELECTING THE MACHINE LOACATION	B - 1
2. ARRANGEMENT	B - 1
3. POWER AND AIR SUPPLIERS	B - 1
4. FOUNDATION	B - 3
5. HOISTING	B - 5
6. INSTALLATION	B - 8
7. PIPING AND WIRING	B - 10
7.1 Piping and Wiring of Coolant	B - 10
7.2 Connecting the Air Supply	B - 10
7.3 Wiring of Main Control Box	B - 11
7.4 Connecting the ATC Control Box	B - 11
7.5 Connecting the Power Supply	B - 11
8. LUBRICATION	B - 15
8.1 Lubricating Oil	B - 15
8.2 Hydraulic Oil	B - 20
9. REPARATIONS FOR OPERATION	B - 21
9.1 Wiring off the Rust Preventive	B - 21
9.2 Removing the Clamps	B - 21
10. TURNING THE POWER ON	B - 24
11. LEVELING	B - 27

OPERATION

MACHINE PROPER UNIT

7FT 03A

CONTENTS

	Page
1. NOMENCLATURE	C - 1
2. SAFETY PRECAUTION	C - 2
3. HANDLING OF MAIN PARTS	C - 3
3.1 Main Power Switch	C - 3
3.2 Pendant Type Main Control Box	C - 4
3.2.1 NC unit control panel	C - 4
3.2.2 Main control panel	C - 4
3.2.3 Portable control panel	C - 19
3.3 Diagnostic Function	C - 24
4. EMERGENCY STOP	C - 25
5. OPERATION AT THE START OF DAILY WORK	C - 27
5.1 Turning the Power on	C - 27
5.2 Turning the Air Supply on	C - 27
6. OPERATION	C - 28
6.1 Manual operation	C - 28
6.1.1 Manual continuous feed (jog feed, rapid traverse)	C - 28
6.1.2 Handle feed	C - 29
6.1.3 Manual zero return	C - 30
6.2 Automatic operation	C - 31
6.2.1 Automatic operation mode	C - 31
6.2.2 Preparations for automatic operation	C - 32
6.2.3 Starting the automatic operation	C - 34
6.2.4 Temporarily stopping and restarting automatic operations	C - 35
6.2.5 End of automatic operation	C - 38
7. OPERATION AT THE END OF DAILY WORK	C - 39
7.1 Cutting the Power off	C - 39
7.2 Cutting the Air Supply off	C - 39
7.3 Cleaning Around the Machine	C - 39

SPINDLE HEAD UNIT

7FT 13A

CONTENTS

	Page
1. NOMENCLATURE	D - 1
2. HANDLING OF MAIN PARTS	D - 2
2.1 Control Panel	D - 2
2.1.1 Main control panel	D - 2
2.1.2 Spindle head control panel	D - 4
2.1.3 ATC unit control panel	D - 5
2.1.4 Spindle operation integrating hour meter (option)	D - 6
2.2 Manual Rotation of Spindle	D - 7
2.3 Tool Loading/Unloading for Milling Chuck Holder	D - 7
3. SPINDLE OPERATION	D - 8
3.1 Spindle Start and Stop	D - 8
3.2 Spindle Speed Change	D - 8
3.3 Spindle Stop at Fixed Angle Position (Orientation)	D - 9
3.4 Tool Loading and Unloading	D - 10
4. SPINDLE INPUT METER	D - 11
5. LUBRICATIOON	D - 12

A.T.C UNIT

7FT 123A

CONTENTS

	Page
1. NOMENCLATURE	E - 1
2. HANDLING OF MAIN PARTS	E - 2
2.1 Control Panel	E - 2
2.1.1 ATC unit control panel	E - 2
2.1.2 Main control panel	E - 8
2.1.3 Sub control panel	E - 9
2.2 Tool Loading/Unloading for Tool Magazine	E - 10
2.3 Limitation Concerning Tool Weight and Size	E - 12
3. OPERATION	E - 13
3.1 Stand-By of Automatic Tool Changer (ATC Unit)	E - 13
3.2 Registering the Tool Number	E - 13
3.2.1 Registering sequentially starting from pot No. 01 (origin pot)	E - 14
3.2.2 Registering the tool numbers only in particular pots	E - 15
3.3 Zero Return of Tool Magazine	E - 17
3.4 Call of Tool	E - 18
3.5 Automatic Tool Change with MDI	E - 18
3.6 Automatic Tool Change with Tape or Memory operation ...	E - 19
4. RESET FROM EMERGENCY STOP MIDWAY OF ATC OPERATION	E - 20

HYDRAULIC & PNEUMATIC UNITS

7FT 133A

CONTENTS

	Page
1. HYDRAULIC UNIT	F - 1
1.1 Nomenclature	F - 1
1.2 Hydraulic Oil Heating Switch	F - 2
1.3 Operation	F - 3
1.4 Hydraulic Oil	F - 4
2. PNEUMATIC UNIT	F - 5
2.1 Nomenclature	F - 5
2.2 Lubricating Oil	F - 6

LUBRICATING UNIT

7FT 63A

CONTENTS

	Page
1. SPINDLE TEMPERATURE CONTROLLER	G - 1
1.1 Nomenclature	G - 1
1.2 Operation	G - 2
1.3 Oil Supply	G - 3
1.4 Lubricating Oil	G - 4
2. AUTOMATIC LUBRICATOR	G - 4
2.1 Nomenclature	G - 4
2.2 Lubrication Alarm Lamp	G - 5
2.3 Operation	G - 6
2.4 Lubricating Oil	G - 6

COOLANT UNIT

7FT 73A

CONTENTS

	Page
1. NOMENCLATURE	H - 1
2. HANDLING OF MAIN PARTS	H - 2
2.1 Coolant ON/OFF Switch	H - 2
2.2 Nozzle	H - 3
2.3 Flow Adjusting Valve	H - 3
3. COOLANT	H - 3
