

MAINTENANCE MANUAL

MACHINING CENTER

MC 1210



MAKINO MILLING MACHINE CO., LTD.

MC 1210

PERIODIC CHECKS

5MM 30

CONTENTS

	Page
1. DAILY CHECKS	A-1
2. WEEKLY CHECKS	A-15
3. MONTHLY CHECKS	A-19
4. CHECKS EVERY THREE MONTHS	A-25

MC 1210

SPINDLE HEAD UNIT

5MM 10

CONTENTS

	Page
1. INTRODUCTION	B - 1
2. SPINDLE DRIVE MECHANISM	B - 2
2.1 Spindle Speed Change Mechanism	B - 3
2.1.1 Construction	B - 3
2.1.2 Gear combination for each range	B - 4
2.2 Spindle Angle Positioning (Orientation) Mechanism	B - 5
2.2.1 Construction and adjustment	B - 6
2.3 Tool Clamp	B - 6
2.3.1 Construction	B - 7
3. HYDRAULIC AND PNEUMATIC CIRCUIT	B - 8
3.1 Shifter Penumatic Circuit	B - 8
3.2 Collet Unclamp Hydraulic Cirlcuit	B - 9
4. CONTROL SEQUENCE	B -10
4.1 Spindle Drive Sequence	B -10
4.2 Orientation Sequence	B -11
4.3 Tool Clamp/Unclamp Sequence	B -12
5. HYDRAULIC/PNEUMATIC EQUIPMENT	B -13
5.1 Mounting Position of Hydraulic and Pneumatic Equipment ...	B -10
5.1.1 Shifter pneumatic equipment	B -13
5.1.2 Hydraulic equipment for collet unclamp	B -13
5.2 Setting Operational Speed and Pressure	B -14
5.2.1 Setting shifter operational speed and pressure	B -14
5.2.2 Setting tool unclamp operational speed pressure	B -14
6. LIMIT SWITCHES (LS)	B -15
6.1 LS for Tool Clamp (LS 00 and LS 01)	B -15
6.1.1 Mounting position	B -15
6.1.2 Construction and adjustment	B -16
6.2 LS for Shifter (LS 06 and LS 07)	B -17
6.2.1 Mounting position	B -17
6.2.2 Construction and adjustment	B -18

	Page
7. SETTING	B -19
7.1 Setting the Spring Force of the Initially Coned Disc Spring for Tool Clamp	B -19
8. DISASSEMBLY AND REASSEMBLY OF MAIN COMPONENTS	B -21
8.1 Separation of Spindle Head From Column and its Mounting ...	B -21
8.2 Disassembly and Reassembly of Collet Unclamp Cylinder Unit.	B -28
8.3 Disassembly and Reassembly of Spindle	B -29
8.4 Disassembly and Reassembly of Tool Clamp Unit (Nail collet)	B -30
8.5 Disassembly and Reassembly of Intermediate Shaft	B -30

MC 1210

FEED AXIS UNIT

5MM 20

CONTENTS

	Page
1. INTRODUCTION	C - 1
2. AXIS DRIVE MECHANISM	C - 2
2.1 X-Axis	C - 2
2.2 Y-Axis	C - 3
2.3 Z-Axis	C - 4
3. CONTROL SEQUENCE	C - 5
4. LIMIT SWITCH (LS)	C - 6
4.1 Mounting Position	C - 6
4.2 Construction and Function	C - 7
4.2.1 X-axis	C - 7
4.2.2 Y-axis	C - 8
4.2.3 Z-axis	C - 9
5. MACHINE ZERO POINT	C -10
5.1 Machine Zero Point Return System	C -10
5.2 Zero Point Adjustment	C -11
5.2.1 X-axis	C -11
5.2.2 Y-axis	C -13
5.2.3 Z-axis	C -16
6. ADJUSTMENT	C -20
6.1 Adjustment of Ball Screw Pre-tension	C -20
6.1.1 X-axis	C -21
6.1.2 Y-axis	C -21
6.1.3 Z-axis	C -21
6.2 Feed Axis Backlash	C -22
6.2.1 Measurement of backlash	C -22
6.2.2 Removal of backlash	C -23
6.3 Dog	C -24
6.3.1 Relationship between dog and limit switch	C -24

	Page
6.3.2 Mounting position of dog	C -25
6.3.3 Dog adjustment	C -26
6.4 Pitch Error	C -29
6.5 Gib	C -30
6.5.1 X-axis	C -30
6.5.2 Y-axis	C -32
6.5.3 Z-axis	C -33
7. SEMI-FLOATING SLIDEWAYS	C -34
7.1 Semi-floating Slideways of X-axis	C -35
7.1.1 Pneumatic circuit	C -35
7.1.2 Operation sequence of X-axis semi-floating slideways ...	C -36
7.1.3 Arrangement and pressure adjustment of servo valve	C -37
7.2 Semi-floating Slideways of Z-axis	C -39
7.2.1 Pneumatic circuit	C -39
7.2.2 Arrangement and pressure adjustment of regulator	c -40

MC 1210

NC ROTARY TABLE UNIT

5MM 53

CONTENTS

	Page
1. INTRODUCTION	D - 1
2. DRIVE MECHANISM FOR NC ROTARY TABLE	D - 2
3. TABLE HYDRAULIC CIRCUIT	D - 2
4. TABLE DRIVE CONTROL SEQUENCE	D - 2
5. HYDRAULIC EQUIPMENT	D - 6
5.1 Mounting Position of Hydraulic Equipment	D - 6
5.2 Setting of Operation Speed	D - 7
5.2.1 Table clamp speed	D - 7
5.2.2 Pallet clamp/unclamp speed	D - 7
6. LIMIT SWITCH	D - 8
6.1 Table Zero Point Limit Switch (LS50)	D - 8
6.1.1 Construction	D - 8
6.1.2 Mounting position	D - 9
6.2 Pallet Clamp/Unclamp Limit Switches (LS55, LS56)	D -10
6.2.1 Construction	D -10
6.2.2 Mounting position	D -11
7. ADJUSTMENT	D -12
7.1 Removing the Backlash between Worm and Worm Wheel	D -12
7.2 Machine Zero Point	D -13
7.2.1 Return to machine zero point	D -13
7.2.2 Setting of zero point reference position	D -14
7.3 Adjustment of Belt Tension	D -16
7.4 Adjustment of Pallet Clamp/Unclamp Limit Switches	D -17
8. DISMOUNTING AND MOUNTING OF MAJOR TABLE SECTION	D -18
8.1 Dismounting and Mounting the B-axis Drive Motor	D -18
8.2 Dismounting and Mounting the Worm Shaft	D -20
8.3 Dismounting and Mounting the Positioning Base	D -21

SMM 32

MC 1210

60-TOOL ATC UNIT

5MM 60

CONTENTS

	Page
1. INTRODUCTION	E - 1
2. ATC DRIVE MECHANISM	E - 2
2.1 Arm Drive Section	E - 2
2.1.1 Arm drive ADV.1, RET.1	E - 2
2.1.2 Arm drive ADV.2, RET.2	E - 2
2.1.3 Arm drive ADV.3, RET.3	E - 3
2.1.4 Tool change arm IN, OUT	E - 3
2.1.5 Tool change arm CW, CCW	E - 3
2.1.6 Gripper lock/unlock mechanism	E - 3
2.2 Magazine Drive Section	E - 7
2.2.1 Magazine index	E - 7
2.2.2 Cartridge index	E - 9
3. HYDRAULIC CIRCUIT	E -11
4. ATC SEQUENCE	E -12
4.1 Arm Operation Sequence	E -12
4.2 Magazine Operation Sequence	E -12
5. HYDRAULIC EQUIPMENT	E -15
5.1 Mounting Position of Hydraulic Equipment	E -15
5.1.1 Hydraulic equipment for arm drive	E -15
5.1.2 Hydraulic equipment for magazine drive	E -17
5.2 Setting of Operation Speed	E -19
5.2.1 Arm operation speed	E -19
5.2.2 Magazine operation speed	E -20
6. LIMIT SWITCHES	E -21
6.1 Arm RET.1, ADV.1 (LS 70, LS 71)	E -21
6.1.1 Construction and adjustment	E -21
6.1.2 Mounting positions	E -22

6.2	Arm RET.2, ADV.2 (LS 72, LS 73)	E -23
6.2.1	Construction and adjustment	E -23
6.2.2	Mounting position	E -23
6.3	Arm IN, OUT (LS 74, LS 75)	E -25
6.3.1	Construction and adjustment	E -25
6.3.2	Mounting position	E -26
6.4	Arm CW, CCW (LS 76, LS 77)	E -26
6.4.1	Construction and adjustment	E -26
6.4.2	Mounting positions	E -27
6.5	Arm RET.3, ADV.3 (LS 78, LS 79)	E -27
6.5.1	Construction and adjustment	E -27
6.5.2	Mounting positions	E -28
6.6	Tool Presence Detect (LS 89)	E -28
6.6.1	Construction and adjustment	E -28
6.6.2	Mounting position	E -29
6.7	Z-axis Interlock (LS 81)	E -30
6.7.1	construction and adjustment	E -30
6.7.2	Mounting position	E -31
6.8	Limit Switch for Magazine Zero Point (LS 700)	E -31
6.8.1	Construction and adjustment	E -31
6.8.2	Mounting positions	E -32
6.9	Limit Switch for Magazine Indexer ADV., RET. (LS 703, LS 704)	E -33
6.9.1	Construction and adjustment	E -33
6.9.2	Mounting positions	E -33
6.10	Limit Switch for Lever RET. (LS 705)	E -33
6.10.1	Construction and adjustment	E -34
6.10.2	Mounting position	E -34

6.11	Limit Switch for Cartridge RET. (LS 706)	E -34
6.11.1	Construction and adjustment	E -35
6.11.2	Mounting position	E -36
6.12	Limit Switch for Cartridge Indexer ADV. (LS 709)	E -36
6.12.1	Construction and adjustment	E -36
6.12.2	Mounting positions	E -37
6.13	Limit Switch for Detecting the Tool Presence in Pot (LS 711)	E -38
6.14	Limit Switch for Cartridge OUT POS. (LS 712)	E -38
6.14.1	Construction and adjustment	E -38
6.14.2	Mounting position	E -39
7.	ADJUSTMENT	E -40
7.1	Mounting of ATC Unit on Bed	E -40

MC 1210

PALLET CHANGER UNIT

5MM 120

CONTENTS

	Page
1. INTRODUCTION	F - 1
2. CONSTRUCTION	F - 2
2.1 Carrier Arm Unit	F - 2
2.2 Carrier Arm Slide Unit (Fig. 2.1)	F - 2
2.3 Pallet fixing Pin (Fig. 2.2)	F - 3
2.4 Swing Stocker Fixing Pin (Fig. 2.3)	F - 6
3. HYDRAULIC CIRCUIT	F - 7
4. PALLET CHANGE SEQUENCE	F - 9
5. HYDRAULIC EQUIPMENT	F -10
5.1 Mounting Position of Hydraulic Equipment	F -10
5.2 Speed Setting	F -11
5.2.1 Speed of hook POS. 1 and POS. 2	F -11
5.2.2 Carrier arm reverse speed	F -11
5.2.3 Carrier arm forward speed	F -11
6. LIMIT SWITCHES	F -12
6.1 Limit Switches for Carrier Arm Foward/Reverse (LS101, LS100)	F -12
6.1.1 Construction and adjustment	F -12
6.1.2 Mounting positions	F -13
6.2 Limit Switches for Hook POS. 1 and POS. 2 (LS102, LS103) ..	F -14
6.2.1 Construction and adjustment	F -14
6.2.2 Mounting positions	F -15
6.3 Limit Switches for Detection of Pallet Presence/Absence on Swing Stocker (LS110, LS111)	F -15
6.3.1 Construction and adjustment	F -16
6.3.2 Mounting positions	F -17

6.4	Limit Switches for Detection of 0° Position of Swing Stocker (LS112, LS113)	F -17
6.4.1	Construction and adjustment	F -17
6.4.2	Mounting positions	F -19
7.	CENTERING	F -20
Attached Fig. 1	Mchine wiring diagram	F -21
Fig. 2	Outer shape diagram	F -22
Fig. 3	Outer shape diagram	F -23
Fig. 4	Outer shape diagram	F -24