

# **Sodick**

**NC POWER SUPPLY UNIT FOR EDM**

**CODE INSTRUCTIONS**

**LQ/LN**

Before operating the machine, read this manual carefully and make sure that you fully understand the information it contains.

Appoint someone to be responsible for this manual and keep it in a designated place so that it is accessible at all times.

**Ver 1.2**

TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER 1 OUTLINE .....	1-1
1. DEFINITION OF "WORD" .....	1-1
2. DEFINITION OF "ADDRESS" .....	1-2
3. ADDRESS AND DATA .....	1-3
3-1. N, O (Sequence Number) .....	1-3
3-2. G (Preparatory Functions (Linear Interpolation, Circular Interpolation, etc.)) .....	1-3
3-3. X, Y, Z, U (Axis Travel) .....	1-3
3-4. I, J, K (Coordinates of Center of Circular Arc) .....	1-3
3-5. T (Machine Control Items) .....	1-3
3-6. D, H (Offset Number) .....	1-4
3-7. P (Subprogram Number) .....	1-4
3-8. L (Number of Repetitions of Subprogram) .....	1-4
3-9. C (Machining Condition Number) .....	1-4
3-10. M (Auxiliary Function) .....	1-4
3-11. Q (File Call-up) .....	1-4
3-12. F (Feedrate) .....	1-5
3-13. S (Rotating Spindle (R-axis) Speed) .....	1-5
3-14. B (Electrode Offset Data Registration) (Option) .....	1-5
3-15. ON, OFF, etc. (Change of Machining Condition Parameters) .....	1-6
4. COORDINATE SYSTEMS .....	1-7
5. COMMENTS .....	1-8
CHAPTER 2 BLOCKS .....	2-1
1. DEFINITION .....	2-1
2. PROCESSING ORDER OF NC CODES IN ONE BLOCK .....	2-2
CHAPTER 3 SEQUENCE NUMBERS .....	3-1
CHAPTER 4 BLOCK SKIP ("I") .....	4-1
CHAPTER 5 G CODES .....	5-1
1. G00 (POSITIONING) .....	5-7
2. G01 (LINEAR INTERPOLATION) .....	5-7
3. G02, G03 (CIRCULAR INTERPOLATION) .....	5-8
3-1. Circular Interpolation .....	5-8
3-2. Helical Interpolation .....	5-12
3-3. Oblique Interpolation .....	5-12

# TABLE OF CONTENTS

	<u>PAGE</u>
4. G04 (DWELL) .....	5-15
5. G05, G06, G07, G09 (MIRROR IMAGE AND CANCEL) .....	5-16
5-1. G05, G06, G07 and G09 .....	5-16
6. G08, G09 (X-Y EXCHANGE AND CANCEL) .....	5-18
7. G11, G12 (BLOCK SKIP ON/OFF) .....	5-20
8. G15 (U-AXIS ORIGIN POSITIONING COMMAND) (OPTION) .....	5-21
9. G17, G18, G19 (PLANE SELECTION COMMANDS) .....	5-21
10. G22, G23 (SOFTWARE LIMIT) .....	5-23
11. G24, G25 (AJC (AUTOMATIC JUMPING CONTROL) OPERATION COMMANDS) .....	5-24
12. G26, G27 (FIGURE ROTATION ON/OFF) .....	5-26
13. G28, G29, G60 (MAIN REFERENCE POINT) .....	5-27
14. G30 (RETURN TO G92/G97 SET POINT) .....	5-27
15. G40, G41, G42 (ELECTRODE RADIUS OFFSET) .....	5-28
16. G54 TO G958, G959 (WORK COORDINATE SYSTEMS 54 TO 958, MACHINE COORDINATE SYSTEM) .....	5-29
17. G80 (TRAVEL UNTIL CONTACT SENSOR OPERATES) .....	5-31
18. G81 (TRAVEL TO LIMIT OF MECHANICAL SYSTEM) .....	5-34
19. G82 (TRAVEL TO HALF OF DISTANCE BETWEEN PRESENT POSITION AND ORIGIN) .....	5-35
20. G83 (READ NC INFORMATION INTO SPECIFIED OFFSET TERM) .....	5-36
21. G85 (TIMER MACHINING COMMAND) .....	5-40
22. G90 (ABSOLUTE PROGRAMMING MODE) G91 (INCREMENTAL PROGRAMMING MODE) .....	5-41
23. G92, G97 (COORDINATE SYSTEM SHIFT) .....	5-43
24. G122, G123 (SET SOFTWARE LIMIT) .....	5-44
25. G126, G127 (COORDINATE ROTATION ON/OFF) .....	5-44
26. G128, G129 to G928, G929 (SUB-REFERENCE POINT) .....	5-45
27. G132, G133, G136, G137 (INTERFERENCE CHECK) .....	5-46
28. G152 (LOCAL COORDINATE SYSTEM) .....	5-47
29. G153 (MOVE TO THE STROKE END) .....	5-49
30. G160, G161, G162, G163, G164, G165, G166 (THREE-DIMENSIONAL ROTATION) .....	5-50
31. G183 (READ SETTING INFORMATION INTO SPECIFIED OFFSET TERM) .....	5-51
32. G184 (READ ELECTRODE OFFSET DATA) .....	5-55
33. G192 (HALF-COORDINATE SET) .....	5-56
34. G326, G327 (LORAN ROTATION ON/OFF) .....	5-57

# TABLE OF CONTENTS

	PAGE
CHAPTER 6 X, Y, Z, U COORDINATE AXES .....	6-1
CHAPTER 7 I, J, K COORDINATE AXES .....	7-1
CHAPTER 8 T CODES .....	8-1
1. T CODES FOR SWITCH ACTIVATION .....	8-1
1-1. T82 (Tank Drain Close) T83 (Tank Drain Open) .....	8-1
1-2. T84 (Tank Fill ON) T85 (Tank Fill OFF) .....	8-1
1-3. T86 (Flushing ON) T87 (Flushing OFF) .....	8-1
1-4. T90 (Small-diameter Hole Flushing ON) T91 (Small-diameter Hole Flushing OFF) (Option) .....	8-1
2. T CODES FOR ELECTRODE CHANGE USING ATC (OPTION) .....	8-2
3. NC CODES THAT HANDLE ELECTRODE OFFSET DATA .....	8-4
CHAPTER 9 M CODES .....	9-1
1. LIST OF M CODES .....	9-1
2. M00 (PROGRAM STOP) .....	9-2
3. M01 (OPTIONAL PROGRAM STOP) .....	9-2
4. M02 (END OF PROGRAM) .....	9-2
5. M03 (UNFORESEEN ACCIDENT SUPPORT CODE) .....	9-2
6. M04 (MACHINING START POSITION RETURN) .....	9-3
7. M05 (ST CANCEL) .....	9-3
8. M06 (NO DISCHARGE) .....	9-3
9. M07, M08, M09 .....	9-3
10. M32, M42 .....	9-3
11. M33, M43 .....	9-4
12. M98 (SUBPROGRAM CALL) .....	9-4
13. M99 (END OF SUBPROGRAM) .....	9-4
14. M199 (TERMINATION OF Q FILE EXECUTION) .....	9-4
15. M-CODE JUMP .....	9-5
16. M780, M790 (OPTION) .....	9-6
CHAPTER 10 C CODES .....	10-1

# TABLE OF CONTENTS

---

	<u>PAGE</u>
CHAPTER 11 FLAG CODES .....	11-1
1. USE OF FLAG CODES .....	11-1
2. FLAG 0 (M03 PATTERN) .....	11-1
3. FLAG 1 (PERMISSIBLE ERROR BETWEEN START/END POINT RADII) .....	11-2
4. FLAG 2 (OPTIONAL STOP ON/OFF) .....	11-4
5. FLAG 3 (MACHINING SHAPE SCALE) .....	11-4
6. FLAG 4 (DRY RUN PATTERN) .....	11-5
7. FLAG 5 (AUTOMATIC POWER OFF) .....	11-5
8. FLAG 6 (STROKE CHECK) .....	11-6
CHAPTER 12 OTHER CODES .....	12-1
1. F CODES .....	12-1
2. S CODES .....	12-1
3. B CODES (OPTION) .....	12-2
4. NC CODES THAT CHANGE SETTING DATA .....	12-3
CHAPTER 13 LORAN FUNCTION .....	13-1
1. LORAN TYPES .....	13-1
2. PARAMETERS FOR LORAN OPERATION .....	13-6
3. MACHINING CONDITION TABLE .....	13-15
3-1. Machining Condition Table for LNS .....	13-15
3-2. Machining Condition Table for LNM .....	13-16
3-3. Machining Condition Table for LP .....	13-17
4. FUNCTIONS .....	13-18
4-1. Standard Loran .....	13-18
4-1-1. Standard Loran (Six Loran Patterns) .....	13-18
4-1-2. Quadrant Loran .....	13-22
4-1-3. Polygon Loran .....	13-25
4-1-4. Equal-angle Radiation Loran .....	13-26
4-2. Solid-form Loran .....	13-27
4-2-1. Sharp Loran Pattern .....	13-39
4-2-2. Taper Loran Pattern .....	13-41
4-2-3. Sphere Loran Pattern .....	13-44
4-3. Random Loran Pattern .....	13-45
4-4. Loran Rotation Function .....	13-46
4-4-1. Rotating the Loran Pattern .....	13-46
4-5. Inputting the STEP Data for Individual Axes .....	13-50
4-6. Loran Operation on the Plane Right-angled to the Servo-controlled Axis .....	13-51
4-7. Relationship between Loran and AJC .....	13-53

# TABLE OF CONTENTS

	<u>PAGE</u>
5. LORAN DATA SETTING .....	13-54
CHAPTER 14 SUBPROGRAMS .....	14-1
1. HOW TO USE SUBPROGRAMS .....	14-1
2. SPECIAL APPLICATIONS WHEN RETURNING FROM A SUBPROGRAM TO THE MAIN PROGRAM .....	14-3
3. SETTINGS RELATING TO SUBPROGRAMS .....	14-4
4. SEARCHING ORDER .....	14-5
CHAPTER 15 ELECTRODE RADIUS OFFSET .....	15-1
1. OUTLINE .....	15-1
2. OFFSET AMOUNT .....	15-2
3. START-UP OF THE OFFSET MODE .....	15-3
4. CANCELING THE OFFSET MODE .....	15-3
5. OFFSET PATH .....	15-4
5-1. Straight Line – Straight Line .....	15-4
5-2. Straight Line – Arc (or Arc – Straight Line) .....	15-6
5-3. Arc – Arc .....	15-7
6. OFFSET CHANGES .....	15-9
6-1. Straight Line – Straight Line .....	15-9
6-2. Straight Line – Arc (Arc – Straight Line) .....	15-10
6-3. Arc – Arc .....	15-11
6-4. Examples of Programs Containing Offset Code Change Blocks .....	15-12
6-5. Notes on Changing the Amount of Offset .....	15-14
6-6. G00 Offset Mode Cancel .....	15-15
7. NOTES IN PROGRAMMING .....	15-16
7-1. Changing the Direction of Offset on a Full-circle Path .....	15-16
7-2. Changing the Offset Amount on a Straight Line Path .....	15-17
7-3. Axis Movements in Offset Mode .....	15-18
7-4. Codes that Cancel Offset Temporarily .....	15-18
CHAPTER 16 CORNER ROUNDING (CORNER R) FUNCTION .....	16-1
1. OUTLINE .....	16-1
2. CODES .....	16-2
3. CORNER R CONDITIONS .....	16-2
4. CORNER R OPERATION EXAMPLES .....	16-2
5. NOTES IN PROGRAMMING .....	16-3

# TABLE OF CONTENTS

---

	<u>PAGE</u>
CHAPTER 17 INTERFERENCE CHECK .....	17-1
1. OUTLINE .....	17-1
2. G CODES .....	17-1
3. EXAMPLE PROGRAM .....	17-2
4. NOTES IN PROGRAMMING .....	17-6
CHAPTER 18 FIGURE ROTATION .....	18-1
1. OUTLINE .....	18-1
2. CODES .....	18-1
3. EXECUTING FIGURE ROTATION .....	18-2
4. SETTING THE ANGLE OF ROTATION .....	18-2
5. SETTING THE COORDINATES FOR THE CENTER OF FIGURE ROTATION ....	18-3
6. EXAMPLE PROGRAM .....	18-3
7. NOTES IN PROGRAMMING .....	18-4
CHAPTER 19 M03 FUNCTION .....	19-1
1. OUTLINE .....	19-1
2. CONFIRMING THE STATUS AT OCCURRENCE OF M03 SEARCH .....	19-3
3. M CODE IGNORED DURING M03 SEARCH .....	19-4
CHAPTER 20 HOW TO USE SOFTWARE LIMITS .....	20-1
1. SOFTWARE LIMIT ON/OFF G CODES .....	20-1
2. CHANGING THE SOFTWARE LIMIT RANGE .....	20-1
3. INPUTTING SOFTWARE LIMIT VALUES .....	20-2
CHAPTER 21 Q COMMANDS .....	21-1
1. OUTLINE .....	21-1
2. CODES .....	21-1
3. METHOD FOR RETURNING FROM A Q FILE .....	21-2
4. ERROR MESSAGES .....	21-2
5. METHOD FOR SPECIFYING A FILE NAME FOR A Q COMMAND WITH AN OFFSET TERM .....	21-2
6. EXAMPLE PROGRAM .....	21-3
7. FUNCTION FOR PROGRAM EXECUTION FROM SEQUENCE NUMBER SPECIFIED IN Q COMMAND .....	21-4

# TABLE OF CONTENTS

	PAGE
CHAPTER 22 CALCULATIONS .....	22-1
1. OUTLINE .....	22-1
2. TYPES OF CALCULATION .....	22-1
3. ORDER OF PRIORITY FOR CALCULATIONS .....	22-2
4. FORMAT FOR EXPRESSIONS .....	22-2
5. UNIT SYSTEM FOR CALCULATIONS .....	22-2
6. ARITHMETIC OPERATIONS ON TIME DATA .....	22-4
7. FACTORS THAT INFLUENCE THE RESULTS OF CALCULATIONS .....	22-5
8. ERRORS RELATING TO CALCULATIONS .....	22-6
9. NOTES IN PROGRAMMING .....	22-6
CHAPTER 23 USER MACRO FUNCTION .....	23-1
1. OUTLINE .....	23-1
2. TYPES OF MACRO COMMAND .....	23-1
2-1. Assignment Statements .....	23-1
2-2. IF Statements .....	23-2
2-3. JUMP Statements .....	23-2
2-4. KEYIN Statements .....	23-3
2-5. CRT Statements .....	23-3
CHAPTER 24 COORDINATE ROTATION .....	24-1
1. OUTLINE .....	24-1
2. CODES .....	24-1
3. EXECUTING COORDINATE ROTATION .....	24-1
4. SETTING THE ANGLE OF ROTATION .....	24-2
5. COORDINATES FOR THE CENTER OF COORDINATE ROTATION .....	24-2
6. PRESENT POSITION DISPLAY IN THE ROTATED COORDINATE SYSTEM .....	24-3
7. NOTES IN PROGRAMMING .....	24-4
CHAPTER 25 CORNER CHAMFERING FUNCTION .....	25-1
1. OUTLINE .....	25-1
CHAPTER 26 COMBINING X-/Y-AXIS MIRROR IMAGE, X-Y EXCHANGE AND FIGURE ROTATION .....	26-1
1. OUTLINE .....	26-1
2. CODES .....	26-1

# TABLE OF CONTENTS

	<u>PAGE</u>
3. X-/Y-AXIS MIRROR IMAGE .....	26-2
3-1. Mirror Image .....	26-2
3-2. Executing the Mirror Image Function .....	26-3
3-2-1. Execution in NC Program .....	26-3
3-2-2. Execution in Manual Operation .....	26-3
4. X-Y CHANGE .....	26-4
4-1. X-Y Exchanged Image .....	26-4
4-2. Executing the X-Y Exchange Function .....	26-4
4-2-1. Execution in NC Program .....	26-4
4-2-2. Execution in Manual Operation .....	26-4
5. COMBINING X-/Y-AXIS MIRROR IMAGE AND X-Y EXCHANGE FUNCTIONS ..	26-5
5-1. Executing X-/Y-axis Mirror Image and X-Y Exchange Functions .....	26-5
5-1-1. Execution in NC Program .....	26-5
5-1-2. Execution in Manual Operation .....	26-5
5-2. Executing Order of the Mirror Image and X-Y Exchange Functions .....	26-6
5-3. Combining X-/Y-axis Mirror Image and X-Y Exchange Functions .....	26-6
5-3-1. When the NC setting items "MIRR SWAP REVERSE 1/2" = OFF: .....	26-6
5-3-2. When the NC setting items "MIRR SWAP REVERSE 1/2" = ON: .....	26-7
6. COMBINING THE FIGURE ROTATION FUNCTION .....	26-8
6-1. Executing the Mirror Image Function .....	26-8
6-1-1. Execution in NC Program .....	26-8
6-1-2. Execution in Manual Operation .....	26-8
6-2. Executing Order .....	26-9
6-3. Combining the Mirror Image and Figure Rotation Functions .....	26-9
6-3-1. When Executing Mirror Image → Figure Rotation: .....	26-9
6-3-2. When Executing Figure Rotation → Mirror Image: .....	26-11
6-4. Combining the X-Y Exchange and Figure Rotation Functions .....	26-12
6-4-1. When Executing X-Y Exchange → Figure Rotation: .....	26-12
6-4-2. When Executing Figure Rotation → X-Y Exchange: .....	26-13
6-5. Combining the Mirror Image, X-Y Exchange and Figure Rotation Functions .....	26-14
6-5-1. When the NC Setting Items "MIRR SWAP REVERSE 1/2" = OFF: .....	26-14
6-5-2. When the NC Setting Items "MIRR SWAP REVERSE 1/2" = ON: .....	26-16
CHAPTER 27 INITIAL SETTINGS OF G CODES AND T CODES .....	27-1
CHAPTER 28 OPERATION STATUS DURING/AFTER M00 (M01) PROGRAM STOP .....	28-1

# TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER 29 CONTACT DETECTION .....	29-1
1. STOP PATTERNS BY CONTACT DETECTION .....	29-1
2. SETTING FOR CONTACT DETECTION .....	29-2
3. ERROR MESSAGES RELATED TO CONTACT DETECTION .....	29-3
CHAPTER 30 ACON FUNCTION .....	30-1
1. OUTLINE .....	30-1
1-1. Shapes Suitable for ACON Machining .....	30-2
2. CODES .....	30-3
3. EXAMPLE PROGRAM .....	30-5
4. NC SETTING ITEMS RELATED TO ACON FUNCTION .....	30-6
5. NOTES IN PROGRAMMING .....	30-9
CHAPTER 31 NC SETTING ITEMS CLOSELY RELATED TO CODES .....	31-1
1. FLAG DATA .....	31-1
2. ACTION DATA .....	31-3
CHAPTER 32 MESSAGES .....	32-1
1. OUTLINE .....	32-1
2. ERROR MESSAGES .....	32-4
3. HALT MESSAGES .....	32-69
4. COMMENT MESSAGES .....	32-102
CHAPTER 33 TO USERS OF MARK20 SERIES AND NF SERIES POWER SUPPLY .....	33-1