


GILDEMEISTER

Drehmaschinen GmbH

CTX 410
Fanuc 21i-TB

Operating instructions

Operating and maintenance instructions
for machine and controls of the CNC lathe.

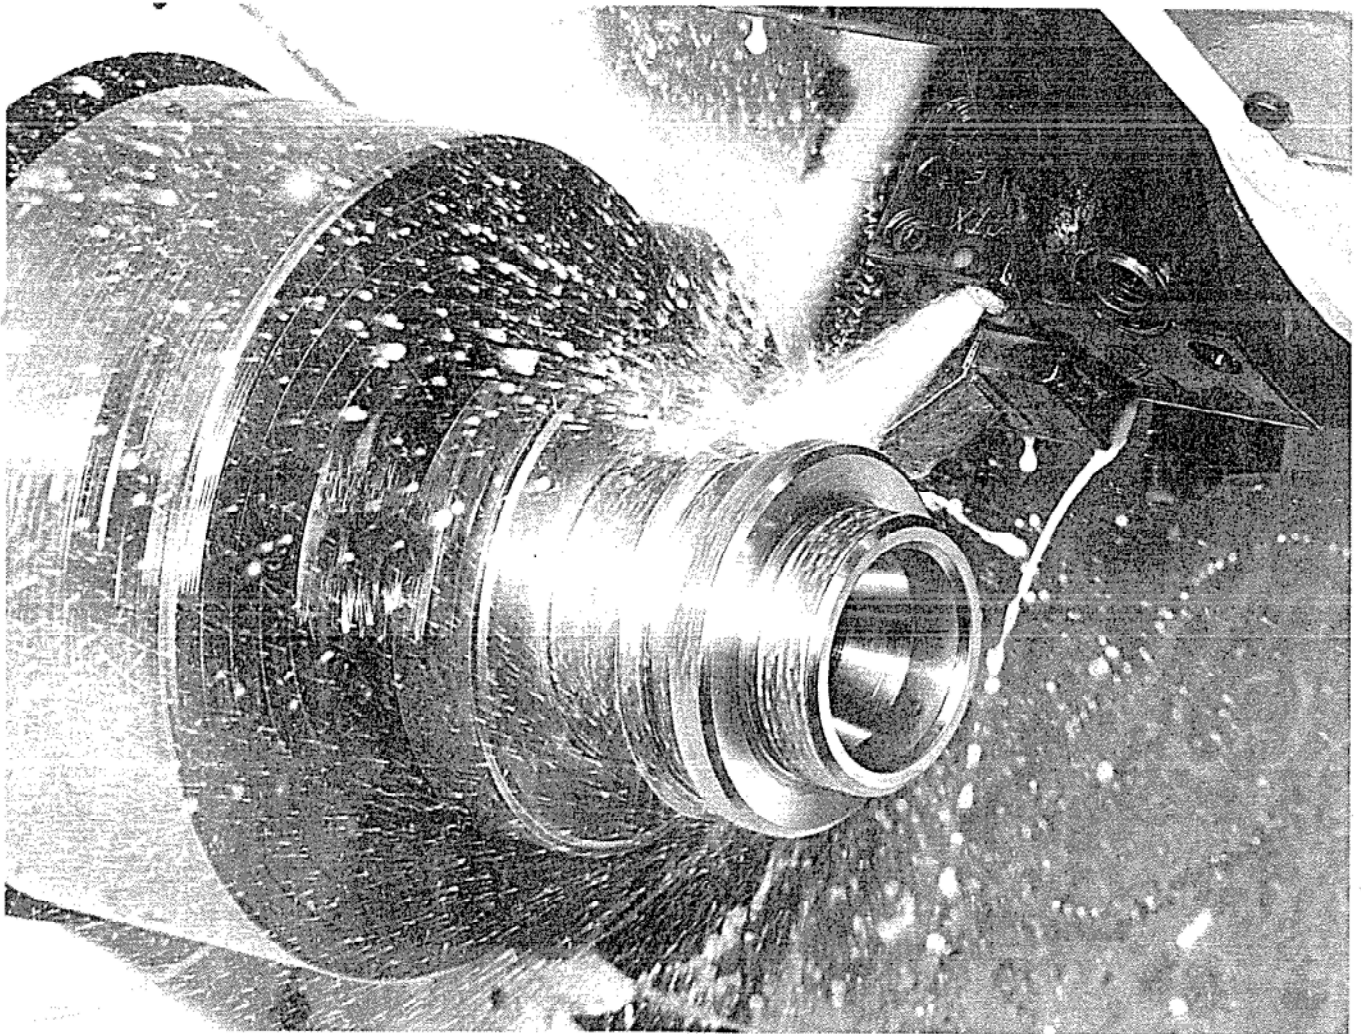

GILDEMEISTER Drehmaschinen GmbH
Gildemeisterstraße 60
D-33689 Bielefeld

Telephone: (0 52 05) 74-0
Telefax service: (0 52 05) 74-39 64

Operating instructions CTX 410 Fanuc 21i TB

Safety regulations and table of contents	1
Information concerning these instructions	2
At the last minute	3
Description of the machine and technical data	4
Brief instructions for the machine operator	5
Machine operating elements and controls	6
Setting, make ready and operation	7
Polling and processing a program	8
Interface description	9
Maintenance and care	10
Parameter setting, M com- mands, standard cycles and PLC fault messages	11
	12

S

safety regulations and list of contents

1

Table of contents

1	Safety regulations and precautionary measures	1-3
1.1	Safety regulations and precautionary measures	1-3
1.1.1	Intended use	1-4
1.1.1.1	Not permissible are ...	1-5
1.1.1.2	Machining with coolant lubricants, oil content of > 15%	1-6
1.1.1.3	Machining explosive material	1-6
1.1.2	Symbol and information explanation	1-7
1.1.3	General safety instructions	1-8
1.1.3.1	Fixed or moving safety devices, guards	1-8
1.1.3.2	Pressure vessel (hydraulic accumulator)	1-8
1.1.3.3	Oil, lubricant and coolant	1-9
1.1.3.4	Emissions	1-9
1.1.4	General safety measures	1-10
1.1.5	Accident, fire	1-11
1.1.6	PC window	1-12
1.1.7	Operation	1-13
1.1.7.1	General	1-14
1.1.7.2	Workpiece machining	1-15
1.1.7.3	Rotational speed limitation for clamping means	1-17
1.1.7.4	Chip conveyor	1-17
1.1.8	Maintenance and care	1-18
1.1.9	Checking the safety systems	1-18
1.1.10	Repair	1-19
1.1.11	Shut-down, putting out of operation, disposal	1-20

1.1.12	What to do in an EMERGENCY	1-21
1.1.12.1	What to do in the case of an accident	1-21
1.1.12.2	What to do in the case of a fire	1-22
1.1.13	Warranty	1-23
1.1.14	Conformity declaration	1-23
1.2	Safety instructions, synchronous motors resp. linear modules	1-24
1.2.1	General application information	1-24
1.2.2	General regulations	1-26
1.2.3	Behaviour and immediate measures in the event of ACCIDENTS	1-27
1.2.4	Start-up of synchronous linear axes	1-27
1.2.5	Operating instructions	1-27
1.2.6	Installation instructions, dismantling and repair	1-28
1.2.7	Maintenance instructions	1-29
1.2.8	Discharge of synchronous motor components	1-29
1.2.9	Storage and transport instructions	1-30
1.3	Safety Integrated (only for GMX machines)	1-31
1.3.1	General information	1-31
1.3.2	Safety Integrated acceptance log	1-32
2	Information concerning these instructions	2-3
2.1	Who are these instructions intended for?	2-4
2.2	What is included in these instructions?	2-4
2.3	Where to find information not contained in these instructions?	2-5
2.4	Notes	2-7
2.5	Symbol and information explanation	2-7
3	At the last minute	3-3
4	Description of the machine and technical data	4-3
4.1	Description of the machine	4-3
4.1.1	Concept of the CTX 410 linear with Fanuc-Control	4-3
4.1.2	Machine assembly groups	4-4
4.1.3	Optional modules	4-6
4.1.4	Operation of the machine in accordance with its intended use	4-9
4.1.5	Warning against misuse	4-10

4.2	Safety devices	4-11
4.2.1	Access authorisation	4-11
4.2.2	Emergency stop cut-out.....	4-11
4.2.3	Agreement button	4-12
4.2.4	Isolating protection devices around the working space.....	4-12
4.2.5	Rotational speed control.....	4-13
4.2.6	Workpiece clamping	4-13
4.2.7	Tailstock	4-14
4.2.8	Steady rest	4-14
4.2.9	Hydraulics.....	4-14
4.2.10	Safety devices for setting and maintenance spaces.....	4-15
4.2.11	Noise protection.....	4-15
4.2.12	Emission.....	4-15
4.2.13	Chip conveyor.....	4-15
4.3	Lubricants and coolants	4-16
4.3.1	Lubricant filling quantities	4-16
4.3.2	Bar feeding unit (option) filling quantities.....	4-16
4.3.3	Lubricant table.....	4-17
4.3.4	Coolant lubricant filling quantity.....	4-18
4.3.5	Handling lubricants and coolants.....	4-19
4.4	Technical data	4-20
4.4.1	Technical data for machines with a tailstock.....	4-20
4.5	Performance data.....	4-22
4.5.1	Main spindle	4-22
4.5.2	Driven tool	4-23
4.5.3	Loading diagram for lathe centre.....	4-24
4.6	Working space.....	4-25
4.6.1	Machine with tailstock.....	4-26
4.6.2	Tool disc	4-27
4.7	Clamping devices	4-28
4.7.1	Chucking unit with partially open centre	4-28
4.7.2	Open centre clamping unit.....	4-29
4.8	Clamping means connection dimensions	4-30
5	Brief instructions for the machine operator	5-3
5.1	Starting the machine	5-3
5.2	Stopping the machine.....	5-4
5.3	Workpiece change.....	5-4
5.4	EMERGENCY STOP cut-out	5-4

6	Machine operating elements and controls.....	6-2
6.1	Machine operating elements	6-2
6.2	Operating panel.....	6-8
6.2.1	Functions in the operating modes	6-8
6.2.2	Key switch	6-8
6.2.3	General edit.....	6-13
6.2.3	Menu selection	6-15
6.2.3	Machine function keys.....	6-17
7	Setting, make ready and operation.....	7-3
7.1	Switching the machine on and off	7-3
7.1.1	Switching on the machine.....	7-3
7.1.2	Switching off the machine.....	7-5
7.1.3	EMERGENCY STOP cut-out.....	7-6
7.2	Setting and make ready	7-7
7.2.1	A review of the work sequence.....	7-7
7.2.1.1	Switch on collision monitoring.....	7-8
7.2.1.2	Coordinate system.....	7-8
7.3	Spindle locking	7-9
7.3.1	Spindle locking without C axis.....	7-9
7.3.2	Spindle clamping with C axis.....	7-10
7.3.3	Spindle clamping, hydraulically in the NC program.....	7-11
7.4	A review of the clamping device	7-13
7.5	Fitting and removing the clamping means.....	7-15
7.5.1	Removing the clamping means	7-16
7.5.2	Clamping head change device	7-17
7.5.3	Fitting the clamping means.....	7-18
7.6	Checking and setting the clamping force	7-20
7.6.1	Set clamping parameters.....	7-20
7.6.1.1	Select parameter input.....	7-21
7.6.1.2	Enter parameter data.....	7-21
7.6.1.3	End parameter entry	7-22
7.6.2	Clamping release time (release time for reclamping).....	7-22
7.7	Clamping stroke setting.....	7-23
7.7.1	Clamping stroke adjustment by teaching.....	7-23
7.7.2	Clamping stroke adjustment manual	7-23
7.8	Check and set clamping pressure	7-28
7.9	Rotational speed limitation	7-29
7.9.1	Rotational speed limitation setting.....	7-29

7.10	Tool holder	7-30
7.10.1	Loading the tool holder	7-30
7.10.2	Swivel tool holder in the MDI mode	7-32
7.10.2.1	Invoking a tool (standard)	7-32
7.10.2.2	Tool compensation deselection.....	7-32
7.11	Driven tools	7-33
7.11.1	Jog mode of the driven tools	7-33
7.11.2	Swing in driven tools and start directly	7-34
7.11.3	Stop driven tools directly	7-34
7.12	Tailstock	7-35
7.12.1	Tailstock setting.....	7-35
7.12.1.1	Setting the tailstock position via teaching.....	7-37
7.12.1.2	Manually adjust tailstock positions.....	7-38
7.12.1.3	Determine tailstock position by dimension entry.....	7-40
7.12.1.4	Tailstock adjustment.....	7-40
7.12.1.5	Move to tailstock reference point.....	7-42
7.13	Automatic protection hood (option)	7-43
7.13.1	Function description and "calibration run" (Test run).....	7-43
7.13.2	Operation.....	7-44
7.14	Triple control lamp (option).....	7-44
7.15	Tool measuring device (option)	7-45
7.15.1	Swinging in the measuring probes	7-46
7.15.2	Swinging out the measuring probe	7-46
7.15.3	Measuring tools using a measuring probe.....	7-47
7.16	Pick-off device (option).....	7-49
7.16.1	Pick-off device setting.....	7-50
7.16.2	Access of the pick-off device via the PC program	7-51
8	Polling and processing a program	8-3
8.1	Review.....	8-3
8.2	Select program for editing	8-3
8.2.1	Selecting programs for editing.....	8-3
8.3	Automatic machining of a workpiece	8-4
8.4	Compensate for tool wear	8-4
8.5	Data input, data output	8-5

9	Interface description	9-3
9.1	Serial interface for program transfer.....	9-4
9.2	Gildemeister interface for bar machining.....	9-5
9.2.1	Safety information.....	9-5
9.2.2	Prerequisites for safe operation via outlet 1	9-5
9.2.3	Introduction, general description	9-7
9.2.3.1	Signal division, plugs, supply and safety signals.....	9-8
9.2.3.2	Signal division, plug, signal exchange.....	9-9
9.2.4	Interface design.....	9-10
9.2.4.1	Design of the interfaces: Supply / safety signals outlet 1 and signal exchange outlet 2	9-10
9.2.5	Signal description of the bar pusher	9-11
9.2.6	Signal explanation	9-12
9.2.6.1	Outlet, supply and safety signals.....	9-12
9.2.6.2	Signal exchange outlet	9-14
9.2.7	Operation and M functions	9-20
10	Maintenance and care	10-3
10.1	Maintenance instructions.....	10-3
10.2	Checks prior to starting work.....	10-5
10.3	Work to be carried out at shift end	10-6
10.4	Maintenance plan	10-7
10.5	Maintenance work	10-8
10.6	PC safety window.....	10-22
11	Parameter setting, M commands, standard cycles, fault messages.....	11-3
11.1	Parameter settings	11-3
11.2	Passwords.....	11-5
11.2.1	Purpose of passwords.....	11-5
11.2.2	Invoking a password.....	11-5
11.2.3	Description of the passwords	11-6
11.2.4	Changing a password.....	11-7
11.2.4.1	Changing from a higher to a lower password level	11-7
11.2.4.2	Changing from a lower to a higher password level	11-7
11.2.5	Changing a current password level	11-8
11.3	Description of the M commands.....	11-9
11.3.1	Program functions	11-9
11.4	Fault messages	11-15

11.5	Variables	11-51
11.6	Clamping unit hydraulic pressure loss.....	11-53
11.6.1	At machine operating temperature	11-54
11.6.2	Machine cold	11-56
11.6.3	At minimum (10 bar) (145 psi) or max. clamping pressure	11-57
11.6.4	With simultaneous activation of other hydraulic consumers.....	11-58
11.6.5	Setting instructions for slaved pressure reduction valves.....	11-59
11.6.5.1	No pressure monitoring signal when clamping a workpiece.....	11-59
11.6.5.2	A pressure monitoring signal appears prior to performance of a movement.....	11-60
11.6.5.3	Fitting / removing the cylinder lock	11-61