


OSP5000L CNC SYSTEM FOR LC CNC LATHE

PROGRAMMING MANUAL

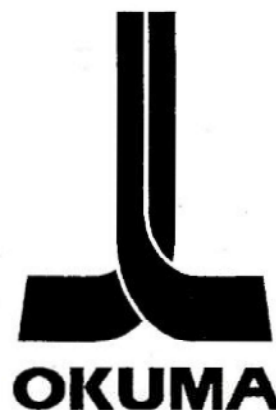

PROGRAMMING

Publication NO.: 2134-E

TABLE OF CONTENTS

	Page
SECTION 1 BEFORE YOU BEGIN PROGRAMMING	1
1-1 Coordinate System	2
1-2 Reference Point	4
1-3 Programming Zero	5
1-4 Dimension Words	5
1-5 Turret Selection on Two-Turret Model	7
1-6 Tool Selection (T-Function)	8
1-7 Spindle Speed Selection	11
1-8 Spindle Rotation Direction Selection	18
1-9 Tape Format	19
1-10 Determining Cutting Conditions	25
1-11 Programming Codes and Word Format (1 mm Tape Input Unit System)	26
1-12 Programming Format	36
SECTION 2 SIMPLE PROGRAMMING	38
2-1 Positioning (G00)	39
2-2 Straight Line Cutting (G01)	40
2-3 Taper Cutting (G01)	42
2-4 Arc Cutting (G02/G03)	44
2-5 Thread Cutting (Straight, Constant Lead Thread) (G33)	48
SECTION 3 APPLICATION PROGRAM	50
3-1 Programming Special Threads	50
3-2 Precautions for Programming Thread Cutting Cycles	55
3-3 Programming Constant Speed Cutting Operation	58
3-4 Incremental Programming	60
3-5 Supplement	60
SECTION 4 PROGRAMMING EXAMPLE	64
4-1 Example Workpiece	64
4-2 Tooling	64
4-3 Machine	64
4-4 Program Process Sheet	65
SECTION 5 PROGRAMMING TAKING TOOL NOSE RADIUS INTO CONSIDERATION	67
5-1 Programming Example for Taper Cutting	69
5-2 Programming Example for Arc Cutting	70
5-3 Programming Examples with Tool Nose Radius Compensation	72
5-4 General Programming Procedure for Circular Interpolation	73

	Page
SECTION 6 PROGRAMMING FOR SIMULTANEOUS 4-AXIS CUTS	75
6-1 Programming Format	75
6-2 Precautions for Programming Simultaneous 4-Axis Cuts	77
6-3 Programming Example	79
SECTION 7 CHUCK BARRIER FUNCTION	81
7-1 General Description	81
7-2 Establishing Barrier	81
7-3 Tool Movements and Alarm	82
7-4 Precautions	82
SECTION 8 DROOP CONTROL	83
SECTION 9 MM/MM. MODE FEEDRATE COMMAND	84
SECTION 10 ZERO SET BY G CODE	85
SECTION 11 TAPER ANGLE/ARC RADIUS DIRECT COMMAND	86
11-1 General Description	86
11-2 Direct Taper Angle Command	86
11-3 Direct Arc Radius Command	87
SECTION 12 AUTOMATIC CHAMFERING	89
12-1 General Description	89
12-2 45 Deg. Chamfering (G75)	89
12-3 Rounding (G76)	91
SECTION 13 COMPOUND FIXED CYCLE (SPECIAL FIXED CYCLE)	93
13-1 General Description	93
13-2 Thread Cutting Compound Cycle (G71/72)	94
13-3 Grooving/Drilling Compound Fixed Cycle (G73/74)	105
13-4 Application of Compound Fixed Cycle	109
SECTION 14 LATHE AUTO-PROGRAMMING FUNCTION (LAP)	111
14-1 General Description	111
14-2 Classification of Functions	112
14-3 Program Format	114
14-4 Execution Mode of LAP	117
14-5 Explanation of LAP Functions and Program	122
14-6 Precautions	147
14-7 Application of LAP Functions	148

	Page
SECTION 15 TOOL NOSE RADIUS COMPENSATION FUNCTION	150
15-1 Outline	150
15-2 Application of programming	160
SECTION 16 USER TASK 1	186
16-1 Outline of User Task Function	186
16-2 Fundamental Functions of User Task	187
16-3 Program Example	193
16-4 Comparison of User Task 1 and User Task 2	195
SECTION 17 USER TASK 2	196
17-1 Outline of User Task	196
17-2 Types of User Task Function	198
17-3 Fundamental Functions of User Task	199
17-4 Program Examples	221
17-5 Supplements	225
SECTION 18 GRAPHICS CRT DISPLAY	230
18-1 Outline	230
18-2 Operation and Commands	230
18-3 High Speed Tool Paths Plotting Mode	232
SECTION 19 TAPE CONVERSION FUNCTION (OSP3000L → OSP5000L)	233
19-1 Outline	233
19-2 Operation	233
19-3 Contents of Conversion	235
SECTION 20 TAILSTOCK SPINDLE ADVANCE/RETRACT FUNCTION	241
20-1 M Codes	241
20-2 Alarm	241

SPECIAL FUNCTION

Publication NO.: 2165-E

TABLE OF CONTENTS

	Page
SECTION 1 SPARE AIR BLOWER FUNCTION	1
1-1 M Codes	1
1-2 Remarks	1
SECTION 2 PROGRAMMABLE TAILSTOCK POSITIONING FUNCTION (Tow-Along system)	2
2-1 Outline	2
2-2 Setting Initial Position	3
2-3 Manual Positioning of Tailstock Body	4
2-4 Tailstock Positioning by Programmed Commands	5
2-5 Parameter Setting	7
2-6 Alarm Message	8
SECTION 3 LOADER INTERLOCK FUNCTION	11
3-1 M Codes	11
3-2 Description of Loader Control Switch	11
3-3 Alarm	11
SECTION 4 SENSOR HEAD ADVANCE/RETRACT	12
4-1 M Codes	12
4-2 Alarm	12
4-3 Operation of Sensor Head Movement—Advance/Retraction	13
SECTION 5 SPINDLE ORIENTATION	14
5-1 Outline	14
5-2 Programming Format	14
5-3 Data Setting	16
5-4 M19 Command Programmed while Spindle is at a Still	17
5-5 Remarks	18
SECTION 6 TOOL GAUGING SYSTEM	19
6-1 Outline	19
6-2 Data Setting	20
6-3 Automatic Tool Offset Calculation by Manually Feeding Tool	22
SECTION 7 TOOL LIFE MANAGEMENT	24
7-1 Outline	24
7-2 Setting Tool Life Data and Data Display	25
7-3 Programming	33
7-4 Selecting Tool Life Judgement Method	35
7-5 When Spare Tools Are All Used Up	36
7-6 Alarm	36

	Page
SECTION 8 THRUST MONITORING (OVERLOAD DETECTING) FUNCTION	37
8-1 Outline	37
8-2 Setting Monitor Range	37
8-3 Setting Detection Time	38
8-4 Alarm	38
SECTION 9 NC CYCLE START DISABLING FUNCTION BY RESET COUNTER	39
9-1 Outline	39
SECTION 10 DEACTIVATION OF CHUCK OPEN/CLOSE INTERLOCK BY M CODES	40
10-1 Outline	40
10-2 M Codes	40
SECTION 11 ROBOT INTERLOCK FUNCTION	41
11-1 Outline	41
11-2 M Codes	41
11-3 Alarm	41
SECTION 12 CHUCK HIGH/LOW PRESSURE SELECTION	42
12-1 Outline	42
12-2 M Codes	42
SECTION 13 TAILSTOCK SPINDLE HIGH/LOW THRUST SELECTION	43
13-1 Outline	43
13-2 M Codes	43
SECTION 14 AUTOMATIC FRONT DOOR OPEN/CLOSE FUNCTION	44
14-1 Outline	44
14-2 M Codes	44
SECTION 15 FRONT DOOR INTERLOCK	45
15-1 Outline	45
15-2 Description of Operation	45
15-3 Alarm	45
SECTION 16 UNLOADER ADVANCE/RETRACT	46
16-1 M Codes	46

	Page
SECTION 17 STATUS INDICATOR LIGHTS	47
17-1 Cycle End Indicator Light	47
17-2 Alarm Indicator Light	47
SECTION 18 WORK REST CLAMP/UNCLAMP, AND ADVANCE/ RETRACT	48
18-1 M Codes	48
SECTION 19 BAR FEEDER INTERLOCK FUNCTION	49
19-1 M Codes	49
19-2 Top-Cut	49
19-3 Example of Program	49
19-4 Alarm	49
19-5 Automatic Continuous Operation	50
SECTION 20 CYCLE TIME REDUCTION FUNCTION	51