

AUTO MILLER
MHA 3 5 0 P

MAINTENANCE INSTRUCTION MANUAL

MAINTENANCE CONTENTS

1. Construction of the Machine	1~3
1.1 Schematic Layout of Gears	1
1.2 List of Bearings	2
1.3 Distribution Diagram of Lubricant	3
2. Adjustment of the Machine	4~10
2.1 Adjustment of Each Axis Taper Gib	4~5
2.2 Adjustment of Dog in X, Y, Z Axes	6
2.3 Adjustment of Dog for Zero Return	7~9
2.4 Pre-tension and Running-in of Ball Screw	10
3. Cleaning of Each Part of the Machine	11
3.1 Cleaning of Wiper	11
3.2 Abandonment of Waste Oil	11
4. Hydraulic Fluid, Lubricants	12~28
4.1 Instructions for Lubrication	13
4.2 Lubricating Oil List	14
4.3 Spindle Head Lubricating Oil System	15~17
4.4 Automatic Lubricator	18~24
4.5 Coolant Apparatus	25~27
4.6 Cleaning of Spindle Head Balance Chain	28
5. Maintenance and Inspection of the Machine	29~31
5.1 Portions of Maintenance and Inspection and Check List	30
5.2 List of Service Parts	31
6. Pneumatic Instruments (Automatic Speed change type only)	32~43
6.1 Pneumatic Instruments	32~33
6.2 Automatic Speed Changer / Pneumatic Circuit Diagrams	34
6.3 List of Pneumatic Instruments	35
7. Instruction Manual for Filter Regulators	36~43
8. Special Attachment (Only optional specifications)	44~45
8.1 Attachment Mounting Method	44
8.2 Attachment Removal Method	44
8.3 Attachment Running-in	44
8.4 Lubricating Oil for Gear Within Attachment	45