

PROGRAMMING MANUAL

for

MAZATROL T PLUS

- MAZATROL -

(3-axis specification)

Manual No. : H732PA0045E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

	Page
1. MAZATROL PROGRAM CONFIGURATION	1-1
2. PROGRAM COORDINATE SYSTEM	2-1
3. PROGRAM CREATION	3-1
3-1 Common Process	3-6
3-1-1 Setting process data (common data)	3-6
3-2 Materials Shape Process (MTR)	3-9
3-2-1 Setting process data	3-9
3-2-2 Setting sequence data	3-10
3-3 Bar-Materials Machining Process (BAR)	3-13
3-3-1 Setting process data	3-13
3-3-2 Setting sequence data	3-18
3-4 Copy-Machining Process (CPY)	3-23
3-4-1 Setting process data	3-23
3-4-2 Setting sequence data	3-25
3-5 Corner-Machining Process (CNR)	3-25
3-5-1 Setting process data	3-26
3-5-2 Setting sequence data	3-27
3-6 Edge-Machining Process (EDG)	3-28
3-6-1 Setting process data	3-28
3-6-2 Setting sequence data	3-29
3-7 Threading Process (THR)	3-30
3-7-1 Setting process data	3-30
3-7-2 Setting sequence data	3-35
3-8 Grooving Process (GRV)	3-37
3-8-1 Setting process data	3-37
3-8-2 Setting sequence data	3-42
3-9 Drilling Process (DRL)	3-46
3-9-1 Setting process data	3-46
3-9-2 Setting sequence data	3-50
3-10 Tapping Process (TAP)	3-52
3-10-1 Setting process data	3-52
3-10-2 Setting sequence data	3-55
3-11 Manual Program Machining Process (MNP)	3-56
3-11-1 Setting process data	3-56
3-11-2 Setting sequence data	3-58
3-12 Mill-Drilling Process (MDR)	3-63
3-12-1 Setting process data	3-63
3-12-2 Setting sequence data	3-67

3-13	Mill-Tapping Process (MTP)	3-72
3-13-1	Setting process data	3-72
3-13-2	Setting sequence data	3-74
3-14	Boring Process (BOR)	3-75
3-14-1	Setting process data	3-75
3-14-2	Setting sequence data	3-78
3-15	Mill-Grooving Process (MGV)	3-79
3-15-1	Setting process data	3-79
3-15-2	Setting sequence data	3-82
3-16	Mill-Line Center-Machining Process (LCT)	3-86
3-16-1	Setting process data	3-86
3-16-2	Setting sequence data	3-87
3-17	Mill-Line Right- and Left-Machining Process (RGT and LFT)	3-97
3-17-1	Setting process data	3-98
3-17-2	Setting sequence data	3-99
3-18	Milling Manual Program Machining Process (MMP)	3-100
3-18-1	Setting process data	3-100
3-18-2	Setting sequence data	3-100
3-19	M-Code Process (M)	3-103
3-19-1	Setting process data (M-code)	3-103
3-20	Tool Layout Process (TLY)	3-113
3-20-1	Setting process data	3-113
3-21	Subprogram Process (SUB)	3-114
3-21-1	Setting process data	3-114
3-21-2	Setting sequence data	3-114
3-22	End Process (END)	3-115
3-22-1	Setting process data (end data)	3-115
3-23	Measurement Process (MES)	3-119
4.	TPC DATA SETTING	4-1
4-1	Operating Procedure for Setting TPC (Tool-Path Control) Data	4-1
4-2	Description of Each TPC Data Item	4-4
5.	PROGRAM EDITING	5-1
5-1	Process Search	5-2
5-2	Copy	5-3
5-2-1	Program copy	5-4
5-2-2	Process copy	5-5
5-2-3	Machining-shape copy	5-6
5-3	Line Insertion	5-7
5-4	Line Deletion	5-9

6.	PROGRAM CREATING/EDITING FUNCTIONS	6-1
6-1	Help Function	6-1
6-2	Automatic Crossing-Point Calculation Function	6-2
6-3	Automatic Cutting-Conditions Setting Function	6-11
6-4	Tool Auto-Setting	6-16
6-5	Desk Calculator Functions	6-18
6-6	Tool Data Window	6-19
7.	SAMPLE PROGRAMS	7-1
8.	THREE-DIGIT G-FORMAT	8-1