


DRIVE UNIT

MOTION CONTROL SYSTEM (MCS) / (MCSII)

MAINTENANCE MANUAL

(5th Edition)

Pub No. 4184-E-R4 (SE34-006-R5) Dec. 2002

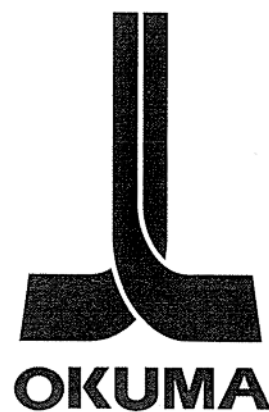

CONTENTS

A. MIV UNIT

B. MIP UNIT

This book consists of several manuals and, therefore, it may contain specifications not selected for user's machine.

Please confirm your specification by definite specifications or equivalent document.

TABLE OF CONTENTS

A. MIV UNIT

SECTION 1 INVERTER UNIT (MIV UNIT)	1
1. System Configuration	1
2. Classification of MIV Units	2
2-1. Designation of MIV Units	2
2-2. Configuration of MIV Units	3
2-3. Construction of MIV Units	6
2-4. MIV Unit Selection Tables by Motor Types	8
3. Cautions on Changing Units	11
3-1. General Precautions	11
3-2. Unit Replacement Procedure	12
4. Indication of Operating Status	14
4-1. Arrangement of Status Indicating LED	14
4-2. Contents of Indication	15
4-3. Error Number Tables	18
5. Controller ID Number	32
6. Description of Waveform Monitor	35
6-1. MIV Unit for Feed Axes/Turrets/Machine Axes	35
6-2. MIV Unit for Spindle/M-tool Spindle/Sub Spindle	37
6-3. SWM Monitor Unit	39
7. Connection	44
7-1. System Connection	44
7-2. Terminal Block Screw Size	46
7-3. Connectors	46
8. MIV Unit External Dimensions	49
8-1. MIV Unit (1-axis Specification) for BL Motors	49
8-2. MIV Unit (2-axis Specification) for BL Motors	50
8-3. MIV Unit (1-axis Specification) for VAC Motors	50
SECTION 2 DC POWER SUPPLY UNIT (MPS, MPR UNIT)	60
1. System Configuration	60
2. Classification of DC Power Supply Units	61
2-1. Designation of DC Power Supply Units	61
2-2. Configuration of Power Supply Units	62
2-3. Construction of Power Supply Units	63
3. Cautions on Changing Units	65
4. Indication of Operating Status	67

4-1. Arrangement of Status Indicating LED	67
4-2. Contents of Indication	68
4-3. Error Number Tables	69
5. Controller ID Number	71
6. Description of Monitor Terminals	72
6-1. Arrangement of Monitor Terminals	72
6-2. Monitor Signals	73
7. Connection	74
7-1. System Connection	74
7-2. Terminal Block Screw Size	74
7-3. Connectors	74
8. DC Power Supply Unit External Dimensions	75
8-1. MPS Unit	75
8-2. MPR Unit	75
SECTION 3 Appendix 1. Procedure for Replacing External Cooling Fan	81
1. Diagnosis of Trouble	81
2. Part Number	81
3. Replacement Procedure	82
3-1. Procedure for Replacing MIV06 to MIV22 and MPS10 to MPS30 Fan	82
3-2. Procedure for Replacing MIV30, MIV45, MPS45 and MPS60 Fan	84
4. Cautions	85
B. MIP UNIT	
SECTION 1 MIP UNIT	86
SECTION 2 SYSTEM CONFIGURATION	87
SECTION 3 MIP UNIT TYPES	88
1. Unit Name Designation	88
2. Configuration of MIP Units	88
3. Construction of MIP Unit	89
4. Applicable Motors	91
SECTION 4 CAUTIONS ON CHANGING UNITS	92
SECTION 5 OPERATION STATUS DISPLAY	93
1. Arrangement of Status Indicating LED	93
2. Indication of Operation Status (Inverter Control Side)	94
2-1. Indication of Normal Operation Status	94

2-2. Indication of Alarm Status.....	95
3. Error Number Table (Inverter Control Side).....	96
3-1. Exception Error Number table	96
3-2. Alarm Number Table	98
3-3. Warning Number Table	108
4. Indication of Operation Status (DC Power Supply Control Side).....	110
4-1. Indication of Normal Operation Status.....	110
4-2. Indication of Alarm Status.....	110
5. Error Number Table (DC Power Supply Control Side)	111
SECTION 6 MONITOR TERMINALS.....	113
1. Arrangement of Monitor Terminals	113
2. Monitor Terminal Signals	114
SECTION 7 CONNECTION.....	116
SECTION 8 EXTERNAL VIEW OF MIP UNITS.....	120