

MACHINING CENTERS
VK45⁻⁴⁰₋₅₀/VK55⁻⁴⁰₋₅₀
INSTRUCTION MANUAL
SEIKI-SEICOS M II

9-1990

HITACHI SEIKI

TABLE OF CONTENTS

INTRODUCTION

1. SAFETY PRECAUTIONS	1 - 1
1-1 General Precautions	1 - 1
1-2 Precautions for Machine Operation	1 - 1
1-3 Precautions for Electric Devices and NC Unit	1 - 3
2. OUTLINE AND FEATURES OF MACHINE	2 - 1
2-1 Construction of Machine	2 - 1
3. SPECIFICATIONS	3 - 1
3-1 Specifications for Machine Proper	3 - 1
3-2 Specifications of NC Unit (SEICOS-MII)	3 - 4
3-3 Major Attachments	3 - 17
4. OPERATION OF MACHINE	4 - 1
4-1 Operation Using Main Operation Panel I, II and Auxiliary Operation Panels I, II	4 - 1
4-2 Operation by NC/PC Function Key (With SEICOS-MII and MICON-16)	4 - 15
4-3 Operational Procedures (With SEICOS-MII)	4 - 19
4-3-1 When Starting the Machine	4 - 19
4-3-2 Zero Return Procedures	4 - 19
4-3-3 When Completing the Daily Operation	4 - 20
4-4 Manual Operation (With SEICOS-MII)	4 - 21
4-4-1 Each Axial Feed	4 - 21
4-4-2 Rapid Traverse	4 - 21
4-4-3 Mounting and Dismounting the Tool	4 - 22
4-5 Manual Data Input (MDI) Operation	4 - 23
4-5-1 Each Axial Feed	4 - 23
4-5-2 Coolant	4 - 23
4-5-3 Spindle Speed Change and Spindle Revolution	4 - 23
4-5-4 Spindle Positioning	4 - 24
4-6 Automatic Operation	4 - 25
4-6-1 When Machining the First Workpiece, Checking the Newly Created Program	4 - 25
4-6-2 Program Memory Operation	4 - 25

4-6-3	When Inserting Manual Operation in Automatic Operation	4 - 26
4-6-4	When Performing MDI Operation in Automatic Operation ..	4 - 26
4-7	Programming Format and Codes	4 - 28
4-7-1	Key Input Format	4 - 28
4-7-2	G Functions	4 - 30
4-7-3	M Functions	4 - 32
4-8	Operation of Automatic Tool Changer (ATC)	4 - 35
4-8-1	Functioning of ATC and Its Operating Method	4 - 35
4-8-2	Turning the Tool Storage Magazine	4 - 36
4-8-3	ATC Program Operation	4 - 39
4-8-4	Condition Check during ATC Execution	4 - 40
4-9	Display and Major Operation of NC Unit (SEICOS-MII)	4 - 41
4-9-1	Display upon Power-on and Emergency Stop	4 - 41
4-9-2	Current Position Display and Setting	4 - 42
4-9-3	Offset Display and Setting	4 - 44
4-9-4	Command Value Display and Setting	4 - 46
4-9-5	Operation by MDI	4 - 48
4-9-6	Program Display and Deletion	4 - 49
4-9-7	Program Registration and Editing	4 - 51
4-9-8	Program Restart	4 - 56
4-9-9	Macro Variable Value Display and Setting	4 - 60
4-9-10	Setting	4 - 62
4-9-11	Alarm Display	4 - 65
4-10	SEICOS-M Special Functions; Data Setting and Operation	4 - 66
4-10-1	Machining End Notice	4 - 66
4-10-2	Automatic Override	4 - 68
4-10-3	Work Setter	4 - 71
4-10-4	Safety Guard	4 - 79
4-10-5	Coordinate Rotation Programming	4 - 86
4-10-6	Coordinate Rotation (Type B)	4 - 90
4-10-7	Coordinate Rotation (Type C)	4 - 93
4-11	NC Data Input	4 - 95
4-11-1	Tape Input/Output of NC Program	4 - 95
4-11-2	Tape Input of Parameter and Offset Data	4 - 96

5. TRANSPORTATION AND INSTALLATION OF MACHINE	5 - 1
5-1 Transportation of Machine	5 - 1
5-1-1 Precautions for Lifting Work	5 - 1
5-1-2 Precautions When Using the Fork Lift	5 - 1
5-2 Environment for Machine Installation	5 - 4
5-3 Precaution for the Layout of the Machine	5 - 4
5-4 Construction of Foundation	5 - 4
5-5 Installation of Machine	5 - 6
5-5-1 Preparation for Installation	5 - 6
5-5-2 Installation Procedures	5 - 12
6. INSPECTION AND ADJUSTMENT	6 - 1
6-1 Daily Inspection	6 - 1
6-1-1 Daily Inspection Items before Starting the Machine	6 - 1
6-1-2 Monthly Inspection Items	6 - 1
6-1-3 Inspection Items Every 3 Months	6 - 2
6-1-4 Semiannual/Annual Inspection Items	6 - 2
6-2 Remedy for Power Failure and Emergency Stop	6 - 3
6-2-1 Restoring from the Emergency Stop or Power Failure During ATC Operation	6 - 3
6-3 When the Call Light (Yellow Warning Lamp) Is Lit Up	6 - 5
6-3-1 Types of Alarm and Their Remedies	6 - 5
6-4 Parameters	6 - 19
6-4-1 Types of Parameter and Their Description	6 - 19
6-4-2 Parameter Handling	6 - 19
6-4-3 Setting of NC Parameter	6 - 19
6-4-4 Rewriting of PC Parameter	6 - 36
6-4-5 Data Setting of Melody Horn	6 - 37

TABLE OF CONTENTS

7.- REFERENCE DATA FOR MAINTENANCE AND ADJUSTMENT	7 - 1
7-1 Outline of Operation of Sequence Controller (SEQUENCER) "MICON-16"	7 - 2
7-1-1 Keyboard	7 - 2
7-1-2 Operation Mode	7 - 5
7-1-3 Description of Each Mode	7 - 7
7-1-4 SEQUENCE Mode	7 - 7
7-1-5 Write Table Switch	7 - 18
7-2 Points for Maintenance for MICON-16	7 - 19
7-2-1 System Configuration	7 - 19
7-2-2 M-16II Specifications	7 - 20
7-2-3 Handling & Mounting Equipment/Functions	7 - 21
7-2-4 Connecting to M-16II and FS10 Series (Option)	7 - 44
7-3 Diagnosis of NC Input Signal (Diagnose)	7 - 46
7-3-1 Operating Procedure	7 - 46
7-3-2 NC Conditions and I/O Signals	7 - 47
7-4 Stored Pitch Error Compensation	7 - 56
7-4-1 Function	7 - 56
7-4-2 Specifications	7 - 56
7-4-3 Parameter Setting	7 - 56
7-4-4 Various Parameter Setting Examples (Compensation Intervals = 10 m)	7 - 57
7-4-5 Compensation Amount Setting	7 - 60
7-5 Axis Feed Servo System	7 - 61
7-6 Maintenance and Adjustment of Spindle Drive Unit	7 - 91
7-7 Magnetic Sensor System • Spindle Orientation	7 - 104
7-8 List of Electric Accessories and Their Mounting Drawing ...	7 - 116
7-9 Spindle Speed and Power Diagram	7 - 126
7-10 Mounting Covers Etc.	7 - 132
7-11 ATC Maintenance and Adjustment	7 - 133
7-12 Stroke of Each Axis and Adjustment of Reference Point	7 - 143
7-13 Table Saddle and Feed Shaft	7 - 145
7-14 Spindle Head and Bearing	7 - 149
7-15 Hydraulically Driven Equipment	7 - 157
7-16 Balance Cylinder (for Spindle Head)	7 - 175
7-17 Lubrication	7 - 177

7-18 Cooling Device	7 - 180
7-19 Pneumatic Equipments	7 - 186
7-20 Spiral Conveyer (Standard Accessory)	7 - 189