

**Operator's manual**

**TC 3000 R**

**Edition: 03/2004**

# Table of Contents

## Chapter 1 Safety

1.	<b>For your safety</b> .....	<b>1-3</b>
2.	<b>Terminology</b> .....	<b>1-4</b>
3.	<b>Operating safety</b> .....	<b>1-4</b>
3.1	Use of the system in accordance with the regulations.....	1-5
3.2	Measures to be taken by the owner/operator .....	1-6
	Warning plates and warning instructions .....	1-6
	Operator training .....	1-8
	Care required when working with the system .....	1-8
	Correcting malfunctions during operation .....	1-11
	Use the replacement parts and working materials designed for this purpose.....	1-11
	Water protection.....	1-12
3.3	Measures to be taken by manufacturer .....	1-13
	Fuse protection for the danger zone of the system.....	1-13
4.	<b>Overview of hazards</b> .....	<b>1-15</b>
5.	<b>Notes on laser safety</b> .....	<b>1-17</b>
6.	<b>Danger due to magnetic fields</b> .....	<b>1-18</b>

## Chapter 2 Installation conditions

	Who does what? .....	2-3
1.	<b>Installation site</b> .....	<b>2-4</b>
1.1	Space requirements .....	2-4
1.2	Floor requirements .....	2-4
1.3	Load indications .....	2-5
1.4	Ambient conditions.....	2-7

1.5	Air purity .....	2-7
<b>2.</b>	<b>Electrical supply .....</b>	<b>2-8</b>
2.1	Mains supply .....	2-8
	Isolating transformer .....	2-9
1.2	Connected loads, current intensity, Frequency.....	2-11
1.3	Teleservice .....	2-12
1.4	Network connection.....	2-12
<b>3.</b>	<b>Compressed air supply .....</b>	<b>2-13</b>
<b>4.</b>	<b>Working materials .....</b>	<b>2-16</b>
4.1	Working materials for hydraulics .....	2-16
4.2	Working materials for tool spray lubrication .....	2-16
4.3	Pallets for the TRUMALIFT SheetMaster 1303 (optional) .....	2-17
4.4	Workpieces .....	2-17
<b>5.</b>	<b>Transport .....</b>	<b>2-18</b>
5.1	Customer preparations for transporting the machines to the installation site .....	2-18
1.2	Unloading machine and transporting it to installation site.....	2-19
1.3	Installing machine and fastening it to the foundation .....	2-21
<b>6.</b>	<b>Planning aid .....</b>	<b>2-22</b>

---

## Chapter 3 Description

<b>1.</b>	<b>Machine concept .....</b>	<b>3-4</b>
<b>2.</b>	<b>Technical data .....</b>	<b>3-5</b>
2.1	Layout.....	3-6
<b>3.</b>	<b>The most important modules.....</b>	<b>3-7</b>
3.1	Machine frame .....	3-7
3.2	Coordinate guidance with linear magazine .....	3-8
3.3	Drives .....	3-9
3.4	Machine table.....	3-10
3.5	Part removal .....	3-11
3.6	Punching head .....	3-12

<b>4.</b>	<b>Tools.....</b>	<b>3-14</b>
4.1	The tool system.....	3-14
4.2	Components of a tool set.....	3-17
	Punch.....	3-17
	Punch selection.....	3-18
	Alignment ring.....	3-20
	Die.....	3-21
	Stripper.....	3-22
	Stripper selection.....	3-23
4.3	Tool innovations.....	3-26
	TRUMPF Multitools.....	3-26
	Tapping tools.....	3-29
	Clean cutting with TRUMPF Multishear.....	3-31
	Press brake bending with TRUMPF Multibend.....	3-32
	Quick beading.....	3-33
	Wheel tools.....	3-33
<b>5.</b>	<b>Maximum capacity tables.....</b>	<b>3-34</b>
5.1	Calculation formulae.....	3-34
5.2	Influencing factors.....	3-35
5.3	Punches.....	3-35
5.4	Dies.....	3-36
5.5	Stripper.....	3-37
5.6	Tabular overview.....	3-38
<b>6.</b>	<b>Table of stroke rates.....</b>	<b>3-40</b>
6.1	Influencing factors.....	3-40
6.2	Table overview: TC 3000 R-1300.....	3-41
	Standard tool.....	3-41
	Whisper tool.....	3-42
	Standard tool with active presser foot.....	3-43
	Long standard tool with active presser foot.....	3-44
	Multitool.....	3-45
	Forming tool.....	3-46
6.3	Table overview: TC 3000 R-1600.....	3-47
	Standard tool.....	3-47
	Whisper tool.....	3-48
	Standard tool with active presser foot.....	3-49
	Long standard tool with active presser foot.....	3-50
	Multitool.....	3-51
	Forming tool.....	3-52
<b>7.</b>	<b>The control system technology.....</b>	<b>3-53</b>

<b>8.</b>	<b>Programming</b> .....	<b>3-55</b>
8.1	Programming in the office with ToPs 300 .....	3-55
8.2	Programming on the machine using ToPs 2000.....	3-57
<b>9.</b>	<b>The most important options</b> .....	<b>3-58</b>
<b>10.</b>	<b>Simple automation</b> .....	<b>3-59</b>
10.1	Technical data .....	3-60
10.2	The automation components .....	3-61
	TRUMALIFT SheetMaster 1303 .....	3-61
	TRUMAGRIP with scissor table .....	3-65
10.3	Production plans .....	3-66

---

## Chapter 4 Operation

<b>Part 1: Operating devices</b> .....	<b>4-7</b>
<b>1. Operating devices not on the operating panel</b> .....	<b>4-7</b>
<b>2. Operating panel with color display</b> .....	<b>4-9</b>
2.1 Operating devices for the machine .....	4-10
2.2 Operating devices for the control system.....	4-15
<b>3. ASCII keyboard</b> .....	<b>4-19</b>
<b>4. Disk drive</b> .....	<b>4-21</b>
<b>Part 2: User interface</b> .....	<b>4-22</b>
<b>1. Structure of the user interface</b> .....	<b>4-22</b>
1.1 Menu bar .....	4-22
1.2 Status bar .....	4-22
1.3 Message line .....	4-23
1.4 Softkey bar .....	4-24
1.5 Display area .....	4-24
<b>2. Machine submodes</b> .....	<b>4-25</b>
2.1 AUTOMATIC submode .....	4-25
2.2 MDA submode .....	4-26
2.3 JOG submode .....	4-26
<b>3. Control system activity fields</b> .....	<b>4-27</b>



<b>4.</b>	<b>Diagnostics .....</b>	<b>4-28</b>
<b>5.</b>	<b>PRODUCTION activity.....</b>	<b>4-29</b>
5.1	PRODUCTION Single job .....	4-29
5.2	PRODUCTION Production plan.....	4-34
5.3	NC program management in NC .....	4-36
5.4	PRODUCTION Machine components.....	4-38
5.5	PRODUCTION Program processing options.....	4-39
5.6	PRODUCTION Switch elements.....	4-40
	Operation of the switch elements .....	4-40
	General switch elements.....	4-41
	Switch elements H+L Diagnostics page 1 .....	4-44
	Switch elements H+L Diagnostics page 2 .....	4-45
	Switch elements H+L Diagnostics page 3 .....	4-45
	Switch elements H+L Diagnostics page 4 .....	4-46
	Switch elements TRUMAGRIP (optional).....	4-47
	Switch elements TRUMALIFT axes (optional).....	4-48
	Switch elements TRUMALIFT General (optional) .....	4-49
5.7	PRODUCTION Tables .....	4-51
	Load sheet .....	4-52
	Unload sheet.....	4-56
	Sheet technology .....	4-64
	Workpiece removal .....	4-66
	Repositioning .....	4-73
	Tool technology - Tapping .....	4-75
	Tool technology - Marking.....	4-77
	Tool technology - Forming .....	4-78
	Tool technology - Punching/general .....	4-79
	Tool technology - Quick beading .....	4-82
	Tool technology - Rotation bending.....	4-83
	Tool technology - Multishear.....	4-84
	Tool technology - Roller tool .....	4-86
	Tool technology - Engraving .....	4-87
	Sheet lubrication .....	4-88
<b>6.</b>	<b>SETUP activity.....</b>	<b>4-90</b>
6.1	SETUP switch elements.....	4-90
	General switch elements.....	4-90
	Switch elements for punching.....	4-92
	Switch elements H+L Diagnostics page 1 .....	4-93
	Switch elements H+L Diagnostics page 2 .....	4-94
	Switch elements H+L Diagnostics page 3 .....	4-94
	Switch elements H+L Diagnostics page 4 .....	4-95
	TRUMAGRIP switch elements (optional).....	4-96

	TRUMALIFT switch elements (optional) .....	4-97
	Switch elements for peeling unit (optional) .....	4-99
6.2	SETUP Jog mode .....	4-101
6.3	SETUP MDA .....	4-102
<b>7.</b>	<b>PROGRAMMING activity.....</b>	<b>4-104</b>
7.1	NC Editor .....	4-104
7.2	PROGRAMMING Managing NC programs.....	4-105
7.3	PROGRAMMING File management .....	4-107
7.4	Send NC programs from program manager .....	4-110
<b>8.</b>	<b>TOOLING activity .....</b>	<b>4-112</b>
8.1	TOOLING Tool set-up list (autom.) .....	4-112
8.2	TOOLING Tool set-up list (manual) .....	4-113
	Setting up rails .....	4-113
8.3	Selecting NC programs .....	4-115
8.4	TOOLING Rail allocation.....	4-116
8.5	TOOLING Tools .....	4-118
	Required tools .....	4-118
	Tool change list.....	4-119
	General tool data .....	4-120
	Tool master data/status data .....	4-121
8.6	Explanation of the tool data.....	4-123
<b>9.</b>	<b>MAINTENANCE/START-UP activity .....</b>	<b>4-127</b>
9.1	MAINTENANCE/START-UP backup .....	4-127
9.2	MAINTENANCE / START-UP display.....	4-129
<b>10.</b>	<b>DIAGNOSTICS activity field .....</b>	<b>4-130</b>
10.1	DIAGNOSTICS fault diagnostics .....	4-130
10.2	DIAGNOSTICS I/O diagnostics .....	4-132
10.3	DIAGNOSTICS remote diagnostics .....	4-133
<b>11.</b>	<b>Integrated MDC activity field (optional) .....</b>	<b>4-134</b>
11.1	MDC message texts.....	4-134
11.2	Creating and modifying MDC message texts.....	4-135
11.3	Displaying and processing MDC machine data .....	4-137
11.4	Creating and modifying MDC interruptions .....	4-139
11.5	Evaluating MDC machine data .....	4-140
11.6	MDC display of the times in list form.....	4-142
11.7	Modifying MDC time.....	4-144

<b>Part 3: Machine operation .....</b>	<b>4-145</b>
<b>1. Machine start-up and shutdown.....</b>	<b>4-148</b>
1.1 Machine start-up .....	4-148
1.2 Switching off machine with malfunctions / in emergencies.....	4-149
1.3 Switching machine off .....	4-149
<b>2. Processing a program .....</b>	<b>4-150</b>
2.1 Executing a program automatically.....	4-150
2.2 Processing program with softpunch (optional).....	4-152
2.3 Releasing single stroke .....	4-153
2.4 Modifying forming depth.....	4-154
2.5 Stopping a program while processing.....	4-156
2.6 Canceling a program.....	4-157
2.7 Reentering a program .....	4-158
<b>3. Working with the production plan.....</b>	<b>4-160</b>
3.1 Creating a production plan .....	4-160
3.2 Executing a production plan.....	4-161
3.3 Restarting execution of the production plan after a program has been canceled.....	4-163
<b>4. Moving the axes manually.....</b>	<b>4-164</b>
<b>5. Releasing the drive brakes.....</b>	<b>4-165</b>
5.1 Releasing the X and Y axes drive brakes .....	4-165
<b>6. Executing the lubrication cycle manually .....</b>	<b>4-166</b>
<b>7. Diagnostic functions.....</b>	<b>4-167</b>
7.1 Error diagnostics .....	4-167
7.2 Displaying inputs and outputs of the laser and machine.....	4-168
7.3 Remote diagnostics via pcANYWHERE .....	4-170
7.4 Inquiring about software version .....	4-171
<b>8. Managing master files .....</b>	<b>4-172</b>
8.1 Uploading NC programs from disk drive .....	4-172
8.2 Uploading an NC program from hard disk .....	4-173
8.3 Outputting NC programs to the disk drive.....	4-174
8.4 Outputting NC programs to hard disk .....	4-175
8.5 Downloading a program part to disk drive .....	4-176
8.6 Deleting NC programs from the program manager .....	4-177



<b>9.</b>	<b>NC program management .....</b>	<b>4-178</b>
9.1	Displaying NC text.....	4-178
9.2	Editing NC text .....	4-179
	Searching for block in NC text .....	4-179
	Searching for function in an NC text.....	4-180
	Searching for and replacing a function in an NC text .....	4-181
	Inserting a line.....	4-182
	Copying and inserting a piece of text.....	4-183
	Deleting pieces of text.....	4-184
<b>10.</b>	<b>Editing tables based on an NC text.....</b>	<b>4-185</b>
<b>11.</b>	<b>TOOLING.....</b>	<b>4-187</b>
11.1	Creating automatic tool table and loading tool rail .....	4-187
11.2	Loading and unloading tools manually.....	4-188
11.3	Correcting clamp positions.....	4-189
11.4	Removing active tool.....	4-190
11.5	Removing all tools.....	4-190
<b>12.</b>	<b>If problems arise .....</b>	<b>4-191</b>
12.1	Removing stripper from punching head .....	4-191
	<b>Part 4: e-shop: acquiring replacement parts online .....</b>	<b>4-192</b>
<b>1.</b>	<b>Start e-shop .....</b>	<b>4-192</b>
1.1	Registering .....	4-192
1.2	Login.....	4-193
1.3	Storing customer data .....	4-193
<b>2.</b>	<b>Ordering replacement parts .....</b>	<b>4-194</b>
2.1	Ordering from the Top Ten list.....	4-194
2.2	Direct ordering.....	4-195
2.3	Editing the shopping cart.....	4-196
2.4	Ordering a shopping cart.....	4-198

---

## Chapter 5 Maintenance - Machine

<b>1.</b>	<b>General guidelines .....</b>	<b>5-4</b>
<b>2.</b>	<b>Maintenance overview.....</b>	<b>5-5</b>

<b>3.</b>	<b>Lubrication</b> .....	<b>5-7</b>
3.1	Lubrication chart.....	5-7
3.2	Lubrication agents.....	5-8
3.3	Maintenance guidelines .....	5-9
	Lengthwise and transverse guide .....	5-9
	Central lubrication .....	5-11
	Hydraulics .....	5-12
	Zero dead stop sensor (only TC 3000 R with automation) .....	5-17
	Tool spray lubrication.....	5-18
	Spray lubrication die (optional) .....	5-23
	Lubricating unit - tapping (optional) .....	5-25
	Die clamping piston clamp.....	5-29
	Rail transverse carrier and table support.....	5-30
	Punch holder .....	5-31
<b>4.</b>	<b>Hydraulic components</b> .....	<b>5-32</b>
4.1	Overview .....	5-32
4.2	Depressurize the accumulator .....	5-33
4.3	Maintenance guidelines .....	5-35
	Hydraulic accumulator .....	5-35
	Hydraulic hoses .....	5-38
	Hydraulic unit .....	5-40
<b>5.</b>	<b>Pneumatic components</b> .....	<b>5-43</b>
5.1	Overview .....	5-43
5.2	Maintenance guidelines .....	5-44
	Air cushions (optional) .....	5-44
	Compressed air maintenance unit.....	5-45
<b>6.</b>	<b>Mechanical components</b> .....	<b>5-47</b>
6.1	Overview .....	5-47
6.2	Maintenance guidelines .....	5-48
	Punching tool adapter.....	5-48
	Vacuum system: Side channel blower.....	5-48
	Vacuum system: Vacuum pipe .....	5-50
	Vacuum system: Chip flap .....	5-52
	Entire vacuum system.....	5-53
	Tool cartridge support slat .....	5-56
	Clamps .....	5-57
	Racks and guide rails.....	5-58
	Index pin(s) .....	5-58
	Brush field segmental table, parts flap and brush table (optional) .....	5-59
	Brush field segmental tables.....	5-60

<b>7.</b>	<b>Electrical components</b> .....	<b>5-61</b>
7.1	Overview .....	5-61
7.2	Maintenance guidelines .....	5-62
	Switch cabinet .....	5-62
	Light barrier and light barrier parts flap (optional) .....	5-66
	Inductive proximity switch .....	5-67
	Sensor system stripper sensor .....	5-67
	Control panel.....	5-69
<b>8.</b>	<b>What to do when a collision occurs</b> .....	<b>5-70</b>
<b>9.</b>	<b>Handling the setting device</b> .....	<b>5-71</b>
9.1	Allocation of the punch to the alignment ring .....	5-71
9.2	Determining the tool length .....	5-73
<b>10.</b>	<b>Regrinding tools</b> .....	<b>5-74</b>
10.1	Compensating the regrinding amount.....	5-75

---

## Chapter 6 Maintenance - Automation

<b>1.</b>	<b>General guidelines</b> .....	<b>6-3</b>
<b>2.</b>	<b>Maintenance overview</b> .....	<b>6-4</b>
<b>3.</b>	<b>Lubrication</b> .....	<b>6-6</b>
3.1	Lubrication chart for TRUMALIFT SheetMaster 1303 with TRUMAGRIP .....	6-6
3.2	Lubricant.....	6-7
3.3	Maintenance instructions .....	6-8
	X axis guide strip on TRUMALIFT SheetMaster 1303 .....	6-8
	Carrier suction cup support column on TRUMALIFT SheetMaster 1303 .....	6-8
	Safety device on the vacuum frame on TRUMALIFT SheetMaster 1303 .....	6-9
	Sheet thickness gauge guide rods on TRUMALIFT SheetMaster 1303 .....	6-10
	Manual central lubrication of the TRUMALIFT SheetMaster 1303.....	6-11
	X axis feedgear on TRUMALIFT SheetMaster 1303 .....	6-13



	Z axis feedgear on TRUMALIFT SheetMaster 1303 .....	6-13
	Guide rails on TRUMAGRIP .....	6-14
	Grippers on TRUMAGRIP.....	6-15
<b>4.</b>	<b>Pneumatic components.....</b>	<b>6-16</b>
4.1	Overview .....	6-16
4.2	Maintenance instructions .....	6-17
	Pressure regulator .....	6-17
	Vacuum hoses in the suction frame.....	6-19
	Filter in the suction cup vacuum fastenings.....	6-20
	Pneumatic bellows cylinder on the scissor table .....	6-21
	Pneumatic hoses on the scissor table .....	6-21
<b>5.</b>	<b>Mechanical components .....</b>	<b>6-22</b>
5.1	Overview .....	6-22
5.2	Maintenance instructions .....	6-23
	Doweling of TRUMALIFT SheetMaster 1303 and TRUMAGRIP .....	6-23
	Vacuum cups on TRUMALIFT SheetMaster 1303 .....	6-24
<b>6.</b>	<b>Electrical components.....</b>	<b>6-27</b>
6.1	Overview .....	6-27
6.2	Maintenance instructions .....	6-28
	Switch cabinet of TRUMALIFT SheetMasters 1303 .....	6-28
	Light barrier on the scissor table.....	6-30

## Chapter 7 Noise level test report

<b>1.</b>	<b>Test certificate.....</b>	<b>7-2</b>
<b>2.</b>	<b>Measuring results .....</b>	<b>7-3</b>
<b>3.</b>	<b>Reference work piece .....</b>	<b>7-4</b>
<b>4.</b>	<b>Position of the measuring points .....</b>	<b>7-5</b>



---

## Chapter 8 Aligning Leuze lumiflex safety light barriers

1.	Leuze lumiflex safety light barriers.....	8-2
2.	Installing the deflecting mirror columns.....	8-3
3.	Aligning the deflecting mirror columns.....	8-5
3.1	Aligning the upper light axis.....	8-5
3.2	Adjusting the lower light axis.....	8-8
4.	Aligning the receiver.....	8-8