

LAGUN

FTV - 5 SP

INSTRUCTIONS MANUAL

LADARASA, S.L.

**VITORIA-GASTEIZ
SPAIN (E.E.C.)**

TABLE OF CONTENT

GENERAL OPERATION STANDARDS

1. TECHNICAL DATA
 - 1.1 TECHNICAL CHARACTERISTICS
 - 1.2 DIMENSIONS
 - 1.3 MAIN LUBE CHART
2. INSTALLATION
 - 2.1 TRANSPORT AND UNLOADING
 - 2.2 MACHINE CLEANING
 - 2.3 FOUNDATION
 - 2.4 MACHINE SAFETY
 - 2.5 ELECTRIC CHECKING
 - 2.6 LEVELING
3. MACHINE OPERATION
 - 3.1 START-UP
 - 3.2 FEED DRIVE
 - 3.3 SADDLE LOCK
 - 3.4 SADDLE ADJUSTMENT
 - 3.5 RAM OPERATION
 - 3.6 COOLING
4. VARIATOR HEAD
 - 4.1 CHARACTERISTICS
 - 4.2 ALIGNMENT
 - 4.3 NORMAL OPERATION
 - 4.4 CHANGE POSITION
 - 4.5 OPERATORS INSTRUCTIONS
 - 4.6 CHANGE RANGE
 - 4.7 QUILL FEED
 - 4.8 QUILL FEED ADJUSTMENT
 - 4.9 MANUAL QUILL FEED
 - 4.10 OVERLOAD CLUTCH
 - 4.11 VIBRATIONS

5. MAINTENANCE

5.1 PARTS DRAWING QUILL

5.2 PARTS DRAWING QUILL COUNTERWEIGHT SPRING

5.3 QUILL RETURN SPRING REPLACEMENT

5.4 REMOVAL OF SPINDLE

5.5 DRIVE BELT REPLACEMENT

6. TOOL BACKLASH

7. SPARE PARTS INSTRUCTIONS

8. MACHINE PARTS DRAWING