

INSTRUCTION MANUAL
KV 35C
MACHINING CENTER
FANUC SYSTEM OM

KIA MACHINE TOOL

Head : 4Th. Fl. KIA Bldg., 15 Yoido-dong, Youngdeungpo-Gu, Seoul, Korea
Office TEL: (02) 783-1171 ~ 3, 783-9418
TLX: K25754 KIAMT, FAX: (02)-782-4884
Factory : 391-8, Gaeumjung-dong, Chang Won, Kyung Nam, Korea
TEL: (0551) 82-3181

CONTENTS

■ INTRODUCTION	1
----------------------	---

* HANDLING *

1. Notes on Safety	3
1-1. General Precautions	3
1-2. Precautions in Operating the Machine	3
1-3. Precautions for Electric Equipment and NC Unit	4
2. Outline of Machine	6
2-1. Machine Construction	6
2-2. Name of Each Section	8
2-3. Machine Specifications	9
2-4. Specifications of NC Unit (Fanuc System OM)	11
2-5. Principal Dimensional Drawings	15
2-6. Desirable Environmental Conditions	16
3. Conveyance and Installation	19
3-1. Conveyance of Machine	19
3-2. Installation	20
3-3. Basic Layout	23
3-4. How to Lift the Machine	24
4. Tool Manual	25
4-1. Relation Between Tables and Each Axis Feed	25
4-2. Stroke of Each Axis and Machine Zero Point	27
4-3. Tool Shank	29
4-4. NC Command	36
5. Operation	41
5-1. Main Control Panel	41
5-2. CRT/MDI Control Panel, Keyboard Descriptions	44

5-3. Machine Operation Sequence	48
5-4. Manual Mode	49
5-5. Auto Operation	53
5-6. Actions in Case of Power Interruption	55
5-7. Spindle Speed-output Curve	56

✱ MAINTENANCE ✱

1. Maintenance and Lubrication	58
1-1. Daily Maintenance	58
1-2. When the Alarm Lamp Turns on	59
1-3. Pneumatic Circuit Diagram	61
1-4. Hydraulic Pressure and Lubrication Check	62
2. Main Function Check and Adjustment	66
2-1. Relations Among X-, Y- and Z-axis	66
2-2. Zero Point Adjustment	69
2-3. ATC Relations	72
2-4. Main Power Function Check	84
3. ATC Function Check	90
3-1. ATC cycle	90
3-2. ATC Return Operation	91
3-3. ATC Single Operation	93
3-4. PC Timer Setting	95
4. Self-diagnosis Function	96
4-1. Ladder Diagram	96
4-2. I/O Interface	96
4-3. Ladder Diagram Descriptions	99
5. PC Alarm List	100
5-1. PC Alarm List	100