



ELECTRICAL MANUAL

TV146A

(FANUC 18iM/MXP100i/MXP200i)

VERTICAL MACHINING CENTER

(FOR SHANK 30/40/50 MACHINE ONLY)

YEONG CHIN MACHINERY INDUSTRIES CO., LTD.

HEADQUARTERS : 888, HOMU RD., HSINCHUANG
SHENKANG, TAICHUNG, TAIWAN

TEL : 886-4-25623211 FAX : 886-4-25626479 . 886-4-25628399
SERVICE TEL : 886-4-25612965 FAX : 886-4-25612966

E-mail : sales@YCMCNC.com

Web site : <http://www.YCMCNC.com>

ENDEAVORING TO CONFORM THE ISO 14001 ENVIRONMENTAL PROTECTION POLICIES;
IN PURSUIT OF EXCELLENCE; ALWAYS IMPROVING AND REFINING.

YCM
ELECTRICAL MANUAL

TV146A

(FANUC 18iM/MXP100i/MXP200i)

(按鍵式操作面板適用)

VERTICAL MACHINING CENTER
(FOR SHANK 30/40/50 MACHINE ONLY)

OPVMCE114

R008

INDEX	PAGE
1.CAUTION AND WARNING 注意與警告	
2.PREFACE 序文	
2.1 PREFACE 序文.....	2-1
2.2 THE CODE IDENTIFICATION OF ATC TYPE 刀庫型式代碼表.....	2-2
2.3 THE CODE INDNTIFICATION OF APC TYPE 床台交換型式代碼表	2-3
3.ELECTRIC-SYMBOL DETAIL 電氣符號表	
4.CONNECTION BLOCK DIAGRAM 接線方塊圖	
4.1 MXP-100iM/21 iM/18iM 總連接圖(電源供應器單元 A1/B1).....	4-1
4.2 CONNECTION DIAGEAM OF PSM,SPM,AND SVM(FSSB) PSM,SPM 與 SVM(FSSB)連接圖	4-2
4.3 MACHINE I/O CONNECTION BLOCK DIAGRAM 機械輸入/輸出連接方塊圖	4-3
5.ELECTRIC LAYOUT 電氣箱配置圖	
5.1 WIRING LAYOUT&EARTHING ARRANGEMENT 配線及接地圖	5-1-1
5.1.1 FOR FV56T/FV56A/FV85A/FV102A/MV66A/MV76A/MV86A/ MV106A STANDARD MACHINES	5-1-1
5.1.2 FOR FV125A/TV116A/TV146A/MV168A/WV108A/WV108B/ MV138B/MV168B/TV116B/TV146B/TV158B/TV188B STANDARD MACHINES	5-1-2
5.1.3 FOR TV2110B/TV2610B STANDARD MACHINES	5-1-3
5.1.4 FOR FP66A/FP100A STANDARD MACHINES	5-1-4
5.2 OPERATOR CABINET BLOCK DIAGRAM 操作箱方塊圖	5-2-1
5.2.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINES	5-2-1
5.2.2 FOR MV66A/MV76A/WV108A/WV108B MACHINES	5-2-2
5.2.3 FOR FV85A/FV102A/FV125A/MV86A/MV106A/MV168A/TV116A/ TV146A/MV138B/MV168B/TV116B/TV146B/TV2110B/TV2610B MACHINES	5-2-3
5.2.4 FOR TV158B/TV188B MACHINES	5-2-3
5.2.4 FOR FP100A MACHINES	5-2-4
5.3 OPERATOR CABINET LAYOUT 操作箱之配置.....	5-3-1
5.3.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC/MV66A/MV76A/ WV108A/WV108B MACHINES	5-3-1
5.3.2 FOR FV85A/FV102A/FV125A/MV86A/MV106A/MV168A/TV116A/ TV146A/MV138B/MV168B/TV116B/TV146B/TV158B/TV188B/ TV2110B/TV2610B MACHINES.....	5-3-1
5.3.3 RS232C I/O CONNECTION RS232C I/O 接線.....	5-3-2
5.3.4 SIGNAL TOWWER CONNECTION 警示燈接線.....	5-3-2

5.4 MAIN OPERATOR'S PANEL 主操作面板	5-4-1
5.4.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINE (SYMBOLIC+ENGLISH) FOR FV56T/FV56A/FV56T+APC/FV56A+APC 機種(符號+英文).....	5-4-1
5.4.2 FOR 20/24/30-TOOLS MACHINE(SYMBOLIC+ENGLISH) FOR 20/24/30-TOOLS 機種(符號+英文).....	5-4-2
5.4.3 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINE (CHINESE) FOR FV56T/FV56A/FV56T+APC/FV56A+APC 機種(中文).....	5-4-3
5.4.4 FOR 20/24/30-TOOLS MACHINE(CHINESE) FOR 20/24/30-TOOLS 機種(中文).....	5-4-4
6. WIRING 配線	
6.1 BASE FUNCTION 基本功能	6-1-1
6.1.1 POWER SUPPLY 電源供應部份	6-1-1
6.1.2 CONTROL VOLTAGE 220/110V AC 控制電壓交流 220V/110V	6-1-3
6.1.3 CNC POWER ON/OFF CNC 之電源開關.....	6-1-4
6.1.4 EMERGENCY STOP 緊急停止	6-1-5
6.1.4.1 STORK LIMIT (FOR FP100A/B USE) 極限開關	6-1-5
6.1.4.2 STORK LIMIT (FOR FP120A/B USE) 極限開關	6-1-6
6.1.4.3 STORK LIMIT 極限開關	6-1-7
6.1.4.4 EMERGENCY STOP BUTTON 緊急停止按鈕	6-1-7
6.1.4.5 SAFTY COMPONET 安全元件.....	6-1-8
6.1.4.5.1 EMERGENCY STOP REALY 緊急停止繼電器.....	6-1-8
6.1.4.5.2 SAFTY COMPONENT(OPTION) 安全元件(選擇)	6-1-8
6.1.4.6 EMERGENCY BUTTON 緊急按鈕.....	6-1-8
6.1.5 FUNCTION 功能	6-1-9
6.1.6 MODE 模式	6-1-10
6.1.7 FEEDRATE OVERRIDE 進給率.....	6-1-10
6.1.8 EDIT LOCK 編輯鎖定	6-1-11
6.1.9 LIGHT 工作燈	6-1-11
6.1.9.1 SHAN LIGHT 單工作燈.....	6-1-11
6.1.9.2 PAIR OF LIGHT 雙工作燈.....	6-1-11
6.1.10 CYCLE 循環	6-1-11
6.1.11 INDICATE 刀號指示燈	6-1-12
6.1.12 CUTTING ATR BLAST 切削吹屑.....	6-1-15
6.1.12.1 PB 按鍵.....	6-1-15
6.1.12.2 COIL 線圈.....	6-1-15
6.1.12.3 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-1-15
6.1.13 COOLANT 切削液.....	6-1-16

6.1.13.1 PB 按鍵	6-1-16
6.1.13.2 COIL 線圈	6-1-16
6.1.13.3 SOLENOID AND MCC 電磁閥與電磁接解器	6-1-16
6.1.13.4 MOTOR 馬達	6-1-16
6.1.14 CHIP CONVEYOR 螺旋捲屑機	6-1-17
6.1.14.1 PB 按鍵	6-1-17
6.1.14.2 COIL 線圈	6-1-17
6.1.14.3 MCC 電磁接觸器	6-1-18
6.1.14.4 MOTOR 馬達	6-1-18
6.1.15 CHIP CONVEYOR 船型捲屑機	6-1-19
6.1.15.1 PB 按鍵	6-1-19
6.1.15.2 COIL 線圈	6-1-19
6.1.15.3 MCC 電磁接觸器	6-1-20
6.1.15.4 MOTOR 馬達	6-1-20
6.1.16 SIGNAL TOWER 警示燈	6-1-21
6.1.16.1 COIL 線圈	6-1-21
6.1.16.2 LAMP 指示燈	6-1-21
6.1.17 MOTOR OVERLOAD 馬達過載和空壓	6-1-22
6.2 AXES FUNCTION 軸向功能	6-2-1
6.2.1 AXES LUBE 軸向潤滑	6-2-1
6.2.1.1 FOR TV96A/TV116A/TV146A/V168A AND #50 SERIES MACHINE LUBE FOR TV96A/TV116A/TV146A/V168A 及#50 機種軸向潤滑	6-2-1
6.2.1.1.1 DETECTION 檢出	6-2-1
6.2.1.1.2 COIL 線圈	6-2-1
6.2.1.1.3 MOTOR 馬達	6-2-1
6.2.1.2 FOR FV56T/FV56A/V65A/V85A/FV85A/FV102A/V105A AND #40 SERIES MACHINE LUBE FOR FV56T/FV56A/V65A/V85A/FV85A/FV102A/V105A 及#40 機種軸向潤滑	6-2-2
6.2.1.2.1 DETECTION 檢出	6-2-2
6.2.1.2.2 COIL 線圈	6-2-2
6.2.1.2.3 MOTOR 馬達	6-2-2
6.2.2 AXIS BREAK 軸向剎車	6-2-3
6.2.2.1 COIL 線圈	6-2-3
6.2.2.2 CONTACT 接點	6-2-3
6.2.2.3 WIRING AND SET 配線及設定	6-2-3
6.2.3 JOG AND AXIS STROKE LIMIT SWITCH UNIT 手動與軸向極限單元	6-2-4
6.2.3.1 PB 按鍵	6-2-4

6.2.3.2 COIL 線圈	6-2-6
6.2.3.3 SOLEXOID 電磁閥.....	6-2-6
6.2.4 MPG OPERATOR'S PANEL 手輪操作面板.....	6-2-7
6.2.4.1 1'-MPG 單手輪.....	6-2-7
6.2.4.2 2'-MPG(OPTION) 雙手輪(選擇).....	6-2-8
6.2.4.3 3'-MPG(POTION) 三手輪(選擇).....	6-2-9
6.3 MAGAZINE FUNCTION 刀庫功能.....	6-3-1
6.3.1 MAGAZINE#1,#3 刀庫#1,#3.....	6-3-1
6.3.1.1 PB 按鍵.....	6-3-1
6.3.1.2 DETECTION 檢出.....	6-3-1
6.3.1.3 COIL 線圈.....	6-3-2
6.3.1.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-2
6.3.1.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-3
6.3.2 MAGAZINE#2 刀庫#2.....	6-3-4
6.3.2.1 PB 按鍵.....	6-3-4
6.3.2.2 DETECTION 檢出.....	6-3-4
6.3.2.3 COIL 線圈.....	6-3-5
6.3.2.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-5
6.3.2.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-6
6.3.2.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-6
6.3.3 MAGAZINE#4 刀庫#4.....	6-3-7
6.3.3.1 PB 按鍵.....	6-3-7
6.3.3.2 DETECTION 檢出.....	6-3-7
6.3.3.3 COIL 線圈.....	6-3-8
6.3.3.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-9
6.3.3.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-10
6.3.3.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-10
6.3.4 MAGAZINE#5 刀庫#5.....	6-3-11
6.3.4.1 PB 按鍵.....	6-3-11
6.3.4.2 DETECTION 檢出.....	6-3-11
6.3.4.3 COIL 線圈.....	6-3-12
6.3.4.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-13
6.3.4.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-14
6.3.4.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-14
6.3.5 MAGAZINE#6 刀庫#6.....	6-3-15
6.3.5.1 PB 按鍵.....	6-3-15
6.3.5.2 DETECTION 檢出.....	6-3-15
6.3.5.3 COIL 線圈.....	6-3-16
6.3.5.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-17

6.3.5.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-19
6.3.5.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-19
6.3.6 MAGAZINE ARM D51=0 D57=7 刀庫/刀臂類型 D51=0 D57= 7.....	6-3-21
6.3.6.1 PB 按鍵.....	6-3-21
6.3.6.2 DETECTION 檢出.....	6-3-21
6.3.6.3 COIL 線圈.....	6-3-21-1
6.3.6.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-21-2
6.3.6.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-22-1
6.3.6.6 VARIABLE SPEED DRIVES CONTROL 變頻器控制線路.....	6-3-22-2
6.3.6.7 VARIABLE DRIVES AND MOTOR 變頻器 AND 刀臂馬達.....	6-3-23
6.3.7 GIFU MAGAZINE#8 吉輔刀庫#8.....	6-3-24
6.3.7.1 PB 按鍵.....	6-3-24
6.3.7.2 DETECTION 檢出.....	6-3-24
6.3.7.3 COIL 線圈.....	6-3-25
6.3.7.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-26
6.3.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-27
6.3.7.6 ARM MOTOR 刀臂旋轉馬達.....	6-3-27
6.3.8 MAGAZINE ARM D51=0 D57=8/10 刀庫/刀臂 D51=0 D57= 8/10.....	6-3-28
6.3.8.1 PB 按鍵.....	6-3-28
6.3.8.2 DETECTION 檢出.....	6-3-28
6.3.8.3 COIL 線圈.....	6-3-29
6.3.8.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-30
6.3.8.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-31
6.3.8.6 ARM MOTOR 刀臂旋轉馬達.....	6-3-32
6.3.9 MAG TYPE #4 (40T) MAG 型式#4.....	6-3-33
6.3.9.1 PB 按鍵.....	6-3-33
6.3.9.2 DETECTION 檢出.....	6-3-33
6.3.9.3 COIL 線圈.....	6-3-34
6.3.9.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-35
6.3.9.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-37
6.3.9.6 ARM MOTOR 刀臂旋轉馬達.....	6-3-38
6.4 SPINDLE FUNCTION 主軸功能.....	6-4-1
6.4.1 SPINDLE 主軸.....	6-4-1
6.4.1.1 PB 按鍵.....	6-4-1
6.4.1.2 DETECTION 檢出.....	6-4-2
6.4.1.3 COIL 線圈.....	6-4-3
6.4.1.4 SOLENOID 電磁閥.....	6-4-4
6.4.2 CYTEC SPINDLE UNIT CYTEC 主軸單元.....	6-4-5

6.4.2.1 DETECTION 檢出.....	6-4-5
6.4.2.2 COIL 線圈.....	6-4-6
6.4.2.3 SOLENOID 電磁閥.....	6-4-6
6.4.2.4 OIL AIR LUBE 油氣潤滑 LUBE.....	6-4-7
6.4.3 SPINDLE TO START BY Y- Δ CONNECTION(OPTION)	
使用 Y- Δ 起動之主軸(選擇).....	6-4-8
6.4.3.1 DETECTION 檢出.....	6-4-8
6.4.3.2 COIL 線圈.....	6-4-8
6.4.3.3 MOTOR 馬達.....	6-4-9
6.4.4 OIL AIR UNIT 油氣潤滑單元.....	6-4-10
6.4.4.1 DETECTION 檢出.....	6-4-10
6.4.4.2 COIL 線圈.....	6-4-10
6.4.4.3 MCC 電磁接觸器.....	6-4-10
6.4.4.4 MOTOR 馬達.....	6-4-10
6.4.4.5 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器.....	6-4-11
6.4.5 SKF OIL AIR UNIT(SKf-DC24V TYPE USE 504-E04-IR01)	
油氣潤滑單元(SKf-DC24V TYPE USE 504-E04-IR01).....	6-4-12
6.4.5.1 DETECTION 檢出.....	6-4-12
6.4.5.2 COIL 線圈.....	6-4-12
6.4.5.3 MCC 電磁接觸器.....	6-4-12
6.4.5.4 MOTOR 馬達.....	6-4-13
6.4.5.5 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器.....	6-4-13
6.4.6 SKF OIL AIR UNIT(SKf-AC110V TYPE USE 504-E04-IR01)	
油氣潤滑單元(SKf-AC110V TYPE USE 504-E04-IR01).....	6-4-14
6.4.6.1 DETECTION 檢出.....	6-4-14
6.4.6.2 COIL 線圈.....	6-4-14
6.4.6.3 MCC 電磁接觸器.....	6-4-14
6.4.6.4 MOTOR 馬達.....	6-4-15
6.4.6.5 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器.....	6-4-15
6.4.7 SKF OIL AIR UNIT(SKf TOS-EX2 CONTROLLER DC24V TYPE)	
油氣潤滑單元(SKf TOS-EX2 CONTROLLER DC24V TYPE).....	6-4-16
6.4.7.1 DETECTION 檢出.....	6-4-16
6.4.7.2 COIL 線圈.....	6-4-16
6.4.7.3 MOTOR AND SOLENOID 馬達與電磁閥.....	6-4-16
6.4.7.4 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器.....	6-4-17
6.5 OPTION FUNCTION 選擇功能.....	6-5-1
6.5.1 SPARE M CODE 預備 M CODE.....	6-5-1
6.5.1.1 DETECTION 檢出.....	6-5-1

6.5.1.2 COIL 線圈.....	6-5-1
6.5.1.3 CONTACT 接點.....	6-5-1
6.5.2 JIG 夾治具.....	6-5-2
6.5.2.1 PB 按鍵.....	6-5-2
6.5.2.2 DETECTION 檢出.....	6-5-2
6.5.2.3 COIL 線圈.....	6-5-3
6.5.2.4 SOLENOID 電磁閥.....	6-5-3
6.5.3 TANSHING SIMPLE ROTARY AXIS 潭興簡易旋轉軸.....	6-5-4
6.5.3.1 DETECTION 檢出.....	6-5-4
6.5.3.2 COIL 線圈.....	6-5-4
6.5.3.3 SOLENOID 電磁閥.....	6-5-5
6.5.4 POWER OFF FUNCTION 自動斷電功能.....	6-5-6
6.5.4.1 PB 按鍵.....	6-5-6
6.5.4.2 CONTACT 接點.....	6-5-6
6.5.4.3 TIMER 計時器.....	6-5-6
6.5.4.4 REALY 繼電器.....	6-5-7
6.5.5 AUTO DOOR 自動門.....	6-5-8
6.5.5.1 PB 按鍵.....	6-5-8
6.5.5.2 DETECTION 檢出.....	6-5-8
6.5.5.3 COIL 線圈.....	6-5-8
6.5.5.4 SOLENOID 電磁閥.....	6-5-8
6.5.6 OIL MATIC 油溫控制器.....	6-5-9
6.5.6.1 DETECTION 檢出.....	6-5-9
6.5.6.2 MCC 電磁接觸器.....	6-5-9
6.5.6.3 MOTOR 馬達.....	6-5-9
6.5.7 HYDRAULIC UNIT 油壓單元.....	6-5-10
6.5.7.1 MCC 電磁接觸器.....	6-5-10
6.5.7.2 MOTOR 馬達.....	6-5-10
6.5.8 AUTO TOOL LENGTH MEASUREMENT 自動刀長量測.....	6-5-11
6.5.8.1 DETECTION 檢出.....	6-5-11
6.5.8.2 COIL 線圈.....	6-5-11
6.5.8.3 SOLENOID 電磁閥.....	6-5-11
6.5.9 WORKPIECE MEASUREMENT 工件量測.....	6-5-12
6.5.10 AWPM AND ATLM INSTALLED 工件與刀長量測.....	6-5-13
6.5.10.1 DETECTION 檢出.....	6-5-13
6.5.10.2 COIL 線圈.....	6-5-13
6.5.10.3 SOLENOID 電磁閥.....	6-5-13
6.5.11 OIL HOLE 油路刀桿.....	6-5-14
6.5.11.1 PB 按鈕.....	6-5-14

6.5.11.2 COIL 線圈.....	6-5-14
6.5.11.3 MCC 電磁接觸.....	6-5-14
6.5.11.4 MOTO 馬達.....	6-5-14
6.5.12 RUSH CHIP 底座沖屑.....	6-5-15
6.5.12.1 PB 按鈕.....	6-5-15
6.5.12.2 COIL 線圈.....	6-5-15
6.5.12.3 MCC 電磁接觸.....	6-5-15
6.5.12.4 MOTO 馬達.....	6-5-15
6.5.13 COOLANT THROUGH SPINDLE 主軸出油.....	6-5-16
6.5.13.1 PB 按鈕.....	6-5-16
6.5.13.2 DETECTION 檢出.....	6-5-16
6.5.13.3 COIL 線圈.....	6-5-16
6.5.13.4 MCC 電磁接觸.....	6-5-16
6.5.13.5 MOTO 馬達.....	6-5-16-1
6.5.14 COOLANT,OIL HOLE AND COOLANT GUN	
切削液,油路刀桿及清洗噴槍.....	6-5-17
6.5.14.1 PB 按鈕.....	6-5-17
6.5.14.2 COIL 線圈.....	6-5-17
6.5.14.3 MCC 電磁接觸.....	6-5-18
6.5.14.4 MOTO 馬達.....	6-5-18
6.5.15 OIL SKIMMER 油水分離機.....	6-5-19
6.5.15.1 MCC 電磁接觸.....	6-5-19
6.5.15.2 MOTO 馬達.....	6-5-19
6.5.16 SAFETY DOOR 安全門.....	6-5-20
6.5.16.1 PB 按鈕.....	6-5-20
6.5.16.2 COIL 線圈.....	6-5-20
6.5.16.3 SOLENOID 電磁閥.....	6-5-20
6.5.17 PROGRAM COOLANT NOZZLE 可程式噴嘴.....	6-5-21
6.5.17.1 DETECTION 檢出.....	6-5-21
6.5.17.2 COIL 線圈.....	6-5-21
6.5.17.3 MOTOR 馬達.....	6-5-21
6.5.18 SPRAY MIST(OPTION) 噴霧吹屑.....	6-5-22
6.5.18.1 PB 按鍵.....	6-5-22
6.5.18.2 COIL 線圈.....	6-5-22
6.5.18.3 SOLENOID 電磁閥.....	6-5-22
6.5.19 FUNCTION KEY(OPTION) 功能鍵.....	6-5-24
6.5.20 CENTRIFUGAL COOLANT CLEANER 遠心分離機.....	6-5-25
6.5.20.1 DETECTION 檢出.....	6-5-25
6.5.20.2 COIL 線圈.....	6-5-25
6.5.20.3 MCC 電磁接觸器.....	6-5-25

6.5.20.4	TIMER 計時器	6-5-26
6.5.20.5	MOTOR 馬達	6-5-26
6.5.21	CENTRIFUGAL COOLANT CLEANER COOLING SYSTEM	
	遠心分離機冷卻系統	6-5-27
6.5.21.1	DETECTION 檢出	6-5-27
6.5.21.2	MCC 電磁接觸器	6-5-27
6.5.21.3	COMPRESSOR 壓縮機	6-5-27
6.5.22	JIG、M8 PASS 治具、M8 記憶 (巧新)	6-5-28
6.5.22.2	DETECTION 檢出	6-5-28
6.5.22.3	COIL 線圈	6-5-29
6.5.23	SPECIAL BUTTON FUNCTION 特殊按鍵功能設定	6-5-30
6.5.23.1	PB 按鍵	6-5-30
6.5.23.2	DESCRIPTION 功能說明	6-5-30
6.5.23.3	DATA SETTING 資料設定	6-5-30
6.5.24	4/5 AXIS FUNCTION 4/5 軸功能	6-5-31
6.5.24.1	PB 按鍵	6-5-31
6.5.24.2	DETECTION 檢出	6-5-31
6.5.24.3	COIL 線圈	6-5-32
6.5.24.4	SOLENOID 電磁閥	6-5-32
6.5.25	AUTO TOOL LENGTH MEASUREMENT FOR BLUM	
	BLUM 雷射刀長量測	6-5-33
6.5.25.1	CONNECTION DIAGRAM 連接圖	6-5-33
6.5.25.2	WIRE DEFINEATION	6-5-34
6.5.26	SPINDLE THERMAL COMPENSATION 主軸溫升控制	6-5-35
6.5.27	COOLANT THROUGH SPINDLE CTS 主軸出油 CTS 副水箱	6-5-36
6.5.27.1	DETECTION 檢出	6-5-36
6.5.27.1	COIL 線圈	6-5-36
6.5.27.3	OVERFLOW TIMER 高水位計時器	6-5-37
6.5.27.4	MCC 電磁接觸器	6-5-37
6.5.27.5	MOTOR 馬達	6-5-38
6.5.27.6	CTS ORGANIZATION CHART CTS 系統圖	6-5-38
6.6.	APC UNIT FOR SHUTTLE TYPE 直進式 APC 單元	6-6-1
6.6.1	RACK TYPE(TP1) 排齒式	6-6-1
6.6.1.1	APC OPERATOR'S PANEL APC 操作面板	6-6-1
6.6.1.2	APC PB APC 按鍵	6-6-1
6.6.1.3	APC DETECTION APC 檢出	6-6-2
6.6.1.4	APC COIL APC 線圈	6-6-3
6.6.1.5	APC INDICATE APC 指示	6-6-4
6.6.1.6	APC SOLENOID APC 電磁閥	6-6-5
6.6.2	ARM TYPE(TP3) 擺臂式	6-6-6

6.6.2.1	APC OPERATOR'S PANEL APC 操作面板	6-6-6
6.6.2.2	APC PB APC 按鍵	6-6-6
6.6.2.3	APC DETECTION APC 檢出	6-6-7
6.6.2.4	APC COIL APC 線圈	6-6-8
6.6.2.5	APC INDICATE APC 指示	6-6-9
6.6.2.6	APC SOLENOID APC 電磁閥	6-6-10
6.6.2.7	APC RUSH CHIP MOTOR APC 沖屑馬達	6-6-11
6.7.	APC UNIT FOR ROTARY TYPE APC 旋轉式單元	6-7-1
6.7.1	$\beta 6$ SERVO MOTOR TYPE(TP4) $\beta 6$ 馬達式	6-7-1
6.7.1.1	APC PB APC 按鍵	6-7-1
6.7.1.2	APC DETECTION APC 檢出	6-7-2
6.7.1.3	APC COIL APC 線圈	6-7-3
6.7.1.4	APC INDICATE APC 指示	6-7-4
6.7.1.5	APC SOLENOID APC 電磁閥	6-7-5
6.7.1.6	APC RUSH CHIP MOTOR APC 沖屑馬達	6-7-6
6.7.2	PMM $\beta 6$ SERVO MOTOR TYPE FOR TCV51T (TP5) PMM $\beta 6$ 馬達式	6-7-7
6.7.2.1	APC PB APC 按鍵	6-7-7
6.7.2.2	APC DETECTION APC 檢出	6-7-8
6.7.2.3	APC COIL APC 線圈	6-7-9
6.7.2.4	APC INDICATE APC 指示	6-7-10
6.7.2.5	APC SOLENOID APC 電磁閥	6-7-11
6.7.2.6	PMM $\beta 6$ SERVO MOTOR PMM $\beta 6$ 伺服馬達	6-7-12
6.7.2.6.1	COIL 線圈	6-7-12
6.7.2.6.2	MCC 電磁接觸器	6-7-12
6.7.2.6.3	PMM EMERGENCY BUTTON 緊急按鈕	6-7-12
6.7.2.6.4	PMM APC SERVO UNIT ($\beta 6$ SERIES) 床台交換伺服單元(β 系列)	6-7-13
6.7.3	PMM $\beta 6$ SERVO MOTOR TYPE FOR FV56A/T (TP7) PMM $\beta 6$ 馬達式	6-7-14
6.7.3.1	APC PB APC 按鍵	6-7-14
6.7.3.2	APC DETECTION APC 檢出	6-7-15
6.7.3.3	APC COIL APC 線圈	6-7-16
6.7.3.4	APC INDICATE APC 指示	6-7-17
6.7.3.5	APC SOLENOID APC 電磁閥	6-7-18
6.7.3.6	APC RUSH CHIP MOTOR APC 沖屑馬達	6-7-19
6.7.3.7	PMM $\beta 6$ SERVO MOTOR PMM $\beta 6$ 伺服馬達	6-7-20
6.7.3.7.1	COIL 線圈	6-7-20
6.7.3.7.2	MCC 電磁接觸器	6-7-20
6.7.3.7.3	PMM EMERGENCY BUTTON 緊急按鈕	6-7-20
6.7.3.7.4	PMM APC SERVO UNIT ($\beta 6$ SERIES) 床台交換伺服單元(β 系列)	6-7-21
7.CONNECTION PIN ASSIGNMENT 腳位連接分配		

7.1 SIGNAL I/O 信號之輸入/輸出	7-1-1
7.1.1 MAIN OPERATOR'S PANEL PIN ASSIGNMENT 主操作面板腳位之分配.	
7.1.1.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINE	
FOR FV56T/FV56A/FV56T+APC/FV56A+APC 機種	7-1-1
7.1.1.2 FOR 20/24/30-TOOLS MACHINE	
FOR 20/24/30-TOOLS 機種.....	7-1-2
7.1.1.3 MAGAZINE PANEL LAYOUT FOR 30-TOOLS MACHINE	
刀庫操作面板配線，30/40 刀機種	7-1-3
7.1.2 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(MR1)	
I/O 模組到操作面盤轉播站(MR1)	7-1-4
7.1.3 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(MR2)	
I/O 模組到操作面盤轉播站(MR2)	7-1-6
7.1.4 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(MR3)	
I/O 模組到操作面盤轉播站(MR3)	7-1-8
7.1.5 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(P11)	
I/O 模組到操作面盤轉播站(P11)	7-1-10
7.1.6 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(P12)	
I/O 模組到操作面盤轉播站(P12)	7-1-11
7.1.7 OPERATOR PANEL I/O DISTRIBUTION BOARD	
<-> TOOL NUMBER DISPLAY(P14)	
操作面盤轉播站到刀號顯示器(P14)	7-1-12
7.1.8 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(JA3)	
I/O 模組到操作面盤轉播站(JA3).....	7-1-13
7.1.9 OPERATOR PANEL I/O DISTRIBUTION BOARD <->MPG(P17)	
操作面盤轉播站到手輪(P17)	7-1-13
7.1.10 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(P21)	
I/O 模組到操作面盤轉播站(P21)	7-1-14
7.1.11 OPERATOR PANEL I/O DISTRIBUTION BOARD (POWER)	
操作面盤轉播站(POWER).....	7-1-14
7.1.12 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(OP1)	
I/O 模組到操作面盤轉播站(OP1)	7-1-14
7.1.13 I/O MODULE <-> OPERATOR PANEL I/O DISTRIBUTION BOARD(OTHER)	
I/O 模組到操作面盤轉播站(OTHER)	7-1-15
7.2 MS I/O DISTRIBUTION BOARD<-> SIGNAL I/O	
MS 板信號之輸入/輸出	7-2-1
7.2.1 I/O MODULE <-> MS I/O DISTRIBUTION BOARD(MS1)	
I/O 模組到 MS 盤轉播站(MS1).....	7-2-1

7.2.2 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS2)	
I/O 模組到 MS 盤轉播站(MS2).....	7-2-3
7.2.3 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS3)	
I/O 模組到 MS 盤轉播站(MS3).....	7-2-5
7.2.4 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS4)	
I/O 模組到 MS 盤轉播站(MS4).....	7-2-7
7.2.5 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(CHE2)	
I/O 模組到 MS 盤轉播站(CHE2).....	7-2-9
7.3 TERMINAL I/O PCB CONNECTOR PIN ASSIGNMENT	
輸入／輸出 PCB 板接頭端子腳位分配.....	7-3-1
7.3.1 CONNECTOR I1 I1 接頭.....	7-3-1
7.3.2 CONNECTOR I2 I2 接頭.....	7-3-1
7.3.3 CONNECTOR O1 O1 接頭.....	7-3-2
7.3.4 CONNECTOR O2 O2 接頭.....	7-3-2
7.3.5 CONNECTOR O3 O3 接頭.....	7-3-3
7.3.6 CONNECTOR O4(#2 POT ROTATION MOTOR) O4 接頭.....	7-3-4
7.3.7 CONNECTOR O4(#6 MAGZINE MOTOR) O4 接頭.....	7-3-5
7.3.8 CONNECTOR EMG EMG 接頭.....	7-3-6
7.3.9 CONNECTOR Z-BRAKE Z-BRAKE 接頭.....	7-3-7
7.3.10 CONNECTOR POWER POWER 接頭.....	7-3-7
7.3.11 CONNECTOR LUBE LUBE 接頭.....	7-3-8
7.3.12 CONNECTOR ATC ATC 接頭.....	7-3-8
7.3.13 CONNECTOR CHE3 CHE3 接頭.....	7-3-8
7.3.14 CONNECTOR CHE4 CHE4 接頭.....	7-3-8
7.3.15 CONNECTOR SPARE O SPARE O 接頭.....	7-3-9
7.3.16 CONNECTOR SPARE I SPARE I 接頭.....	7-3-9
7.3.17 MS PLATE<->EXTERNAL I/O PCB(APC1)	
MS 板<->外部 I/O 板(APC1).....	7-3-10
7.3.18 MS PLATE<->EXTERNAL I/O PCB(APC2)	
MS 板<->外部 I/O 板(APC2).....	7-3-10
7.3.19 MS PLATE<->EXTERNAL I/O PCB(APC3)	
MS 板<->外部 I/O 板(APC3).....	7-3-11
7.3.20 MS PLATE<->EXTERNAL I/O PCB(P13X,P13Y,P13Z)	
MS 板<->軸向極限開關(P13X,P13Y,P13Z).....	7-3-12
7.3.21 HEAD LIMIT 頭部檢出.....	7-3-13
7.3.22 MAGAZINE LIMIT 刀庫檢出.....	7-3-13
7.4 AXIS SERVO MOTOR 軸向伺服馬達.....	7-4-1
7.4.1 FEEDBACK CONTROL(JF1,JF2,JF3<->MOTOR) 回授控制.....	7-4-1
7.4.2 VELOCITY CONTROL(JS1A,JS2A,JS3A,JS4A<->AMP) 速度控制....	7-4-2

7.4.3 A AXIS POWER CONTROL CONNECTOR A 軸電樞控制接頭.....	7-4-3
7.4.4 A AXIS FEEDBACK CONTROL CONNECTOR A 軸回授控制接頭.....	7-4-4
7.4.5 CONNECTION PIN ASSIGNMENT(FOR β6 SERVO MOTOR TYPE APC) 連接腳位置圖(β6 馬達 APC).....	7-4-5
7.4.6 SPINDLE POSITION CODER 主軸位置檢出器.....	7-4-6
7.4.7 CNC JA41<->SPM JA7B CNC JA41<->主軸驅動器 JA7B	7-4-7
7.4.8 DATA INPUT/OUTPUT 資料之輸入/輸出.....	7-4-8

A.APENDIX 附錄

A.1 THE FLOW CHART OF SAFETY DOOR FUNCTION 安全門功能使用流程圖	A-1
A.2 THE SERVICE M-CODE OF ATC STEP BY STEP 供服務人員使用之 M-CODE 換刀步驟	A-4
A.3 HOW TO USE PROGARE COOLANT NOZZLE FUNCTION 如何使用可程式噴嘴功能	A-5
A.4 β6 SERVO MOTOR PARAMETER SETTING(TP4) β6 伺服馬達參數設定(TP4)	A-9
A.5 ATC TYPE 7 SETTING ATC 7 設定.....	A-13
A.6 ALARM DISPLAY AND CORRESPONDING COUNTERMEASURES (WITH PMM SERVO UNIT) PMM 伺服器警報表.....	A-17
A.7 PMM β6 SERVO MOTOR (WITH APC TYPE) OPERATION 操作 PMM 伺服器(用與交換床台).....	A-29
A.8 N2 SERIES INVERTER DRIVE PARAMETER SETTING N2 系列變頻器參數設定	A-33
A.9 DIGITAL PRESSURE SWITCH SETTING 壓力檢出器設定	A-34
A.10 SPINDLE WARM UP SETTING 主軸暖機設定	A-36
A.11 SKF OIL AIR UNIT (SKF TOS-EX2 CONTROLLER DC24V-TYPE) SKF 遊憩潤滑單元(SKF TOS-EX2 控制盒 DC24V-型式).....	A-37
A.12 ATC TYPE#9 SETTING ATC#9 設定.....	A-38
A.13 CTS ALARM MESSAGE CTS 警報訊息.....	A-41
2020 BASE LIQUID OVERFLOW! 主油槽(底座)水位過高.....	A-41
2021 FILTER OBSTRUCTION B1-B2! 過濾器堵塞	A-42
2022 CTS OUT PRESSURE SWITCH! CTS 壓力檢出開關堵塞	A-43
2023 OUT FILTER OBSTRUCTION! CTS 過濾器堵塞	A-44
2024 CTS AUXILIARY LEVEL LOW! 副水箱(底座)水位過低.....	A-45

YCM
PLC MANUAL

TV146A

PLC:MBE3 R06
(FANUC MXP100i / MXP200i / 18iMB)

VERTICAL MACHINING CENTER
(FOR SHANK 30/40/50 MACHINE ONLY)

VMCPLCE196
R006