


YASNAC i80

CNC SYSTEM FOR MACHINE TOOLS

MAINTENANCE MANUAL

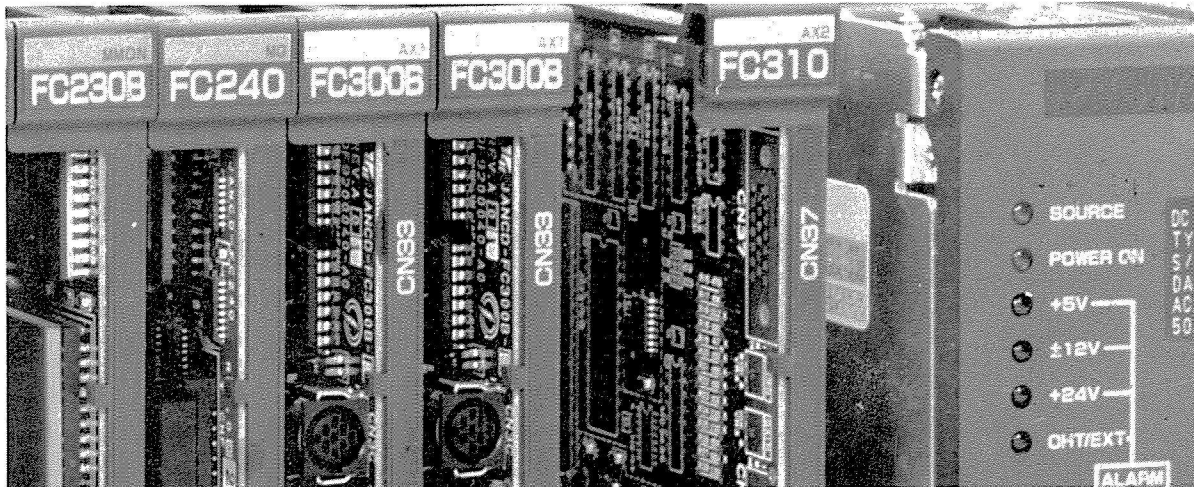

Before initial operation, read these instructions thoroughly, and retain for future reference.



YASKAWA

CONTENTS

1	OUTLINE	1
2	ROUTINE INSPECTION SCHEDULE	57
3	MAINTENANCE INSTRUMENTS	67
4	TROUBLESHOOTING	69
5	ADJUSTMENTS UPON INSTALLATION	135
6	MODULE/UNIT REPLACEMENT PROCEDURE ...	143
7	SETTING AND ADJUSTMENT OF EACH MODULE	197
8	OPERATIONS OF FIXED FILES ...	203

1

2

3

4

5

6

7

8

CONTENTS

	Page
1. OUTLINE	1
1.1 COMPONENTS AND INTERCONNECTIONS	2
1.2 COMPONENTS	11
2. ROUTINE INSPECTION SCHEDULE	57
2.1 ROUTINE INSPECTION	58
2.2 TAPE READER MAINTENANCE	59
2.3 CONTROL PANEL	60
2.4 AC SERVOMOTOR	62
2.5 BATTERY	63
3. MAINTENANCE INSTRUMENTS	67
4. TROUBLESHOOTING	69
4.1 TROUBLE IDENTIFICATION	71
4.1.1 RECOGNITION OF TROUBLE STATUS	71
4.1.2 RECOGNITION OF NC SYSTEM	72
4.2 TROUBLESHOOTING BY ALARM CODES	77
4.2.1 DISPLAY METHOD	77
4.2.1.1 ALARM INDICATION JOB	79
4.2.2 ALARMS 0010 AND 0011 (PARITY ERROR)	82
4.2.3 ALARMS 0016, 0017, 0018, 9016, 9017 AND 9018 (RS-232C ERROR)	83
4.2.4 ALARM 1099 (TEMPERATURE ALARM INSIDE THE PANEL)	88
4.2.5 ALARMS 2061 TO 2068 (ZERO POINT RETURN AREA ERROR)	89
4.2.6 ALARMS 2071 TO 2078, 2081 TO 2088 (REFERENCE POINT RETURN AREA ERROR)	90
4.2.7 ALARMS 2101 TO 2108 (P-SET ERROR)	91
4.2.8 ALARM 3000 (SERVO UNREADY)	92
4.2.9 ALARM 3001 (CONTROL NOT READY)	92
4.2.10 ALARM 3002 (EMERGENCY STOP)	93
4.2.11 ALARMS 3041 TO 3048 (EXCESSIVE POSITION LAG)	94
4.2.12 ALARMS 3051 TO 3054 (EXCESSIVE POSITION LAG)	95
4.2.13 ALARMS 3061 TO 3068 (MOTOR OVERLOAD)	96
4.2.14 ALARMS 3081 TO 3088 (PG DISCONNECTION ERROR)	96
4.2.15 ALARMS 3091 TO 3094 (SPINDLE PG DISCONNECTION ERROR)	97
4.2.16 ALARMS 3121 TO 3128 (EXCESSIVE SPEED)	97
4.2.17 ALARMS 3141 TO 3148 (PREVENTION OF UNCONTROLLED RUNNING) ..	98
4.2.18 ALARMS 3161 TO 3168 (ABSOLUTE ERRORS)	98
4.2.19 ALARMS 3181 TO 3188 (POSITION ERRORS)	99

CONTENTS (Cont'd)

	Page
4.2.20 ALARMS 3201 TO 3208 (SERVODRIVE UNIT COMMUNICATION ERRORS)	99
4.2.21 ALARMS 3301 TO 3305 (OVERCURRENT)	100
4.2.22 ALARMS 3311 TO 3315 (MCCB TRIP)	100
4.2.23 ALARMS 3321 TO 3325 (REGENERATIVE ERROR)	100
4.2.24 ALARMS 3331 TO 3335 (OVERVOLTAGE)	101
4.2.25 ALARMS 3341 TO 3345 (UNDERVOLTAGE)	101
4.2.26 ALARMS 3351 TO 3355 (HEAT SINK OVERHEAT)	101
4.2.27 ALARMS 3361 TO 3365 (WIRE BREAK IN CURRENT INSTRUCTION CABLE)	102
4.2.28 ALARMS 3371 TO 3375 (MISSING PHASE)	102
4.3 TROUBLESHOOTING WITHOUT ALARM CODES	103
4.3.1 POWER CANNOT BE SUPPLIED	103
4.3.2 SOLUTION TO ERRORS DETECTED IN SELF-DIAGNOSIS	104
4.3.2.1 SELF-DIAGNOSIS FUNCTIONS	104
4.3.2.2 DETAILS OF FUNCTION	105
4.3.3 CRT SCREEN DOES NOT DISPLAY	113
4.3.4 HANDLE MODE OPERATION FAULTY	113
4.3.5 MANUAL JOG MODE OPERATION FAULTY	115
4.3.6 MANUAL RAPID MODE OPERATION FAULTY	117
4.3.7 MANUAL ZERO RETURN OPERATION FAULTY	119
4.3.8 CYCLE START FAILURE	120
4.3.9 OPERATION IS NOT AVAILABLE WITH G01, G02, OR G03	121
4.3.10 SPINDLE DOES NOT ROTATE	122
4.3.11 9" CRT SCREEN IS DARK	123
4.3.12 EDIT DOES NOT FUNCTION	124
4.3.13 FIN WAIT OCCURS BY SPINDLE RELATED INSTRUCTION	125
4.3.14 SKIP FUNCTION (G31) OPERATION FAILURE	126
4.3.15 TAPE MODE DOES NOT FUNCTION	127
4.4 POWER SUPPLY VOLTAGE CHECK	128
4.4.1 CHECK AT POWER SUPPLY VOLTAGE	128
4.4.2 INDICATION OF LAMP OF POWER SUPPLY UNIT	129
4.4.3 CHECK DC POWER SUPPLY VOLTAGE	129
4.5 STATUS DISPLAY BY SELF-DIAGNOSIS FUNCTION (DGN)	130
4.5.1 OUTLINE OF DISPLAY	130
4.5.2 DISPLAYING INPUT/OUTPUT SIGNALS	131
5. ADJUSTMENTS UPON INSTALLATION	135

CONTENTS (Cont'd)

	Page
6. MODULE/UNIT REPLACEMENT PROCEDURE	143
6.1 NC RACK	144
6.1.1 POWER SUPPLY UNIT (MODEL CPS-12N, MODEL CPS-16F)	144
6.1.2 MODEL JANCD-FC100B	146
6.1.3 MODEL JANCD-FC190-1	148
6.1.4 MODEL JANCD-FC200	150
6.1.5 MODEL JANCD-FC210-1	152
6.1.6 MODEL JANCD-FC222/FC224	154
6.1.7 MODEL JANCD-FC230B	156
6.1.8 MODEL JANCD-FC240	158
6.1.9 MODEL JANCD-FC300B-3	160
6.1.10 MODEL JANCD-FC250 (INTEXB BOARD: STANDARD SPECIFICATINS)	162
6.1.11 MODEL JANCD-FC251 (INTEXB BOARD: HIGH-SPEED SPECIFICATIONS) ..	164
6.1.12 MODEL JANCD-FC250-1, 2 (MOTION BOARD)	166
6.1.13 MODEL JANCD-FC310-1	168
6.1.14 MODEL JANCD-FC400	170
6.1.15 MODEL JANCD-FC410	172
6.1.16 MODEL JANCD-FC420	174
6.1.17 MODEL JANCD-FC430	176
6.1.18 MODEL JANCD-FC440	178
6.1.19 BACK BOARD (MODELS JANCD-FC001, -FC002, -FC050, -FC052)	180
6.1.20 11-SLOT BACK BOARD (MODEL JANCD-FC006)	182
6.2 MACHINE CONTROL STATION	184
6.2.1 9" AMGC CONTROL PANEL (MODEL JZNC-IOP01)	184
6.2.1.1 MODEL JANCD-FC900B	184
6.2.1.2 MODEL JANCD-FC901	187
6.2.1.3 MODEL JANCD-FC903-1	188
6.2.1.4 9" MONOCHROME GRAPHIC CRT UNIT (MDT948B-3B)	189
6.2.1.5 KEYBOARD (MODEL DF8203788)	190
6.2.2 14" ACGC CONTROL PANEL (MODEL JZNC-IOP11)	191
6.2.2.1 MODEL JANCD-FC950-1	191
6.2.2.2 MODEL JANCD-FC951	193
6.2.2.3 14" COLOR GRAPHIC CRT UNIT (MODEL TX1424AD)	194
6.2.2.4 KEYBOARD (MODEL DF8203921)	195
7. SETTING AND ADJUSTMENT OF EACH MODULE	197
8. OPERATIONS OF FIXED FILES	203
8.1 TYPES OF FIXED FILES	204
8.2 DISPLAY AND WRITING OF FIXED FILES	205