



**YCM-MV66/76/86/106A**

**MECHANICAL MANUAL**

**VERTICAL MACHINING CENTER**

**YEONG CHIN MACHINERY INDUSTRIES CO., LTD.**

HEADQUARTERS : 888, HOMU RD., HSINCHUANG  
SHENKANG, TAICHUNG, TAIWAN

TEL : 886-4-25623211 FAX : 886-4-25626479 . 886-4-25628399  
SERVICE TEL : 886-4-25612965 FAX : 886-4-25612966

E-mail : sales@YCMCNC.com

Web site : <http://www.YCMCNC.com>

ENDEAVORING TO CONFORM THE ISO 14001 ENVIRONMENTAL PROTECTION POLICIES;  
IN PURSUIT OF EXCELLENCE; ALWAYS IMPROVING AND REFINING.

**YCM-MV66/76/86/106A**

**MECHANICAL MANUAL**

**VERTICAL MACHINING CENTER**

**OPV106AM01**

## CONTENTS

PREFACE	PAGE
<b>CHAPTER 1</b>	
<b>INSTRUCTION FOR SAFETY</b>	
1-1 Basic introduction for safe operation.....	1-1~1-2
1-2 Symbols and designations connected with safety.....	1-3
1-3 Safety precautions .....	1-4
1-3-1 Basic operating practices.....	1-4
1-3-2 Before switching on.....	1-5
1-3-3 After control power switch has been turned on.....	1-5
1-3-4 Routine inspections.....	1-6
1-3-5 Warm up.....	1-6
1-3-6 Preparations .....	1-6
1-3-7 Operation.....	1-7
1-3-8 Completing a job.....	1-7
1-3-9 Safety devices .....	1-8
1-3-10 Maintenance operation preparations.....	1-8
1-3-11 Maintenance operation .....	1-8
1-3-12 Until operation is begin after maintenance .....	1-9
1-4 Danger areas .....	1-10
1-4-1 Area with moving parts .....	1-10~1-11
1-4-2 High voltage areas.....	1-12~1-13
1-5 Safety devices.....	1-14~1-15
1-5-1 Warning plates position.....	1-16
1-5-2 Instruction plate position .....	1-17
1-5-3 I.D name plate of machine .....	1-18

## CHAPTER 2 DESCRIPTION OF MACHINE

2-1	Function and fields of application .....	2-1
2-2	MV86A/MV106A Specification.....	2-2~2-3
2-3	Accessories.....	2-4
2-4	Airbone noise .....	2-5
2-5	Outview dimensions .....	2-6
2-5-1	Outview dimension .....	2-6~2-8
2-5-2	Main parts of machine.....	2-9
2-6	Dimensions of working space.....	2-10
2-6-1	X,Y-Axis travel .....	2-10~2-11
2-6-2	Z-Axis travel.....	2-12~2-13
2-6-3	A.T.C. travel.....	2-14~2-15
2-7	Outview dimension(option).....	2-16~2-17

## CHAPTER 3 DESIGN AND FEATURES

3-1	Spindle.....	3-1~3-2
3-1-1	Shank & Pull stup .....	3-3
3-1-2	Spindle output diagram .....	3-4~3-7
3-2	Feed unit structure design .....	3-8
3-2-1	X axis.....	3-8
3-2-2	Y axis.....	3-9
3-2-3	Z axis.....	3-10
3-2-4	Table size & T slot dimensions .....	3-11
3-2-5	Guide ways.....	3-12
3-3	X,Y,Z travel orientation devices .....	3-13
3-3-1	X,Y axis .....	3-13
3-3-2	Z axis.....	3-14
3-4	A.T.C.....	3-15
3-4-1	A.T.C system .....	3-15
3-4-2	A.T.C cycle .....	3-16~3-20

## **CHAPTER 4 PREPARATION BEFORE TRANSPORT AND INSTALLATION**

4-1	Minimum space for foundation and maintenance.....	4-1
4-2	Power supplies.....	4-1
4-2-1	Electric.....	4-1
4-2-2	Grounding.....	4-1
4-2-3	Air.....	4-1
4-2-4	Cutting fluid.....	4-1
4-3	Installation environment.....	4-2~4-3

## **CHAPTER 5 TRANSPORT AND INSTALLATION**

5-1	Packing.....	5-1
5-2	Safety precautions.....	5-1
5-3	Machine lifting.....	5-2~5-5
5-4	Temporary storage.....	5-6
5-5	Machine installation.....	5-6~5-7
5-6	Disposal after installation.....	5-7
5-7	Foundation drawing.....	5-8~5-10

## **CHAPTER 6 PREPARATION BEFORE MACHINE TRIAL RUN**

6-1	The lifting jigs and fixtures removing.....	6-1
6-2	Cleaning machine.....	6-1
6-3	Leveling machine.....	6-1~6-2
6-4	Checking before operation.....	6-3
6-5	Warming up of spindle.....	6-4

5-5 MACHINE INSTALLATION ..... 5-6 ~ 5-7  
 5-5-1 Disposal after installation..... 5-7  
 5-5-2 FOUNDATION DRAWING ..... 5-8 ~ 5-9

**CHAPTER 6**

**PREPARATION BEFOR MACHINE TRIAL RUN**

6-1 THE LIFTING JIGS AND FIXTURES REMOVING..... 6-1  
 6-2 CLEANING MACHINE ..... 6-1  
 6-3 LEVELING MACHINE..... 6-1 ~ 6-2  
 6-4 CHECKING BEFORE OPERATION..... 6-3  
 6-5 WARMING UP OF SPINDLE ..... 6-4

**CHAPTER 7**

**MACHINE MAINTENANCE**

7-1 Arrangement of equipments ..... 7-1  
 7-2 MAINTENANCE AREA ..... 7-2  
 7-3 THE USUAL MAINTENANCE..... 7-3 ~ 7-4  
 7-4 MECHANICAL CAUTIONS ..... 7-5 ~ 7-6  
     7-4-0 Anytime when using the machine, should pay attention to the following points 7-6  
     7-4-1 PREPARING FOR OPERATION..... 7-7  
     7-4-2 PRECAUTIONS REGARDING SAFETY ..... 7-8  
     7-4-3 COOLANT THROUGH SPINDLE SYSTEM..... 7-9~7-14  
 7-5 PNEUMATIC AND HYDRAULIC SYSTEM ..... 7-15  
     7-5-1 Pneumatic unit..... 7-15 ~ 7-18  
     7-5-2 PNEUMATIC HYPRAULIC MAINTENANCE SEAL..... 7-19 ~ 7-21  
 7-6 CONTROL VALVES AND LIMIT SWITCHES ..... 7-22 ~ 7-24  
     7-6-1 Additional information to be given on components..... 7-25  
 7-7 TROUBLES AND REMEDIES ..... 7-26 ~ 7-27  
 7-8 MACHINE LUBRICATION..... 7-28  
     7-8-1 Lubrication of guideways..... 7-28  
     7-8-2 Maintenance of electric intermittent pump ..... 7-29~ 7-30  
     7-8-3 LUBRICATION SYSTEM DRAW ..... 7-31  
     7-8-4 Trouble shooting ..... 7-32 ~ 7-33  
 7-9 ADJUSTMENT OF TAPERED GIBS ..... 7-34  
 7-10 TENSION ADJUSTMENT OF THE SPINDLE DRIVE BELT ..... 7-35 ~ 7-36  
 7-11 Operations of spindle oil cooling system ..... 7-37