

YCM
OPERATING MANUAL

TV146A

(FANUC 18i -MB / MXP-100i B / MXP-200i B)

MACHINING CENTER

OPVMCP23E

R003

CONTENTS

I. MACHINE OPERATION

1. OPERATIONAL SAFETY	1-2
1.1 Operational Safety for CNC Machine	1-2
1.2 Tips for High Speed Machining	1-4
1.3 Tips for Spindle Thermal Compensation function	1-5
2. PROCEDURE OF STARTING AND STOPPING THE MACHINE	1-6
2.1 Procedure of Starting the Machine	1-6
2.2 Procedure of Stopping the Machine	1-8
2.3 Replacing CNC Battery for Memory Back-Up	1-9
2.4 Replace Battery for Absolute Pulse Coder	1-10
3. OPERATING PANEL	1-11
3.1 Vertical Type	1-11
3.2 Horizontal Type	1-12
3.3 Description of the Buttons on the Operating Panel	1-13
3.3.1 Function.....	1-13
3.3.2 Auxiliary	1-15
3.3.3 Spindle function	1-16
3.3.4 Axes	1-16
3.3.5 Coolant	1-17
3.3.6 Conveyor	1-17
3.3.7 Safety	1-18
3.3.8 Indication	1-18
3.3.9 Cycle	1-19
3.3.10 Emergency	1-19
3.3.11 Mode	1-20
3.3.12 Spindle speed	1-20
3.3.13 Feed	1-21
3.3.14 Jog	1-21
3.3.15 Load	1-22
3.3.16 Edit lock	1-22
3.3.17 Light	1-22
3.3.18 Option function	1-22
3.3.19 MPG (Manual Pulse Generator)	1-26

3.3.20 Tool/MAG	1-26
3.3.21 ATC Operating Panel	1-27
3.3.22 APC Operating Panel	1-28
4. MANUAL OPERATION	1-30
4.1 Axis Feed	1-30
4.1.1 Jog Feed	1-30
4.1.2 Handle Feed	1-31
4.2 Manual Zero Return	1-32
4.3 Spindle Start and Stop	1-33
4.3.1 Spindle Start by MDI	1-33
4.3.2 Spindle Start by JOG	1-33
4.3.3 Spindle Stop	1-34
4.4 Insert/Remove Tools Manually	1-35
4.4.1 At Spindle Side	1-35
4.4.2 At magazine Side (Simple Disk Type)	1-36
4.4.3 At magazine Side (Arm Type)	1-37
4.4.4 Special Tools (Arm Ttype)	1-39
5. AUTOMATIC OPERATION	1-40
5.1 Automatic Operation Mode	1-40
5.1.1 Memory Operation	1-40
5.1.2 MDI Operation	1-40
5.2 Stopping Automatic Operation	1-42
5.2.1 Stopping with Commands	1-42
5.2.1 Stopping Manually	1-42
6. HIGH SPEED HIGH ACCURACY MACHINING CONTROL FUNCTION	1-44
6.1 AI Advanced Preview Control (AI-APC)	1-44
6.2 AI NANO Contour Control (AI NANO CC)	1-45
6.3 AI NANO High Precision Contour Control (AI NANO HPCC)	1-46
6.4 Conditions for High Speed High Accuracy Control	1-47
6.5 Alarm Message	1-48
6.6 NURBS Function (Optional Function)	1-49
6.6.1 Features and Advantages	1-49
6.6.2 Definition	1-50
6.6.3 Format	1-51
6.6.4 Notation	1-52
6.6.5 Example	1-53

II . NC OPERATION

1. PROGRAMMING PROCEDURE	2-2
2. PROGRAM CONFIGURATION	2-3
2.1 Program Configuration	2-3
2.2 Subprogram Call	2-5
2.3 Major Functions and Addresses	2-6
3. SCREEN AND KEYS	2-7
3.1 Introduction about Screen	2-7
3.2 MDI Panel	2-8
3.3 Description about MDI Keys	2-9
3.3.1 MDI Operation	2-10
3.3.2 CNC State Display	2-11
4. PARAMETER SETTING	2-14
4.1 Parameter Writing Enabled	2-14
4.2 Setting Method	2-15
4.3 Parameter Writing Disabled	2-18
5. PMC DATA SETTING	2-19
5.1 TIMER Setting	2-19
5.2 COUNTER Setting	2-22
5.2.1 Other (DATA) Setting	2-24
5.3 KEEP RELAY Setting	2-26
6. DISPLAYING RUN TIME AND PART COUNT	2-31
6.1 Operation and Display	2-31
6.2 Setting Method	2-32
7. MIRROR IMAGE	2-34
8. EDITING PROGRAMS	2-35
8.1 Program Number Search	2-35
8.2 New Program	2-36
8.3 Deleting Programs	2-37
8.4 Search The Position Of A Command	2-8
8.5 Edit Keys For Programming	2-39
8.5.1 Inserting a Word	2-39
8.5.2 Altering a Word	2-40
8.5.3 Deleting a Word	2-41

9. EXTENDED PART PROGRAM EDITING FUNCTION	2-44
9.1 Copy	2-44
9.1.1 Copying an Entire Program	2-44
9.1.2 Copying Part of a Program	2-45
9.2 Moving Part of a Program	2-46
9.3 Merging a Program	2-47
9.4 Replacement of Words and Addresses	2-48
10. GRAPHICS FUNCTION	2-50
10.1 Graphic Display	2-50
10.2 Dynamic Graphics Display	2-52
10.2.1 Path Graph	2-52
10.2.2 Dynamic Graphics Display	2-56
11. AUTOMATIC ERASE SCREEN DISPLAY	2-65
11.1 Manual Method	2-65
11.2 Automatic Method	2-65
12. HELP FUNCTION	2-66
 III. PROGRAMMING	
1. DESCRIPTION ABOUT ALL FUNCTIONS	3-2
1.1 G Function	3-2
1.1.1 G Code List	3-3
1.2 F Function	3-6
1.3 S Function	3-7
1.4 T Function	3-9
2. DESCRIPTION ON G CODES AND ELATIVE FORMATS	3-10
2.1 Positioning (G00)	3-10
2.2 Linear Interpolation (G01)	3-12
2.3 Optional Angle Chamfering and Corner Rounding	3-13
2.4 Circular Interpolation (G02/G03)	3-14
2.5 Helical Interpolation (G02/G03)	3-18
2.6 Dwell (G04)	3-23
2.7 Cylindrical Interpolation (G07.1/G107)	3-24
2.8 Exact Stop (G09)	3-26
2.9 Programmable Data Input (G10)	3-27
2.9.1 Tool length offset/radius offset	3-27
2.9.2 Workpiece Coordinate System Data	3-28

2.10 Programmable Parameter Input (G10/G11)	3-30
2.11 Polar Coordinate Command (G15/G16)	3-32
2.12 Plane Selection (G17/G18/G19)	3-33
2.13 Inch and Metric Conversion (G20/G21)	3-34
2.14 Return to Reference Position (G28)	3-36
2.15 Return from Reference Position (G29)	3-37
2.16 2nd, 3rd and 4th Reference Position Return (G30)	3-38
2.17 Cutter Dimensional Compensation (G40/G41/G42)	3-39
2.18 Tool Length Offset (G43/G44/G49)	3-40
2.19 Scaling (G50/G51)	3-41
2.20 Programmable Mirror Image (G50.1/G51.1)	3-43
2.21 Local Coordinate System Setting (G52)	3-44
2.22 Machine Coordinate System Selection (G53)	3-45
2.23 Workpiece Coordinate System Selection (G54~G59)	3-46
2.23.1 Standard Workpiece Coordinate System (G54~G59)	3-46
2.23.2 Additional Workpiece Coordinate System (G54.1 P1 ~ P48 ~ P300)	3-47
2.24 Single Direction Positioning (G60)	3-48
2.25 Exact Stop Mode (G61)	3-49
2.26 Automatic Override for Inner Corners (G62)	3-50
2.27 Tapping Mode (G63)	3-51
2.28 Coordinate System Rotation (G68/69)	3-52
2.29 Canned Cycle (G73, G74, G76, G80~G89)	3-53
2.30 High Speed Peck Drilling Cycle (G73)	3-55
2.31 Counter Tapping Cycle (G74)	3-57
2.32 Fine Boring Cycle (G76)	3-58
2.33 Drilling Cycle, Spot Boring Cycle (G81)	3-60
2.34 Drilling Cycle or Counter Boring Cycle (G82)	3-61
2.35 Peck Drilling Cycle (G83)	3-62
2.36 Tapping Cycle (G84)	3-64
2.37 Boring Cycle (G85)	3-65
2.38 Boring Cycle (G86)	3-66
2.39 Back Boring Cycle (G87)	3-67
2.40 Boring Cycle (G88)	3-69
2.41 Boring Cycle (G89)	3-70
2.42 Absolute and Increment Command (G90/G91)	3-71
2.43 Setting for Work Coordinate System (G92)	3-72

2.44 Return to Initial Point or R Point in Canned Cycle (G98/G99).....	3-73
3. M FUNCTIONS AND DESCRIPTION ON THE FORMAT	3-74
3.1 M Function	3-74
3.2 M Function List	3-75
3.3 M00 Program Stop	3-78
3.4 M01 Optional Stop	3-79
3.5 M02 Program Finished	3-80
3.6 M03/M04/M05 Spindle CW/CCW/Stop	3-81
3.7 M06 Tool Change	3-83
3.7.1 Simple Disk Type	3-83
3.7.2 Arm Type	3-84
3.8 M07/M08/M09 Cutting Oil Mist/Coolant	3-86
3.9 M10/M11 Automatic Door	3-87
3.10 M12 Coolant Through Spindle/Oil Hole	3-88
3.11 M13/M16 Ceiling Coolant	3-89
3.12 M14/M15 Cutting Air Blast	3-90
3.13 M29 Rigid Tapping	3-91
3.14 M30 Program finished and return	3-93
3.15 M94/M95/M96 Mirror Image	3-94
3.16 M98/M99 Sub-program Calling	3-95
3.17 M198 Sub-program Calling	3-96
4. MACRO B	3-97
4.1 MACRO Calling	3-97
4.2 The Main MACRO Program	3-102
4.3 Examples	3-110
IV. FUNCTION	
1. Memory Card Operation	4-2
1.1 Displaying the Directory	4-2
1.2 Searching for a File	4-3
1.3 Reading a File	4-4
1.4 Writing Files	4-6
1.5 Deleting a File	4-8
1.6 DNC Operation	4-9
1.6.1 Searching for a File	4-9
1.6.2 Executing a File	4-10

2. DATA INPUT / OUTPUT ON THE ALL IO SCREEN (USING MEMORY CARD) .	4-11
2.1 Program Input / Output	4-11
2.1.1 Displaying the Directory	4-11
2.1.2 Searching for a File	4-12
2.1.3 Inputting a Program	4-13
2.1.4 Outputting Programs	4-15
2.1.5 Deleting a File	4-17
2.2 Parameter Input / Output	4-18
2.2.1 Searching for a Parameter	4-18
2.2.2 Inputting a Parameter	4-19
2.2.3 Outputting Parameters	4-20
2.2.4 Deleting a File	4-21
2.3 Data Input / Output of Offset	4-22
2.3.1 Searching for a File	4-22
2.3.2 Inputting Offset Data	4-23
2.3.3 Outputting Offset Data	4-24
2.3.4 Deleting a File	4-25
2.4 Input / Output of Custom Macro Common Variables	4-26
2.4.1 Searching for a File	4-26
2.4.2 Outputting Custom Macro Common Variables	4-27
2.4.3 Deleting a File	4-28
2.5 Data Input / Output of Pitch Error Compensation	4-29
2.5.1 Searching for a File	4-29
2.5.2 Inputting Pitch Error Compensation Data	4-30
2.5.3 Outputting Pitch Error Compensation Data	4-32
2.5.4 Deleting a File	4-33
2.6 Data Input / Output of a Workpiece Coordinate System	4-34
2.6.1 Searching for a File	4-34
2.6.2 Inputting Data of a Workpiece Coordinate System	4-35
2.6.3 Outputting Data of a Workpiece Coordinate System	4-37
2.6.4 Deleting a File	4-38
3. DATA SERVER	4-39
3.1 Configuration of the CNC Control System	4-39
3.1.1 CNC Control System	4-39
3.1.2 Configuration Diagram of the System	4-40
3.1.3 Internal Part Layout of the Data Server	4-40

3.1.4 Wiring of the RJ-45	4-41
3.2 Network Establishment at the PC Side	4-42
3.2.1 Configuration of the Network	4-42
3.2.2 Peripheral Equipments	4-43
3.2.3 Installation of the Network Board and Parameter Settings	4-43
3.2.4 TCP/IP Setting	4-48
3.2.5 WFPD Software setting	4-52
3.3 Parameter Setting at NC Side	4-55
3.3.1 Relative parameters	4-55
3.3.2 ETHERNET Parameter Setting	4-56
3.3.3 Test on Connection	4-58
3.4 HD-DIR Operation	4-60
3.4.1 List of Soft Key Functions	4-60
3.4.2 Format of a file name	4-61
3.4.3 Switching Data Server Modes (STORAGE/FTP mode)	4-62
3.4.4 Formatting the Hard Disk	4-63
3.4.5 Checking the Hard Disk	4-64
3.4.6 Displaying the File List in the Hard Disk	4-65
3.4.7 Searching for a File in Hard Disk	4-66
3.4.8 DNC operation	4-67
3.4.9 Copying a File in Hard Disk	4-68
3.4.10 Changing a File Name in Hard Disk	4-69
3.4.11 Deleting a File in Hard Disk	4-70
3.4.12 Executing a File from Hard Disk	4-71
3.4.13 Executing Files from Hard Disk	4-72
3.4.14 Creating a Directory	4-73
3.4.15 Moving to Another Directory	4-74
3.4.16 Shift Display of a Directory of Down Level to the Directory of Up Level	4-75
3.4.17 Deleting a Directory of Down Level	4-76
3.4.18 Executing Files in Hard Disk	4-77
3.4.19 Executing Files in Hard Disk	4-79
3.4.20 DNC operation by a subprogram call M198 D (under storage mode)	4-81
3.5 HOST Operation	4-86
3.5.1 List of Soft Key Functions	4-86
3.5.2 Displaying a List of Host Files	4-87
3.5.3 Searching for a Host File	4-88

3.5.4 DNC operations (under FTP mode)	4-89
3.5.5 DNC Operation by Subprogram Call M198H (under FTP Mode)	4-90
3.5.6 Deleting a Host File	4-93
3.5.7 Executing a Host File (GET)	4-94
3.5.8 Executing Host Files (MGET)	4-95
3.5.9 Executing Host Files (LIST-GET)	4-96
3.6 Data Input/Output	4-98
3.6.1 Program	4-99
3.6.2 Parameter	4-102
3.6.3 Offset Data	4-104
3.6.4 Workpiece Coordinate System	4-106
3.6.5 Custom Macro Common Variables	4-108
3.6.6 Pitch Error Compensation Data	4-111
3.6.7 Operation History Data	4-113
4. FUNCTION OF PROGRAM RESTART	4-115
4.1 Program in NC Memory	4-115
4.2 Program in DATA SERVER	4-117
4.3 Program in MEMORY CARD	4-121
5. TOOL LIFE MANAGEMENT FUNATION	4-125
5.1 Parameter Setting	4-125
5.2 Format	4-126
5.3 Operation Manner	4-127
5.4 Clearing the Life Setting	4-128
6. STAMPING THE MACHINING TIME (Function of the 18i B controller)	4-129
6.1 Machining Time Display	4-129
6.2 Stamping the Machining Time	4-130
V. APPENDIX	
A. SAFE-GUARDS (Flow chart)	5-2
B. AUTOMATIC TOOL LENGTH MEASUREMENT (ATLM)	5-5
B1. Setting Up	5-5
B2. Commanding Format	5-6
B3. MACRO Variables	5-7
B4. Related Parameters	5-8
B5. MACRO Body	5-8
B6. Program Example	5-12

B6.1 The Positive Tool Length Measure	5-12
B6.2 The Negative Tool Length Measure	5-12
C. AUTOMATIC PALLET CHANGE (APC)	5-13
C1. Shuttle Type	5-13
C1.1 Rack Type	5-13
C1.1.1 APC Layout and Operating Panel	5-13
C1.1.2 The Procedure to set the Coordinate of the APC Reference Points	5-14
C1.1.3 M Code	5-15
C1.1.4 APC MACRO Program	5-15
C1.1.5 Manual Operation	5-18
C1.1.6 Automatic Operation	5-19
C1.2 Arm Type	5-21
C1.2.1 APC Layout and Operating Panel	5-21
C1.2.2 The Procedure to set the Coordinate of the APC Reference Points ...	5-22
C1.2.3 M code	5-23
C1.2.4 APC MACRO Program	5-23
C1.2.5 Automatic Operation	5-26
C1.2.6 Returning Operation After APC Interruption	5-27
C2. PMM Axis Rotary Type	5-29
C2.1 APC Operating Panel	5-29
C2.2 The Procedure to set the Coordinate of the APC Reference Points	5-30
C2.3 Manual Operation	5-30
C2.4 Automatic Operation	5-31
C3. Hydraulic Rotary Type	5-32
C3.1 APC Operating Panel	5-32
C3.2 The Procedure to set the Coordinate of the APC Reference Points	5-32
C3.3 M Code	5-32
C3.4 Manual Operation	5-32
C3.5 Automatic Operation	5-33
C4. Hydraulic Shuttle Type	5-35
C4.1 APC Operating Panel	5-35
C4.2 The Procedure to set the Coordinate of the APC Reference Points	5-35
C4.3 M Code	5-36
C4.4 APC MACRO Program	5-36
C4.5 Manual Operation	5-38
C4.6 Automatic Operation	5-42

D. SETTING FOR SPINDLE WARMING UP	5-43
E. TROUBLE SHOOTING.....	5-45
E1. EXTERNAL ALARM MESSAGE	5-45
1001 SAFETY DOOR NEED CLOSE!	5-44
1003 SPINDLE MOTOR ALARM!	5-45
1004 SPINDLE GEAR SHIFT ALARM!	5-46
1005 ATC NOT READY! (FOR ATC 24T、30T、32T、40T)	5-48
1007 TF ≤ 0 COMMAND ERROR!	5-51
1008 TF IS NOTHING IN TOOL BOX!	5-51
1009 SERVO MOTOR ALARM!	5-52
1010 SERVO MOTOR BATTERY ALARM!	5-52
1011 MAG (C0) SETTING ERROR!	5-53
1012 POT (C2) SETTING ERROR!	5-53
1013 DOUBLE TOOL DETECTION!	5-54
1014 SP.ORI ALARM!	5-55
1015 MOTOR OVERLOAD!	5-56
1016 SP. TOOL (D440) SETTING ERROR!	5-57
1018 M6 WITHOUT TF ALARM!	5-57
1019 M6 SWAP POSITION MISSED!	5-58
1020 SP.COOLING / LUBRICATION SYSTEM FAILED!	5-60
1021 TOOL MEASURE ALARM	5-61
1022 TOOL LIFE EXHAUST	5-62
1023 MAG NOT INPOSITION!	5-63
1026 JIG NEED CLAMP!	5-65
1027 AIR PRESSURE FAILED	5-70
1028 ATC (D52) SETTING ERROR	5-71
1029 SP TOOL CLAMPING FAILED!	5-72
1030 MAG (D51) SETTING ERROR!	5-73
1031 TOOL SEARCHING FAILED	5-74
1032 AUTO DOOR FAILED	5-75
1033 PANEL SETTING ERROR!	5-76
1034 SPINDLE TOOLS OVERLOAD!	5-77
1035 WORKPIECE PROBER ERROR!	5-78
1036 OIL AIR LUBE ERROR!	5-79
1037 DC24V POWER SUPPLY ERROR!	5-80
1046 WORKPIECE PROBE LOW BATTERY!	5-80

1049	APC DOOR OP / CL APC ARM TYPE(TYPE 3)	5-81
1049	APC DOOR OPEN / CLOSE FAIL! β6 TYPE(TYPE 4)	5-83
1050	TABLE CLAMP / UNCLAMP FAIL!	5-85
1051	APC Z AXIS NEED RETEN!	5-87
1054	APC SWAP TIME EXCEED!	5-88
1057	ATC NOT READY! (FOR SIMPLE DISK 20T)	5-89
1058	ATC DOOR NOT CLOSE! (FOR DCV 、FP)	5-92
1059	TOOL MEASURE COVERS NOT OPEN!	5-93
1060	JIG CW/CCW OVERTIME!	5-94
1061	M6 POT V ERROR !	5-95
1062	M6 ARM L.S ERROR!	5-97
1063	M6 SPINDLE UNCLAMP ERROR!	5-98
1064	M6 SPINDLE CLAMP ERROR!	5-99
1065	NONE TF COMMAND !	5-100
1900	PLEASE TURN OFF POWER !	5-100
E2.	EXTERNAL OPERATOR'S MESSAGE	5-92
2001	APC BASE NOT READY!	5-101
2002	GEAR MISSED FAIL!	5-101
2003	LUBE UNIT LEVEL TOO LOW!	5-102
2004	LUBE UNIT PRESSURE LOW!	5-103
2005	TOOL SEARCHING INTERRUPTED!	5-104
2006	APC SAFETY DOOR NOT READY!	5-105
2007	SPINDLE WARM UP PLEASE WAIT !	5-106
2008	PARTS COUNT ARRIVE!	5-107
2009	APC NOT READY COMFIRM!	5-108
2011	COOLANT LEVEL TOO LOW!	5-109
2012	SPINDLE RPM IS TOO LOW FOR WARM UP!	5-109
2013	TABLE BLAST FILTER OBSTRUCTION ERROR!	5-110
2015	ATC DOOR OPEN / CLOSE TIMEOUT! (FOR DCV 、FP)	5-111
2017	OIL LEVEL LOW!	5-112
2020	BASE LIQUID OVERFLOW!	5-113
2021	FILTER OBSTRUCTION B1-B2 !	5-114
2022	CTS OUT PRESSURE SWITCH!	5-115
2023	OUT FILTER OBSTRUCTION!	5-116
2024	CTS AUXILIARY LEVEL LOW!	5-117
F. P/S	ALARM AND OVER TRAVEL ALARMS	5-99

P / S alarms	5-99
Over travel alarm	5-116
H. TABLES OF CUTTING CONDITION	5-117
H1. Face Mill	5-117
H2. End Mill	5-118
H3. Boring Bar	5-119
H4. Drill	5-120
H5. Reamer	5-121
H6. Tap	5-122