


OSP7000L OSP700L

SPECIAL FUNCTIONS MANUAL (No.1)

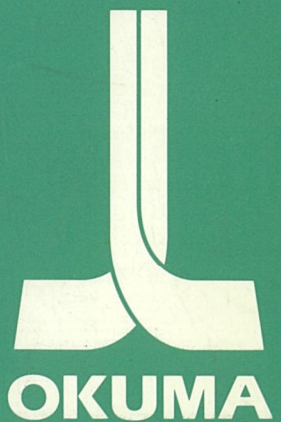

Publication No. 3815-E

OSP7000L **OSP700L**

SPECIAL FUNCTIONS MANUAL (NO. 1) **(1st Edition)**

Pub. No. 3815-E (LE51-021-R1) July 1994

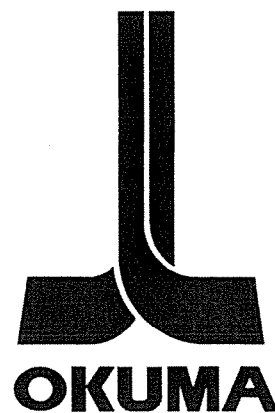


TABLE OF CONTENTS		<u>PAGE</u>
SECTION 1	LATHE AUTO-PROGRAMMING FUNCTION (LAP4)	1
1.	OVERVIEW	1
2.	CLASSIFICATION OF FUNCTIONS	2
2-1.	Classification of Cutting Cycle	2
2-2.	G Code Used to Designate Cutting Mode	2
2-3.	List of Cutting Mode	3
3.	PROGRAM FORMAT	8
3-1.	G Codes	8
3-2.	M Codes	8
3-3.	Parameters	9
3-4.	NC Parameter	9
4.	EXECUTION MODE OF LAP	10
4-1.	G85: Bar Turning Cycle	10
4-2.	G84: Change of Cutting Conditions in Bar Turning Cycle	11
4-3.	G86: Copy Turning Cycle	12
4-4.	G87: Finish Turning Cycle	13
4-5.	G88: Continuous Thread Cutting Cycle	14
5.	EXPLANATION OF LAP FUNCTIONS AND PROGRAM	15
5-1.	AP Mode I (Bar Turning)	15
5-2.	AP Mode II (Copy Turning)	24
5-3.	AP Mode III (Continuous Thread Cutting Cycle)	29
5-4.	AP Mode IV (High-speed Bar Turning Cycle)	44
5-5.	AP Mode V (Bar Copying Cycle)	59
6.	PRECAUTIONS	71
7.	APPLICATION OF LAP FUNCTION	75
8.	SYNCHRONOUS CODES FOR LAP	78
SECTION 2	USER TASK 2	82
1.	OVERVIEW	82
2.	TYPES OF USER TASK FUNCTION	84
2-1.	Relation between Types of Program Files and User Task Functions	84
3.	FUNDAMENTAL FUNCTIONS OF USER TASK	85
3-1.	Control Statement	86

	<u>PAGE</u>
3-2. Variables	97
3-3. Arithmetic Operation Function	111
3-4. Combination of Operations	113
4. PROGRAM EXAMPLES	114
5. SUPPLEMENTS	123
5-1. Sequence Return in Program Using User Task	123
5-2. Simultaneous 4-Axis Control Mode	123
5-3. Rules of Operation and Evaluation of Result	124
6. COMPARISON OF USER TASK 1 AND USER TASK 2	128
SECTION 3 inch/metric switchable	129
SECTION 4 tape punch interface function	131
1. OVERVIEW	131
2. SPECIFICATIONS	132
3. OPERATION PROCEDURE	133
4. PARAMETER SETTING	138
4-1. Setting of NC Optional Parameter (Bit)	138
4-2. Setting of NC Optional Parameter (Word)	143
5. RS232C PINS AND CORRESPONDING SIGNALS	145
6. SIGNAL DESCRIPTION	147
7. EXTERNAL DEVICE CONNECTION	149
8. DC CODE CONTROL	153
8-1. Transmission Codes	153
8-2. External Device Connection	154
9. SLAVE STATION FUNCTION	157
9-1. Connection Example with External Device in Slave Station Function	157
9-2. Connection Example with External Device in Slave Station Function (DC Code Control)	158
9-3. When OSPs are Linked Each Other Using the Slave Station Function	160
10. EIA SPECIAL CODES	161
10-1. Setting of EIA Special Characters	162
10-1-1. Input/Output of the Special EIA Codes	163
11. ERROR MESSAGES	165
12. RS232C INTERFACE CONNECTION	170

	<u>PAGE</u>
13. TROUBLESHOOTING FAILURES IN COMMUNICATION	199
13-1. Level of Failures	199
13-2. Phenomena	199
13-3. Causes of Failures and Measures to Take	201
13-4. OSP7000L	203
13-5. Communications Protocol	204
13-6. Link Between the OSP and a Personal Computer	204
SECTION 5 DNC-A	206
1. OVERVIEW	206
2. OPERATING PROCEDURES	207
2-1. Downloading an NC Program (File)	209
2-2. Uploading an NC Program (File)	210
3. SETTING UP NC OPTIONAL PARAMETERS	211
3-1. NC Optional Parameter (Bit) No. 2	211
3-2. NC Optional Parameter (Word) No. 46	211
3-3. NC Optional Parameter (Bit) No. 1	211
3-4. NC Optional Parameter (Bit) Nos. 12 – 15	211
3-5. RS232C Interface Parameters for CN0: (TT:) through CN3:	211
4. ERROR MESSAGES	212
5. SPECIFICATIONS	213
5-1. Data Formats	213
5-2. Example RS232C Interface Connections and Timing Charts	216
SECTION 6 OPERATION END LAMP/ALARM LAMP	224
1. OPERATION END LAMP	224
2. ALARM LAMP	224